



LG

Life's Good

North/Latin America
Europe/Africa
Asia/Oceania

Internal Use Only

<http://aic.lgservice.com>
<http://eic.lgservice.com>
<http://biz.lgservice.com>

LED LCD TV


SERVICE MANUAL

CHASSIS : LD0AY

MODEL : 26LV255H 26LV255H-ZA

CAUTION

BEFORE SERVICING THE CHASSIS,
READ THE SAFETY PRECAUTIONS IN THIS MANUAL.

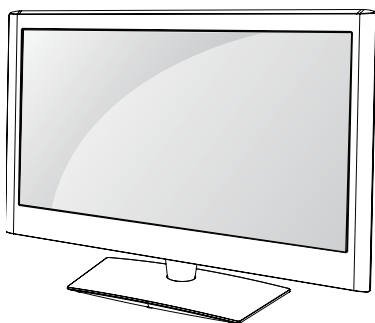

P/NO : MFL67180604 (1111-REV00)

Printed in Korea

CONTENTS

CONTENTS	2
PRODUCT SAFETY	3
SPECIFICATION	6
ADJUSTMENT INSTRUCTION	8
BLOCK DIAGRAM.....	14
EXPLODED VIEW	15
SCHEMATIC CIRCUIT DIAGRAM	

SAFETY PRECAUTIONS

IMPORTANT SAFETY NOTICE

Many electrical and mechanical parts in this chassis have special safety-related characteristics. These parts are identified by \triangle in the Schematic Diagram and Exploded View.

It is essential that these special safety parts should be replaced with the same components as recommended in this manual to prevent Shock, Fire, or other Hazards.

Do not modify the original design without permission of manufacturer.

General Guidance

An **isolation Transformer** should always be used during the servicing of a receiver whose chassis is not isolated from the AC power line. Use a transformer of adequate power rating as this protects the technician from accidents resulting in personal injury from electrical shocks.

It will also protect the receiver and its components from being damaged by accidental shorts of the circuitry that may be inadvertently introduced during the service operation.

If any fuse (or Fusible Resistor) in this TV receiver is blown, replace it with the specified.

When replacing a high wattage resistor (Oxide Metal Film Resistor, over 1 W), keep the resistor 10 mm away from PCB.

Keep wires away from high voltage or high temperature parts.

Before returning the receiver to the customer,

always perform an **AC leakage current check** on the exposed metallic parts of the cabinet, such as antennas, terminals, etc., to be sure the set is safe to operate without damage of electrical shock.

Leakage Current Cold Check(Antenna Cold Check)

With the instrument AC plug removed from AC source, connect an electrical jumper across the two AC plug prongs. Place the AC switch in the on position, connect one lead of ohm-meter to the AC plug prongs tied together and touch other ohm-meter lead in turn to each exposed metallic parts such as antenna terminals, phone jacks, etc.

If the exposed metallic part has a return path to the chassis, the measured resistance should be between 1 M Ω and 5.2 M Ω .

When the exposed metal has no return path to the chassis the reading must be infinite.

An other abnormality exists that must be corrected before the receiver is returned to the customer.

Leakage Current Hot Check (See below Figure)

Plug the AC cord directly into the AC outlet.

Do not use a line Isolation Transformer during this check.


Connect 1.5 K / 10 watt resistor in parallel with a 0.15 μ F capacitor between a known good earth ground (Water Pipe, Conduit, etc.) and the exposed metallic parts.

Measure the AC voltage across the resistor using AC voltmeter with 1000 ohms/volt or more sensitivity.

Reverse plug the AC cord into the AC outlet and repeat AC voltage measurements for each exposed metallic part. Any voltage measured must not exceed 0.75 volt RMS which corresponds to 0.5 mA.

In case any measurement is out of the limits specified, there is possibility of shock hazard and the set must be checked and repaired before it is returned to the customer.

Leakage Current Hot Check circuit

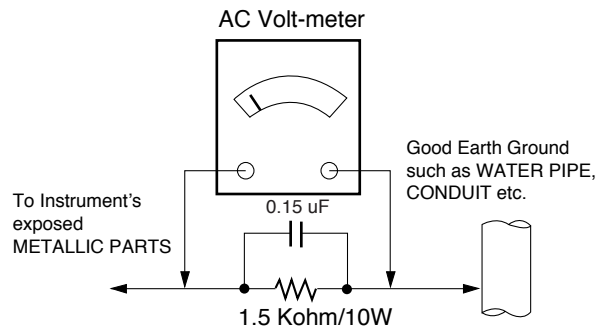

When 25A is impressed between Earth and 2nd Ground for 1 second, Resistance must be less than 0.1 Ω

*Base on Adjustment standard

SERVICING PRECAUTIONS

CAUTION: Before servicing receivers covered by this service manual and its supplements and addenda, read and follow the **SAFETY PRECAUTIONS** on page 3 of this publication.

NOTE: If unforeseen circumstances create conflict between the following servicing precautions and any of the safety precautions on page 3 of this publication, always follow the safety precautions. Remember: Safety First.

General Servicing Precautions

1. Always unplug the receiver AC power cord from the AC power source before;
 - a. Removing or reinstalling any component, circuit board module or any other receiver assembly.
 - b. Disconnecting or reconnecting any receiver electrical plug or other electrical connection.
 - c. Connecting a test substitute in parallel with an electrolytic capacitor in the receiver.

CAUTION: A wrong part substitution or incorrect polarity installation of electrolytic capacitors may result in an explosion hazard.

2. Test high voltage only by measuring it with an appropriate high voltage meter or other voltage measuring device (DVM, FETVOM, etc) equipped with a suitable high voltage probe. Do not test high voltage by "drawing an arc".
3. Do not spray chemicals on or near this receiver or any of its assemblies.
4. Unless specified otherwise in this service manual, clean electrical contacts only by applying the following mixture to the contacts with a pipe cleaner, cotton-tipped stick or comparable non-abrasive applicator; 10 % (by volume) Acetone and 90 % (by volume) isopropyl alcohol (90 % - 99 % strength)
5. Do not defeat any plug/socket B+ voltage interlocks with which receivers covered by this service manual might be equipped.
6. Do not apply AC power to this instrument and/or any of its electrical assemblies unless all solid-state device heat sinks are correctly installed.
7. Always connect the test receiver ground lead to the receiver chassis ground before connecting the test receiver positive lead.

Always remove the test receiver ground lead last.

8. Use with this receiver only the test fixtures specified in this service manual.

CAUTION: Do not connect the test fixture ground strap to any heat sink in this receiver.

Electrostatically Sensitive (ES) Devices

Some semiconductor (solid-state) devices can be damaged easily by static electricity. Such components commonly are called *Electrostatically Sensitive (ES) Devices*. Examples of typical ES devices are integrated circuits and some field-effect transistors and semiconductor "chip" components. The following techniques should be used to help reduce the incidence of component damage caused by static by static electricity.

1. Immediately before handling any semiconductor component or semiconductor-equipped assembly, drain off any electrostatic charge on your body by touching a known earth ground. Alternatively, obtain and wear a commercially available discharging wrist strap device, which should be removed to prevent potential shock reasons prior to applying power to the unit under test.

2. After removing an electrical assembly equipped with ES devices, place the assembly on a conductive surface such as aluminum foil, to prevent electrostatic charge buildup or exposure of the assembly.
3. Use only a grounded-tip soldering iron to solder or unsolder ES devices.
4. Use only an anti-static type solder removal device. Some solder removal devices not classified as "anti-static" can generate electrical charges sufficient to damage ES devices.
5. Do not use freon-propelled chemicals. These can generate electrical charges sufficient to damage ES devices.
6. Do not remove a replacement ES device from its protective package until immediately before you are ready to install it. (Most replacement ES devices are packaged with leads electrically shorted together by conductive foam, aluminum foil or comparable conductive material).
7. Immediately before removing the protective material from the leads of a replacement ES device, touch the protective material to the chassis or circuit assembly into which the device will be installed.
CAUTION: Be sure no power is applied to the chassis or circuit, and observe all other safety precautions.
8. Minimize bodily motions when handling unpackaged replacement ES devices. (Otherwise harmless motion such as the brushing together of your clothes fabric or the lifting of your foot from a carpeted floor can generate static electricity sufficient to damage an ES device.)

General Soldering Guidelines

1. Use a grounded-tip, low-wattage soldering iron and appropriate tip size and shape that will maintain tip temperature within the range or 500 °F to 600 °F.
2. Use an appropriate gauge of RMA resin-core solder composed of 60 parts tin/40 parts lead.
3. Keep the soldering iron tip clean and well tinned.
4. Thoroughly clean the surfaces to be soldered. Use a mall wire-bristle (0.5 inch, or 1.25 cm) brush with a metal handle. Do not use freon-propelled spray-on cleaners.
5. Use the following unsoldering technique
 - a. Allow the soldering iron tip to reach normal temperature. (500 °F to 600 °F)
 - b. Heat the component lead until the solder melts.
 - c. Quickly draw the melted solder with an anti-static, suction-type solder removal device or with solder braid.
CAUTION: Work quickly to avoid overheating the circuit board printed foil.
6. Use the following soldering technique.
 - a. Allow the soldering iron tip to reach a normal temperature (500 °F to 600 °F)
 - b. First, hold the soldering iron tip and solder the strand against the component lead until the solder melts.
 - c. Quickly move the soldering iron tip to the junction of the component lead and the printed circuit foil, and hold it there only until the solder flows onto and around both the component lead and the foil.
CAUTION: Work quickly to avoid overheating the circuit board printed foil.
 - d. Closely inspect the solder area and remove any excess or splashed solder with a small wire-bristle brush.

IC Remove/Replacement

Some chassis circuit boards have slotted holes (oblong) through which the IC leads are inserted and then bent flat against the circuit foil. When holes are the slotted type, the following technique should be used to remove and replace the IC. When working with boards using the familiar round hole, use the standard technique as outlined in paragraphs 5 and 6 above.

Removal

1. Desolder and straighten each IC lead in one operation by gently prying up on the lead with the soldering iron tip as the solder melts.
2. Draw away the melted solder with an anti-static suction-type solder removal device (or with solder braid) before removing the IC.

Replacement

1. Carefully insert the replacement IC in the circuit board.
2. Carefully bend each IC lead against the circuit foil pad and solder it.
3. Clean the soldered areas with a small wire-bristle brush. (It is not necessary to reapply acrylic coating to the areas).

"Small-Signal" Discrete Transistor

Removal/Replacement

1. Remove the defective transistor by clipping its leads as close as possible to the component body.
2. Bend into a "U" shape the end of each of three leads remaining on the circuit board.
3. Bend into a "U" shape the replacement transistor leads.
4. Connect the replacement transistor leads to the corresponding leads extending from the circuit board and crimp the "U" with long nose pliers to insure metal to metal contact then solder each connection.

Power Output, Transistor Device

Removal/Replacement

1. Heat and remove all solder from around the transistor leads.
2. Remove the heat sink mounting screw (if so equipped).
3. Carefully remove the transistor from the heat sink of the circuit board.
4. Insert new transistor in the circuit board.
5. Solder each transistor lead, and clip off excess lead.
6. Replace heat sink.

Diode Removal/Replacement

1. Remove defective diode by clipping its leads as close as possible to diode body.
2. Bend the two remaining leads perpendicular y to the circuit board.
3. Observing diode polarity, wrap each lead of the new diode around the corresponding lead on the circuit board.
4. Securely crimp each connection and solder it.
5. Inspect (on the circuit board copper side) the solder joints of the two "original" leads. If they are not shiny, reheat them and if necessary, apply additional solder.

Fuse and Conventional Resistor

Removal/Replacement

1. Clip each fuse or resistor lead at top of the circuit board hollow stake.
2. Securely crimp the leads of replacement component around notch at stake top.
3. Solder the connections.
CAUTION: Maintain original spacing between the replaced component and adjacent components and the circuit board to prevent excessive component temperatures.

Circuit Board Foil Repair

Excessive heat applied to the copper foil of any printed circuit board will weaken the adhesive that bonds the foil to the circuit board causing the foil to separate from or "lift-off" the board. The following guidelines and procedures should be followed whenever this condition is encountered.

At IC Connections

To repair a defective copper pattern at IC connections use the following procedure to install a jumper wire on the copper pattern side of the circuit board. (Use this technique only on IC connections).

1. Carefully remove the damaged copper pattern with a sharp knife. (Remove only as much copper as absolutely necessary).
2. Carefully scratch away the solder resist and acrylic coating (if used) from the end of the remaining copper pattern.
3. Bend a small "U" in one end of a small gauge jumper wire and carefully crimp it around the IC pin. Solder the IC connection.
4. Route the jumper wire along the path of the out-away copper pattern and let it overlap the previously scraped end of the good copper pattern. Solder the overlapped area and clip off any excess jumper wire.

At Other Connections

Use the following technique to repair the defective copper pattern at connections other than IC Pins. This technique involves the installation of a jumper wire on the component side of the circuit board.

1. Remove the defective copper pattern with a sharp knife. Remove at least 1/4 inch of copper, to ensure that a hazardous condition will not exist if the jumper wire opens.
2. Trace along the copper pattern from both sides of the pattern break and locate the nearest component that is directly connected to the affected copper pattern.
3. Connect insulated 20-gauge jumper wire from the lead of the nearest component on one side of the pattern break to the lead of the nearest component on the other side. Carefully crimp and solder the connections.
CAUTION: Be sure the insulated jumper wire is dressed so the it does not touch components or sharp edges.

SPECIFICATION

NOTE : Specifications and others are subject to change without notice for improvement.

1. Application range

This specification is applied to the LCD TV used LD0AY chassis.

2. Requirement for Test

Each part is tested as below without special appointment.

- 1) Temperature: 25 °C ± 5 °C(77 °F ± 9 °F), CST: 40 °C ± 5 °C
- 2) Relative Humidity : 65 % ± 10 %
- 3) Power Voltage
: Standard input voltage(AC 100-240 V~, 50 / 60 Hz)
* Standard Voltage of each products is marked by models.
- 4) Specification and performance of each parts are followed each drawing and specification by part number in accordance with BOM.
- 5) The receiver must be operated for about 5 minutes prior to the adjustment.

3. Test method

- 1) Performance: LGE TV test method followed
- 2) Demanded other specification
 - Safety: CE, IEC specification
 - EMC:CE, IEC

4. Component Video Input (Y, Pb, Pr)

No.	Specification				Remark
	Resolution	H-freq(kHz)	V-freq(Hz)		
1.	720x480	15.73	60.00	SDTV,DVD 480i	
2.	720x480	15.63	59.94	SDTV,DVD 480i	
3.	720x480	31.47	59.94	480p	
4.	720x480	31.50	60.00	480p	
5.	720x576	15.625	50.00	SDTV,DVD 625 Line	
6.	720x576	31.25	50.00	HDTV 576p	
7.	1280x720	45.00	50.00	HDTV 720p	
8.	1280x720	44.96	59.94	HDTV 720p	
9.	1280x720	45.00	60.00	HDTV 720p	
10.	1920x1080	31.25	50.00	HDTV 1080i	
11.	1920x1080	33.75	60.00	HDTV 1080i	
12.	1920x1080	33.72	59.94	HDTV 1080i	
13.	1920x1080	56.250	50	HDTV 1080p	
14.	1920x1080	67.5	60	HDTV 1080p	

5. RGB Input (PC)

No.	Specification				Proposed	Remark
	Resolution	H-freq(kHz)	V-freq(Hz)	Pixel Clock(MHz)		
1.	720*400	31.468	70.08	28.321		For only DOS mode
2.	640*480	31.469	59.94	25.17	VESA	Input 848*480 60 Hz, 852*480 60 Hz -> 640*480 60 Hz Display
3.	800*600	37.879	60.31	40.00	VESA	
4.	1024*768	48.363	60.00	65.00	VESA(XGA)	
5.	1280*768	47.78	59.87	79.5	WXGA	
6.	1360*768	47.72	59.8	84.75	WXGA	HD Model
7.	1366*768	47.56	59.6	84.75	WXGA	WXGA Model1
8.	1280*1024	63.981	60.02	108.875	SXGA	FHD model
9.	1280*720	45	60	74.25	720p	DTV Standard
10.	1920*1080	67.5	60	148.5	WUXGA	FHD model

6. HDMI Input

(1) DTV Mode

No.	Resolution	H-freq(kHz)	V-freq.(Hz)	Pixel clock(MHz)	Proposed	Remark
1.	720*480	31.469 / 31.5	59.94 / 60	27.00 / 27.03	SDTV 480P	
2.	720*576	31.25	50	54	SDTV 576P	
3.	1280*720	37.500	50	74.25	HDTV 720P	
4.	1280*720	44.96 / 45	59.94 / 60	74.17 / 74.25	HDTV 720P	
5.	1920*1080	33.72 / 33.75	59.94 / 60	74.17 / 74.25	HDTV 1080I	
6.	1920*1080	28.125	50.00	74.25	HDTV 1080I	
7.	1920*1080	26.97 / 27	23.97 / 24	74.17 / 74.25	HDTV 1080P	
8.	1920*1080	33.716 / 33.75	29.976 / 30.00	74.25	HDTV 1080P	
9.	1920*1080	56.250	50	148.5	HDTV 1080P	
10.	1920*1080	67.43 / 67.5	59.94 / 60	148.35 / 148.50	HDTV 1080P	

(2) PC Mode

No.	Resolution	H-freq(kHz)	V-freq.(Hz)	Pixel clock(MHz)	Proposed	Remark
1.	720*400	31.468	70.08	28.321		HDCP
2.	640*480	31.469	59.94	25.17	VESA	HDCP
3.	800*600	37.879	60.31	40.00	VESA	HDCP
4.	1024*768	48.363	60.00	65.00	VESA(XGA)	HDCP
5.	1280*768	47.78	59.87	79.5	WXGA	HDCP
6.	1360*768	47.72	59.8	84.75	WXGA	HDCP
7.	1280*720	45	60	74.25		HDCP
8.	1280*1024	63.981	60.2	108.875	SXGA	HDCP / FHD model
9.	1920*1080	67.5	60	148.5	WUXGA	HDCP / FHD model

ADJUSTMENT INSTRUCTION

1. Application Range

This specification sheet is applied to all of the LCD TV with LD0AY chassis.

2. Designation

- 1) The adjustment is according to the order which is designated and which must be followed, according to the plan which can be changed only on agreeing.
- 2) Power Adjustment: Free Voltage
- 3) Magnetic Field Condition: Nil.
- 4) Input signal Unit: Product Specification Standard
- 5) Reserve after operation: Above 5 Minutes (Heat Run)
Temperature : at 25 °C ± 5 °C
Relative humidity : 65 % ± 10 %
Input voltage : 220 V, 60 Hz
- 6) Adjustment equipments: Color analyzer(CA-210 or CA-110), DDC Adjustment Jig equipment, Service remote control.
- 7) Push the "IN STOP" key - For memory initialization.

Case1 : Software version up

1. After downloading S/W by USB, TV set will reboot automatically.
2. Push "In-stop" key.
3. Push "Power on" key.
4. Function inspection
5. After function inspection, Push "In-stop" key.

Case2 : Function check at the assembly line



1. When TV set is entering on the assembly line, Push "In-stop" key at first.
2. Push "Power on" key for turning it on.
-> If you push "Power on" key, TV set will recover channel information by itself.
3. After function inspection, Push "In-stop" key.

3. Main PCB check process


* APC - After Manual-Insult, executing APC

* Boot file Download

- 1) Execute ISP program "Mstar ISP Utility" and then click "Config" tab.

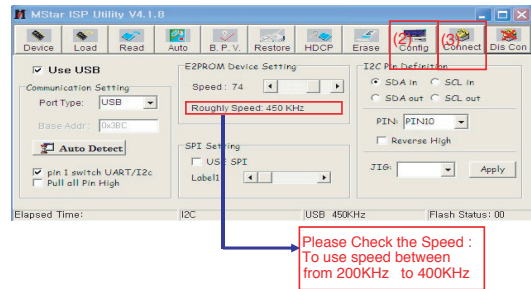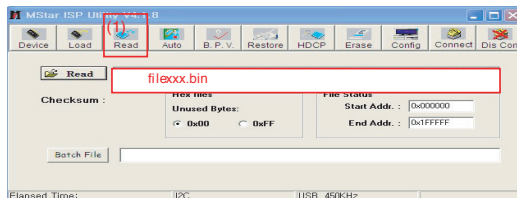


- 5) Click "Auto" tab and set as below.
- 6) Click "Run".
- 7) After downloading, check "OK" message.

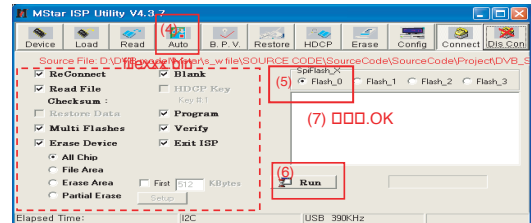


* USB DOWNLOAD

- 1) Put the USB Stick to the USB socket.
- 2) Automatically detecting update file in USB Stick.
- If your downloaded program version in USB Stick is Low, it didn't work. But your downloaded version is High, USB data is automatically detecting.
- 3) Show the message "Copying files from memory".

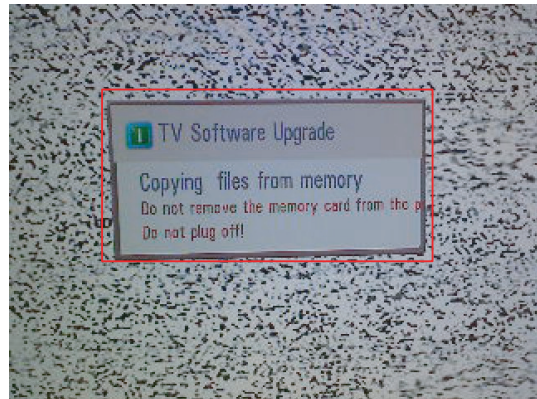

- 2) Set as below, and then click "Auto Detect" and check "OK" message. If "Error" is displayed, Check connection between computer, jig, and set.
- 3) Click "Read" tab, and then load download file(XXXX.bin) by clicking "Read".
- 4) Click "Connect" tab. If "Can't" is displayed, check connection between computer, jig, and set.

4) Updating is starting.

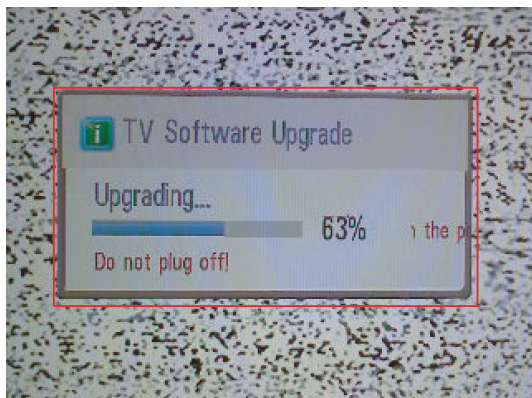

- 5) Uploading completed, the TV will restart automatically.
 6) If your TV is turned on, check your updated version and Tool option.(explain the Tool option, next stage)
 * If downloading version is more high than your TV have, TV can lost all channel data. In this case, you have to channel recover. if all channel data is cleared, you didn't have a DTV/ATV test on production line.


*** After downloading, have to adjust Tool Option again.**

- 1) Push "IN-START" key in service remote control.
- 2) Select "Tool Option 1" and push "OK" key.
- 3) Punch in the number. (Each model has their number)

3.1. ADC Process

(1) ADC

- Enter Service Mode by pushing "ADJ" key,
- Enter Internal ADC mode by pushing "▶" key at "7. ADC Calibration".

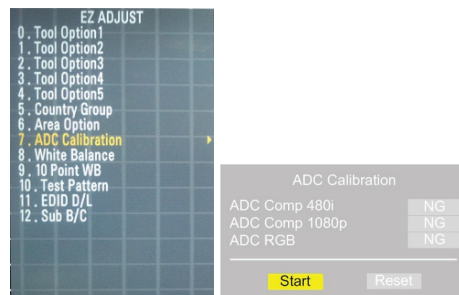

<Caution> Using 'power on' key of the Adjustment remote control, power on TV.

*** ADC Calibration Protocol (RS232)**

No	Item	CMD1	CMD2	Data0	
Enter Adjust Mode	Adjust 'Mode In'	A	A	0 0	When transfer the 'Mode In', Carry the command.
ADC adjust	ADC Adjust	A	D	1 0	Automatically adjustment (The use of a internal pattern)

Adjust Sequence

- aa 00 00 [Enter Adjust Mode]
- xb 00 40 [Component1 Input (480i)]
- ad 00 10 [Adjust 480i Comp1]
- xb 00 60 [RGB Input (1024*768)]
- ad 00 10 [Adjust 1024*768 RGB]
- aa 00 90 End Adjust mode
- * Required equipment : Adjustment remote control.

3.2. Function Check

- * Check display and sound
- Check Input and Signal items. (cf. work instructions)
 - 1) TV
 - 2) AV (SCART)
 - 3) COMPONENT (480i)
 - 4) RGB (PC : 1024 x 768 @ 60 Hz)
 - 5) HDMI
 - 6) PC Audio In
- * Display and Sound check is executed by Remote control.

4. Total Assembly line process

4.1. Adjustment Preparation


- W/B Equipment condition
CA210
- CCFL/EEFL -> CH 9, Test signal : Inner pattern(85 IRE)
- LED(AUO) -> CH 14, Test signal : Inner pattern(80 IRE)
- Above 5 minutes H/run in the inner pattern. ("power on" key of adjustment remote control)

Cool	13,000	K	X=0.269(±0.002)	<Test Signal> Inner pattern (216gray,85IRE)
			Y=0.273(±0.002)	
Medium	9,300	K	X=0.285(±0.002)	
			Y=0.293(±0.002)	
Warm	6,500	K	X=0.313(±0.002)	
			Y=0.329(±0.002)	

- Edge LED W/B Table in process of time(Only LGD module)
CA210 : CH14, Test signal : Inner patter (80 IRE)

GP2	Aging Time (Min.)	Cool		Medium		Warm	
		X	Y	X	Y	X	Y
		269	273	285	293	313	329
1	0-2	279	288	295	308	319	338
2	3-5	278	286	294	306	318	336
3	6-9	277	285	293	305	317	335
4	10-19	276	283	292	303	316	333
5	20-35	274	280	290	300	314	330
6	36-49	272	277	288	297	312	327
7	50-79	271	275	287	295	311	325
8	80-149	270	274	286	294	310	324
9	Over 150	269	273	285	293	309	323

- Connecting picture of the measuring instrument
(On Automatic control)
Inside PATTERN is used when W/B is controlled. Connect to auto controller or push Adjustment remote control POWER ON -> Enter the mode of White-Balance, the pattern will come out.

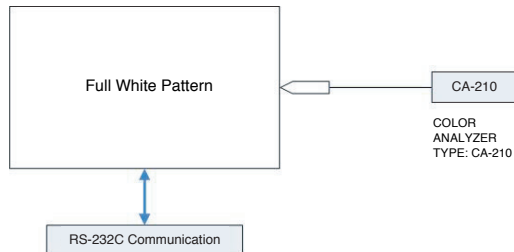

- Auto-control interface and directions
 - Adjust in the place where the influx of light like floodlight around is blocked. (illumination is less than 10 lux.)
 - Adhere closely the Color Analyzer (CA210) to the module less than 10 cm distance, keep it with the surface of the Module and Color Analyzer's probe vertically.(80° ~ 100°).
 - Aging time
 - After aging start, keep the power on (no suspension of power supply) and heat-run over 5 minutes.
 - Using 'no signal' or 'full white pattern' or the others, check the back light on.

- Auto adjustment Map(RS-232C)
RS-232C COMMAND
[CMD ID DATA]
Wb 00 00 White Balance Start
Wb 00 ff White Balance End


	RS-232C COMMAND [CMD ID DATA]			MIN	CENTER (DEFAULT)			MAX
	Cool	Mid	Warm			Cool	Mid	
R Gain	jg	Ja	jd	00	172	192	192	192
G Gain	jh	Jb	je	00	172	192	192	192
B Gain	ji	Jc	jf	00	192	192	172	192
R Cut					64	64	64	128
G Cut					64	64	64	128
B Cut					64	64	64	128

** Caution **

Color Temperature : COOL, Medium, Warm.

One of R Gain/G Gain/ B Gain should be kept on 0xC0, and adjust other two lower than C0.
(when R/G/B Gain are all C0, it is the FULL Dynamic Range of Module.)

- Manual W/B process using adjusts Remote control.
 - After enter Service Mode by pushing "ADJ" key,
 - Enter White Balance by pushing "►" key at "8. White Balance".

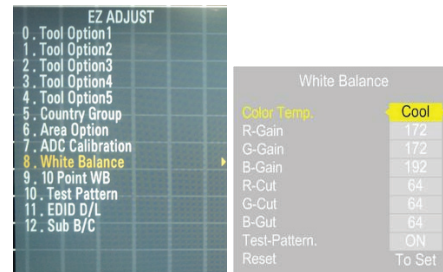

- After done all adjustments, Press "In-start" button and compare Tool option and Area option value with its BOM, if it is correctly same then unplug the AC cable. If it is not same, then correct it same with BOM and unplug AC cable. For correct it to the model's module from factory Jig model.
- Push the "IN STOP" key after completing the function inspection. And Mechanical Power Switch must be set "ON".

4.2. DDC EDID Write (RGB 128Byte)

- Connect D-sub Signal Cable to D-sub Jack.
- Write EDID Data to EEPROM(24C02) by using DDC2B protocol.
- Check whether written EDID data is correct or not.
- For Service main Assembly, EDID have to be downloaded to Insert Process in advance.

4.3. DDC EDID Write (HDMI 256Byte)

- Connect HDMI Signal Cable to HDMI Jack.
- Write EDID Data to EEPROM(24C02) by using DDC2B protocol.
- Check whether written EDID data is correct or not.
- For Service main Assembly, EDID have to be downloaded to Insert Process in advance.

4.4. EDID DATA

- 1) All Data : HEXA Value
- 2) Changeable Data :
 - *: Serial No : Controlled / Data:01
 - ** : Month : Controlled / Data:00
 - ***: Year : Controlled
 - ****: Check sum

- Auto Download

- After enter Service Mode by pushing “ADJ” key,
- Enter EDID D/L mode.
- Enter “START” by pushing “OK” key.



<Caution> Never connect HDMI & D-sub cable when EDID download




* Edid data and Model option download (RS232)

NO	Item	CMD1	CMD2	Data0	
Enter download Mode	Download 'Mode In'	A	A	0 0	When transfer the 'Mode In', Carry the command.
EDID data and Model option download	Download	A	E	00 10	Automatically Download (The use of a internal pattern)

- Manual Download

* Caution

- 1) Use the proper signal cable for EDID Download.
 - Analog EDID : Pin3 exists
 - Digital EDID : Pin3 exists
- 2) Never connect HDMI & D-sub Cable at the same time.
- 3) Use the proper cables below for EDID Writing.
- 4) Download HDMI1, HDMI2, separately because HDMI1 is different from HDMI2.

For Analog EDID	For HDMI EDID
D-sub to D-sub	DVI-D to HDMI or HDMI to HDMI
	 

Item	Condition	Data(Hex)
Manufacturer ID	GSM	1E6D
Version	Digital : 1	01
Revision	Digital : 3	03

1) FHD RGB EDID data

	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
00	00	FF	FF	FF	FF	FF	FF	00	1E	6D	a			b		
10	c	01	03	68	10	09	78	0A	EE	91	A3	54	4C	99	26	
20	0F	50	54	A1	08	00	81	C0	61	40	45	40	31	40	01	01
30	01	01	01	01	01	01	1B	21	50	A0	51	00	1E	30	48	88
40	35	00	A0	5A	00	00	00	1C	01	1D	00	72	51	D0	1E	20
50	6E	28	55	00	A0	5A	00	00	00	1E	00	00	00	FD	00	3A
60	3E	1F	46	10	00	0A	20	20	20	20	20			d		
70															00	e
80	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF
90	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF
A0	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF
B0	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF
C0	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF
D0	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF
E0	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF
F0	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF	FF

2)HD HDMI EDID data

	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
00	00	FF	FF	FF	FF	FF	FF	00	1E	6D	a			b		
10	c	01	03	80	10	09	78	0A	EE	91	A3	54	4C	99	26	
20	0F	50	54	A1	08	00	81	C0	61	40	45	40	31	40	01	01
30	01	01	01	01	01	01	1B	21	50	A0	51	00	1E	30	48	88
40	35	00	A0	5A	00	00	00	1C	01	1D	00	72	51	D0	1E	20
50	6E	28	55	00	A0	5A	00	00	00	1E	00	00	00	FD	00	3A
60	3E	1F	46	10	00	0A	20	20	20	20	20			d		
70															01	e
80	02	03	20	F1	4E	10	1F	84	13	05	14	03	02	12	20	21
90	22	15	01	26	15	07	50	09	57	07				f		
A0	f	80	18	71	1C	16	20	58	2C	25	00	A0	5A	00	00	
B0	00	9E	01	1D	00	80	51	D0	0C	20	40	80	35	00	A0	5A
C0	00	00	00	1E	8C	0A	D0	8A	20	E0	2D	10	10	3E	96	00
D0	A0	5A	00	00	00	18	02	3A	80	18	71	38	2D	40	58	2C
E0	45	00	A0	5A	00	00	00	1E	01	1D	80	D0	72	1C	16	20
F0	10	2C	25	80	A0	5A	00	00	00	9E	00	00	00	00	00	e

* Detail EDID Options are below

Product ID

Model Name	HEX	EDID Table	DDC Function
HD Model	0000	00 00	Analog/Digital

Serial No: Controlled on production line.

Month, Year: Controlled on production line:

ex) Monthly : '02' -> '02'

Year : '2009' -> '13'

Model Name(Hex):

MODEL	MODEL NAME(HEX)
LG TV	00 00 00 FC 00 4C 47 20 54 56 0A 20 20 20 20 20 20

Checksum: Changeable by total EDID data.


EDID C/S data		HD	
Check sum (Hex)	Block 0	HDMI	RGB
	Block 1	B4	CD
		65(HDMI1)	
		55(HDMI2)	
		45(HDMI3)	

Vendor Specific(HDMI)

INPUT	MODEL NAME(HEX)
HDMI1	65030C001000
HDMI2	65030C002000
HDMI3	65030C003000

4.5. V-COM Adjust(Only LGD(M+S) Module)

- Why need Vcom adjustment?
- The Vcom (Common Voltage) is a Reference Voltage of Liquid Crystal Driving.
- > Liquid Crystal need for Polarity Change with every frame.

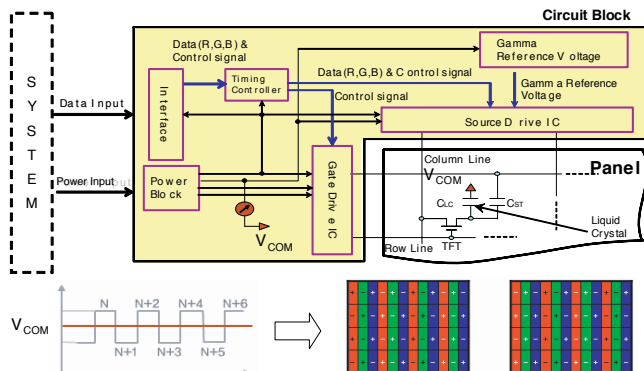

- Adjust sequence
- Press the PIP key of the Adjustment remote control.(This PIP key is hot key to enter the VCOM adjusting mode.)
(Or After enter Service Mode by pushing “ADJ” key, then Enter V-Com Adjust mode by pushing “▶” key at “10. V-Com”)
- As pushing the right or the left key on the remote control, and find the V-COM value which is no or minimized the Flicker. (If there is no flicker at default value, Press the exit key and finish the VCOM adjustment.)
- Push the “OK” key to store value. Then the message “Saving OK” is pop.
- Press the exit key to finish VCOM adjustment.



(Visual Adjust and control the Voltage level)

4.6. Outgoing condition Configuration


- When pressing IN-STOP key by Service remote control, Red LED are blinked alternatively. And then automatically turn off. (Must not AC power OFF during blinking)

4.7. Hi-pot test

Confirm whether is normal or not when between power board's ac block and GND is impacted on 1.5 kV(dc) or 2.2 kV(dc) for one second.

5. Model name & Serial number D/L

- Press “Power on” key of service remote control.
(Baud rate : 115200 bps)
- Connect RS232 Signal Cable to RS-232 Jack.
- Write Serial number by use RS-232.
- Must check the serial number at the Diagnostics of SET UP menu. (Refer to below.)

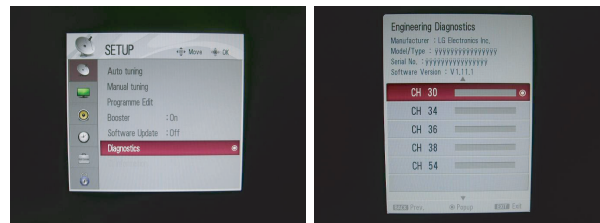

5.1. Signal TABLE

CMD	LENGTH	ADH	ADL	DATA_1	...	Data_n	CS	DELAY
-----	--------	-----	-----	--------	-----	--------	----	-------

CMD : A0h
 LENGTH : 85~94h (1~16 bytes)
 ADH : EEPROM Sub Address high (00~1F)
 ADL : EEPROM Sub Address low (00~FF)
 Data : Write data
 CS : CMD+LENGTH+ADH+ADL+Data_1+...+Data_n
 Delay : 20ms

5.2. Command Set

No.	Adjust mode	CMD(hex)	LENGTH(hex)	Description
1	EEPROM WRITE	A0h	84h+n	n-bytes Write(n=1~16)


* Description
 FOS Default write : <7mode data> write
 Vtotal, V_Frequency, Sync_Polarity, Htotal, Hstart, Vstart, 0, Phase
 Data write: Model name and Serial number write in EEPROM,.

5.3. Method & notice


- Serial number D/L is using of scan equipment.
- Setting of scan equipment operated by Manufacturing Technology Group.
- Serial number D/L must be conformed when it is produced in production line, because serial number D/L is mandatory by D-book 4.0.

* Manual Download (Model Name and Serial Number)
If the TV set is downloaded by OTA or Service man, sometimes model name or serial number is initialized.(Not always)
There is impossible to download by bar code scan, so It need Manual download.

- 1) Press the 'Instart' key of Adjustment remote control.
- 2) Go to the menu '5.Model Number D/L' like below photo.
- 3) Input the Factory model name(ex 42LD450-ZA) or Serial number like photo.

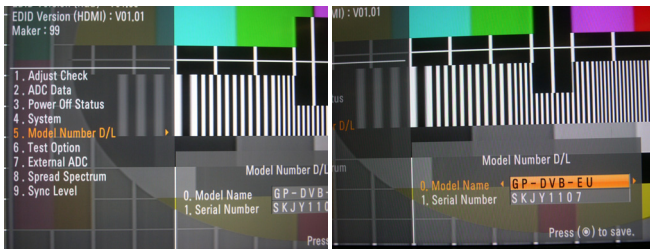

- 4) Check the model name Instart menu. -> Factory name displayed. (ex 42LD450-ZA)
- 5) Check the Diagnostics. (DTV country only) -> Buyer model displayed. (ex 42LD450)

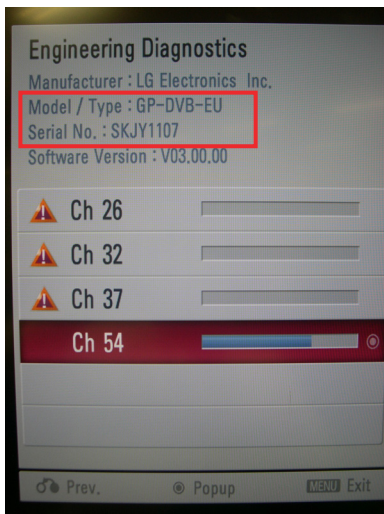

6. CI+ Key Download method

(1) Download Procedure

- 1) Press "Power on" key of a service remote control.
(Baud rate : 115200 bps)
- 2) Connect RS232-C Signal Cable.
- 3) Write CI+ Key through RS-232-C.
- 4) Check whether the key was downloaded or not at 'In Start' menu.(Refer to below).



=> Check the Download to CI+ Key value in LGset.

1. Check the method of CI+ Key value.
 - a. Check the method on Instart menu.
 - b. Check the method of RS232C Command.

- 1) Into the main assembly mode (RS232 : aa 00 00)

CMD 1	CMD 2	Data 0
A	A	0 0

- 2) Check the key download for transmitted command.
(RS232 : ci 00 10)

CMD 1	CMD 2	Data 0
C	I	1 0

- 3) Result value

- Normally status for download : OKx
- Abnormally status for download : NGx

2. Check the method of CI+ Key value. (RS232)

- 1) Into the main assembly mode (RS232 : aa 00 00)

CMD 1	CMD 2	Data 0
A	A	0 0

- 2) Check the method of CI+ key by command.
(RS232 : ci 00 20)


CMD 1	CMD 2	Data 0
C	I	2 0

- 3) Result value

i 01 OK 1d1852d21c1ed5dcx

➔ CI+ key Value


BLOCK DIAGRAM











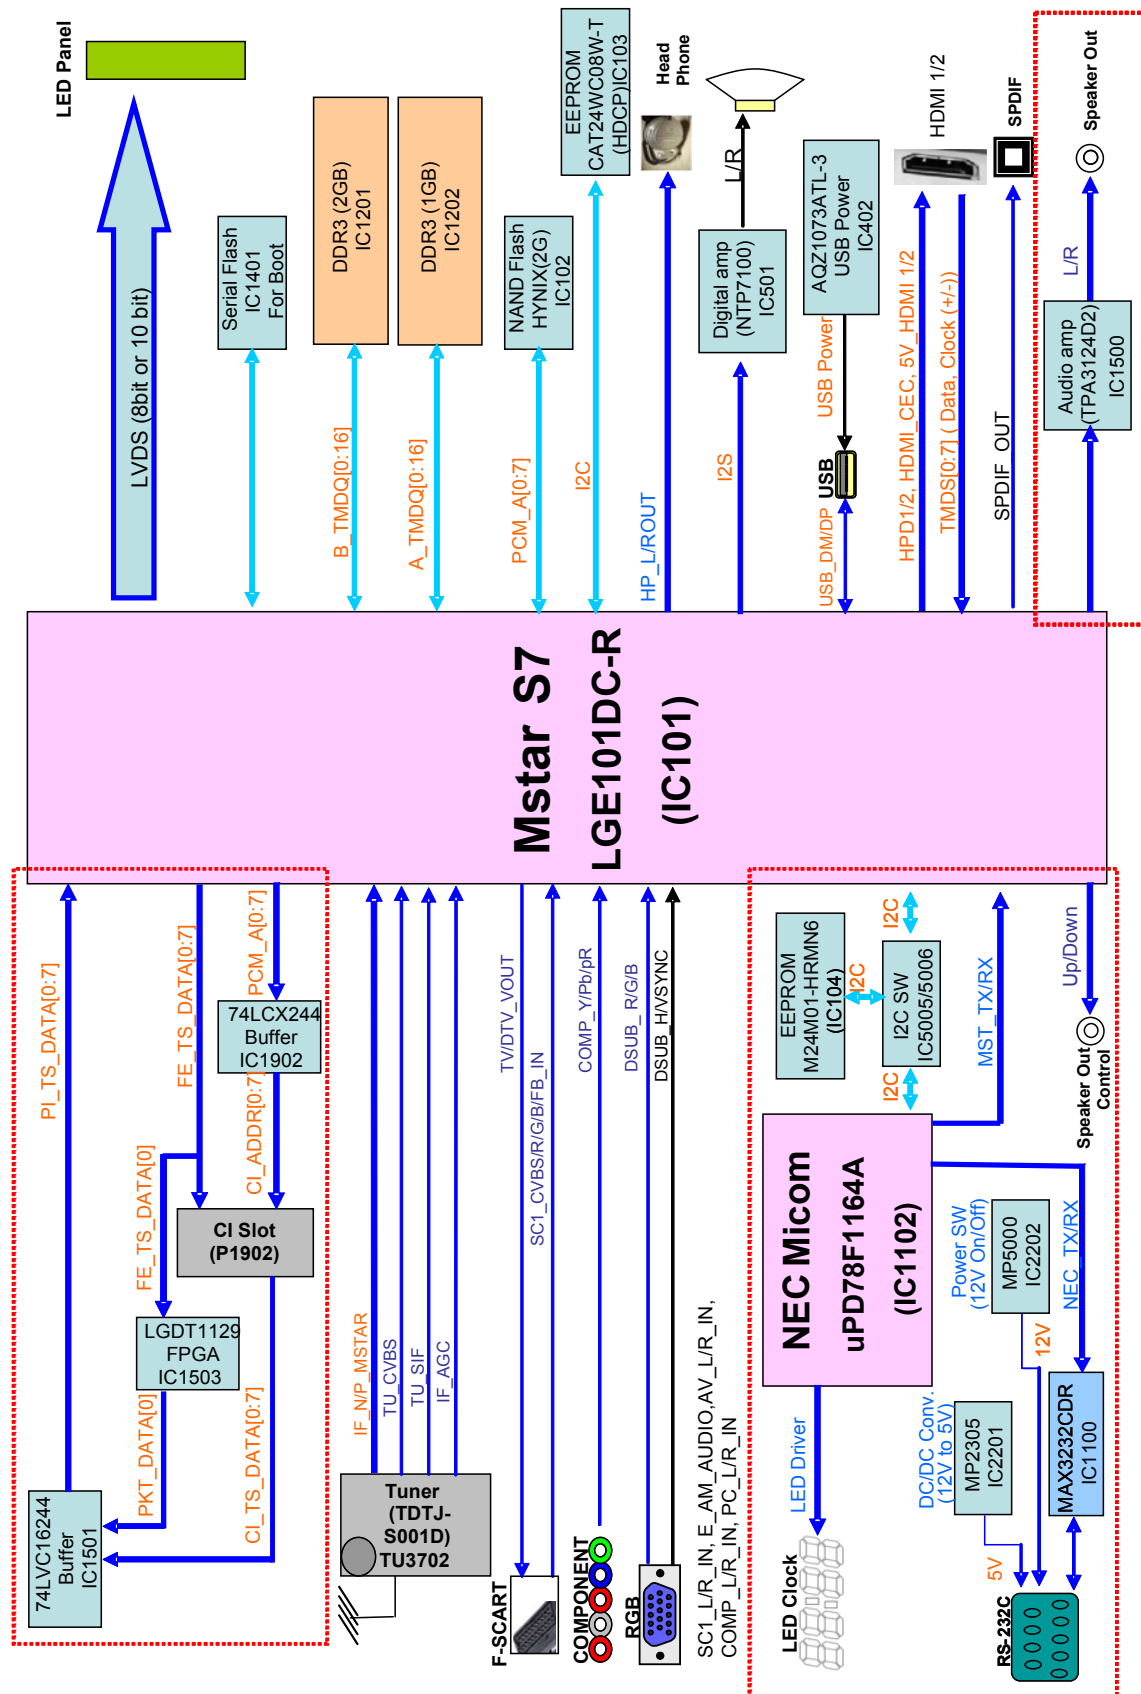


EXPLODED VIEW

IMPORTANT SAFETY NOTICE

Many electrical and mechanical parts in this chassis have special safety-related characteristics. These parts are identified by Δ in the Schematic Diagram and EXPLODED VIEW. It is essential that these special safety parts should be replaced with the same components as recommended in this manual to prevent X-RADIATION, Shock, Fire, or other Hazards. Do not modify the original design without permission of manufacturer.

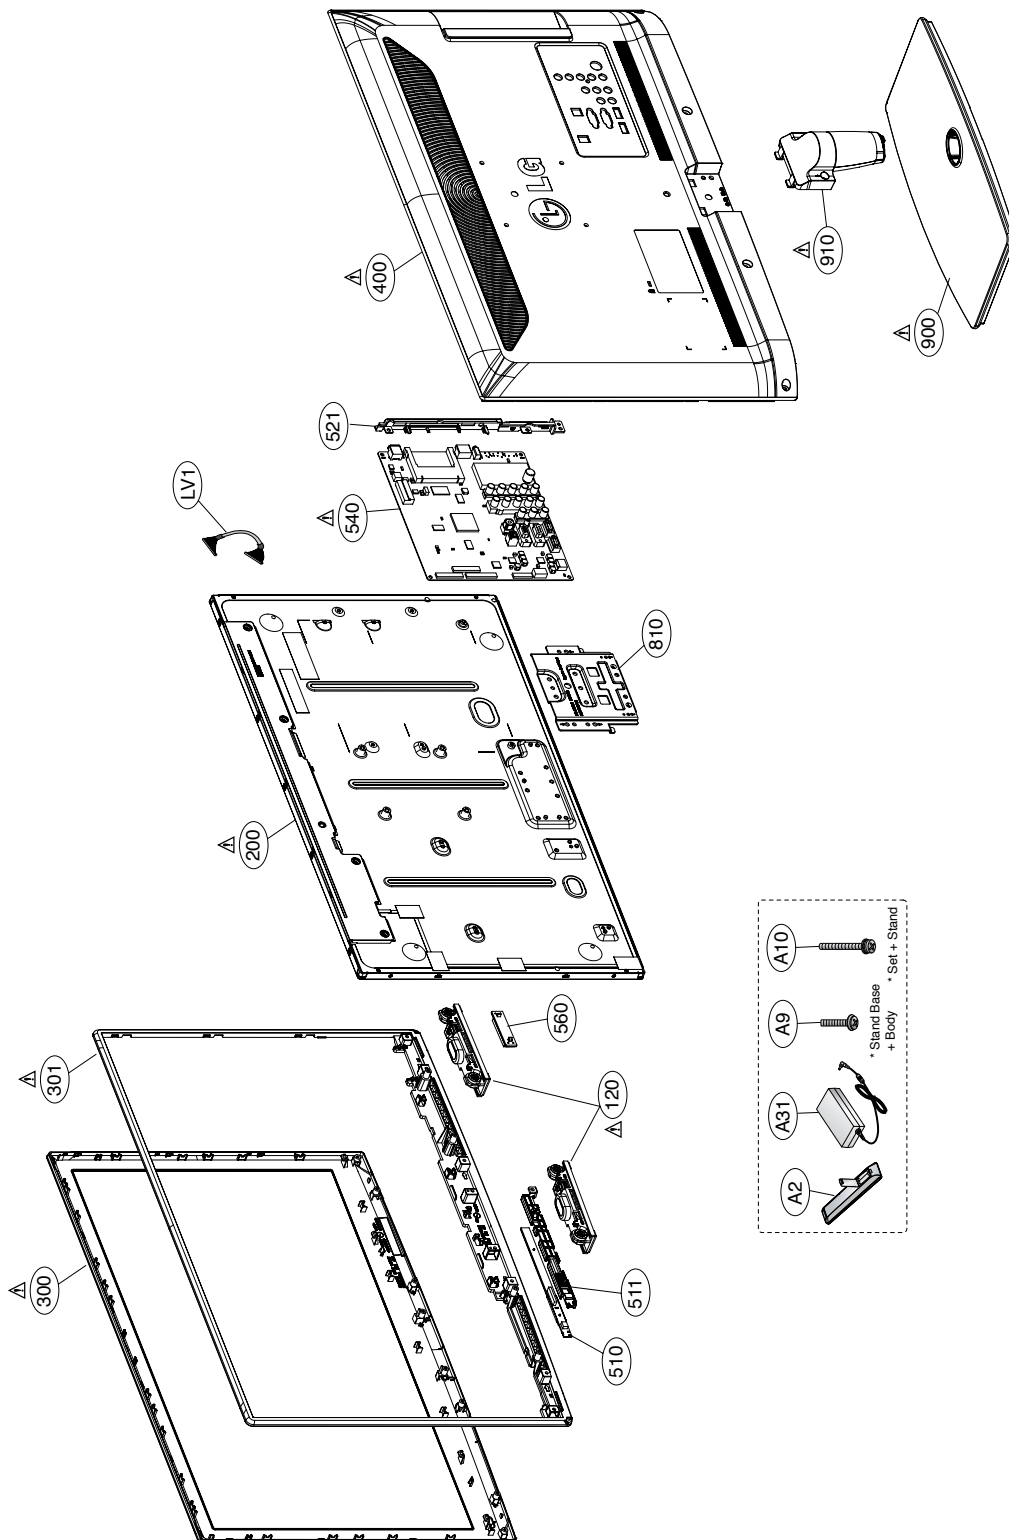


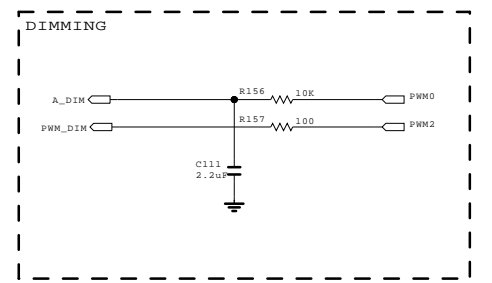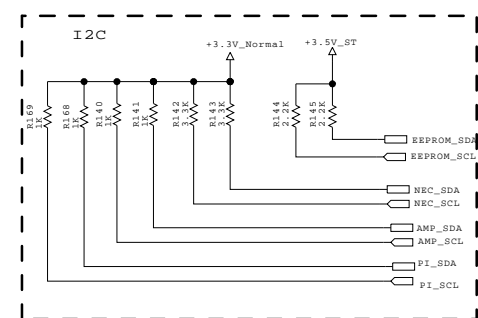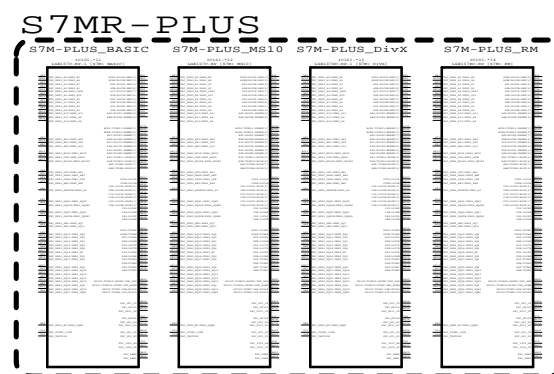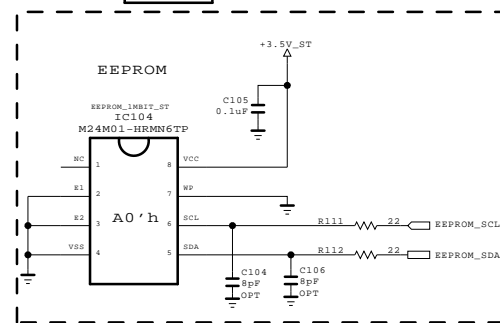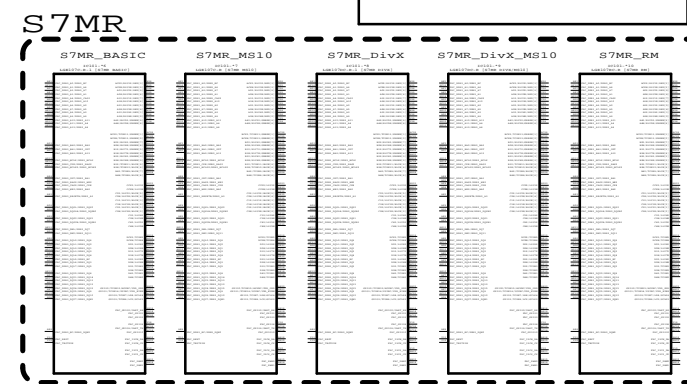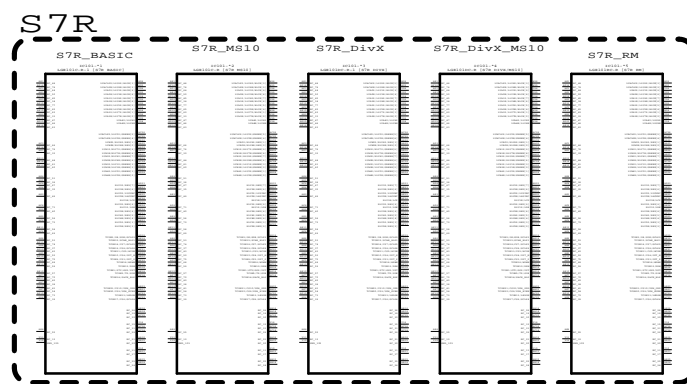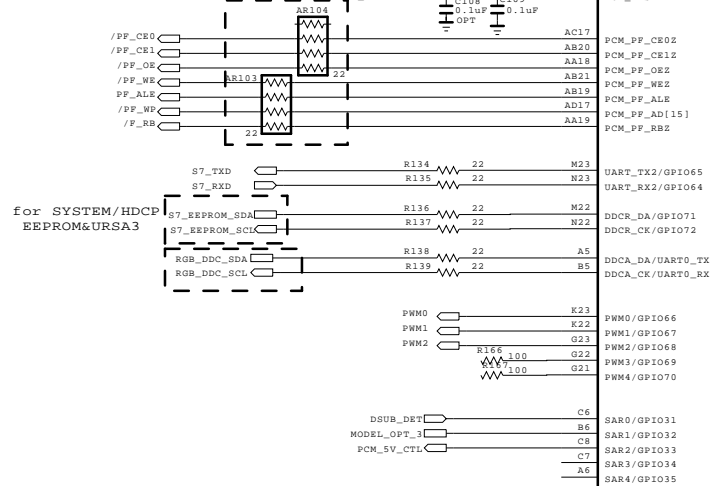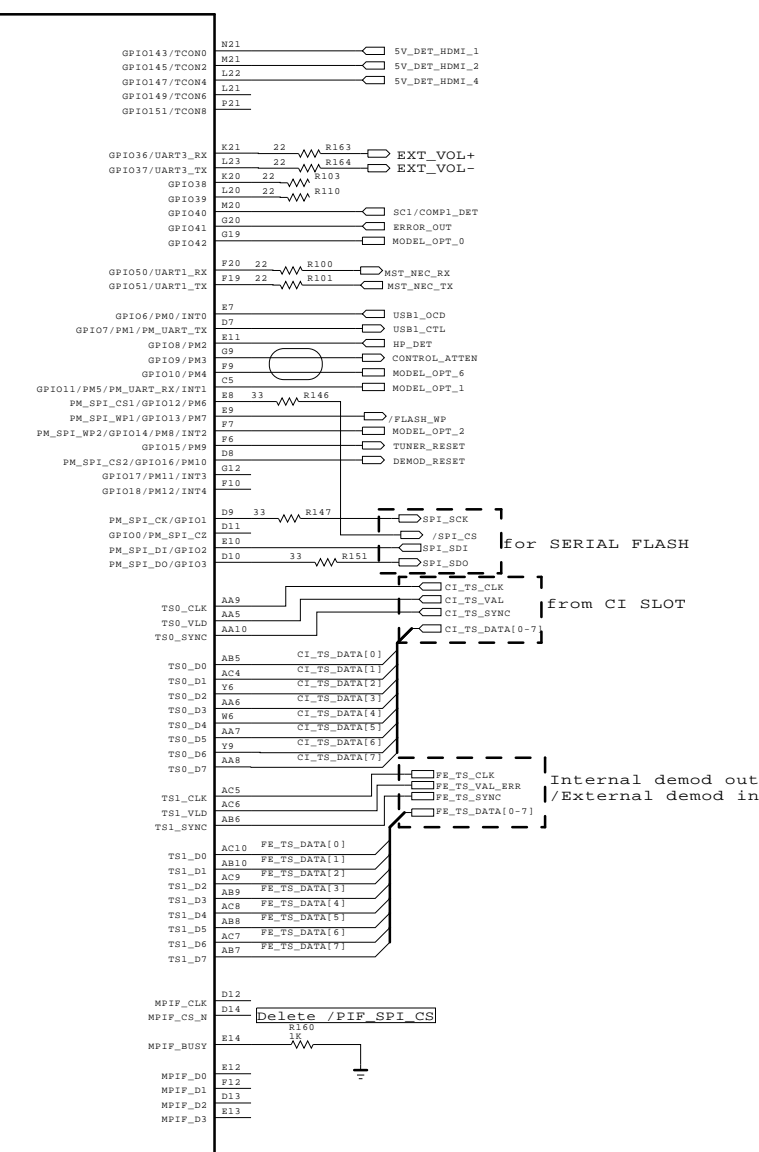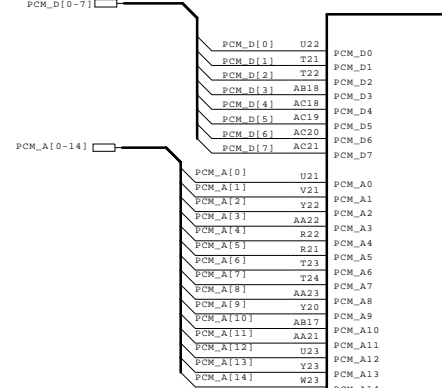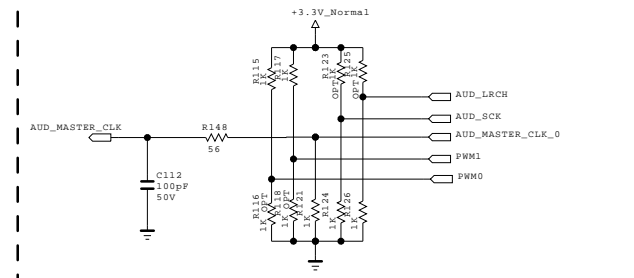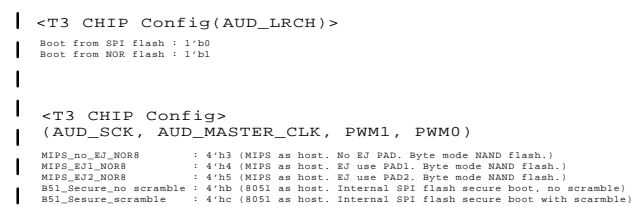

SECRET
LGElectronics



MODEL	GP3_Saturn7M	DATE	Ver. 0.1
BLOCK	FLASH/EEPROM/GPIO	SHEET	1 /

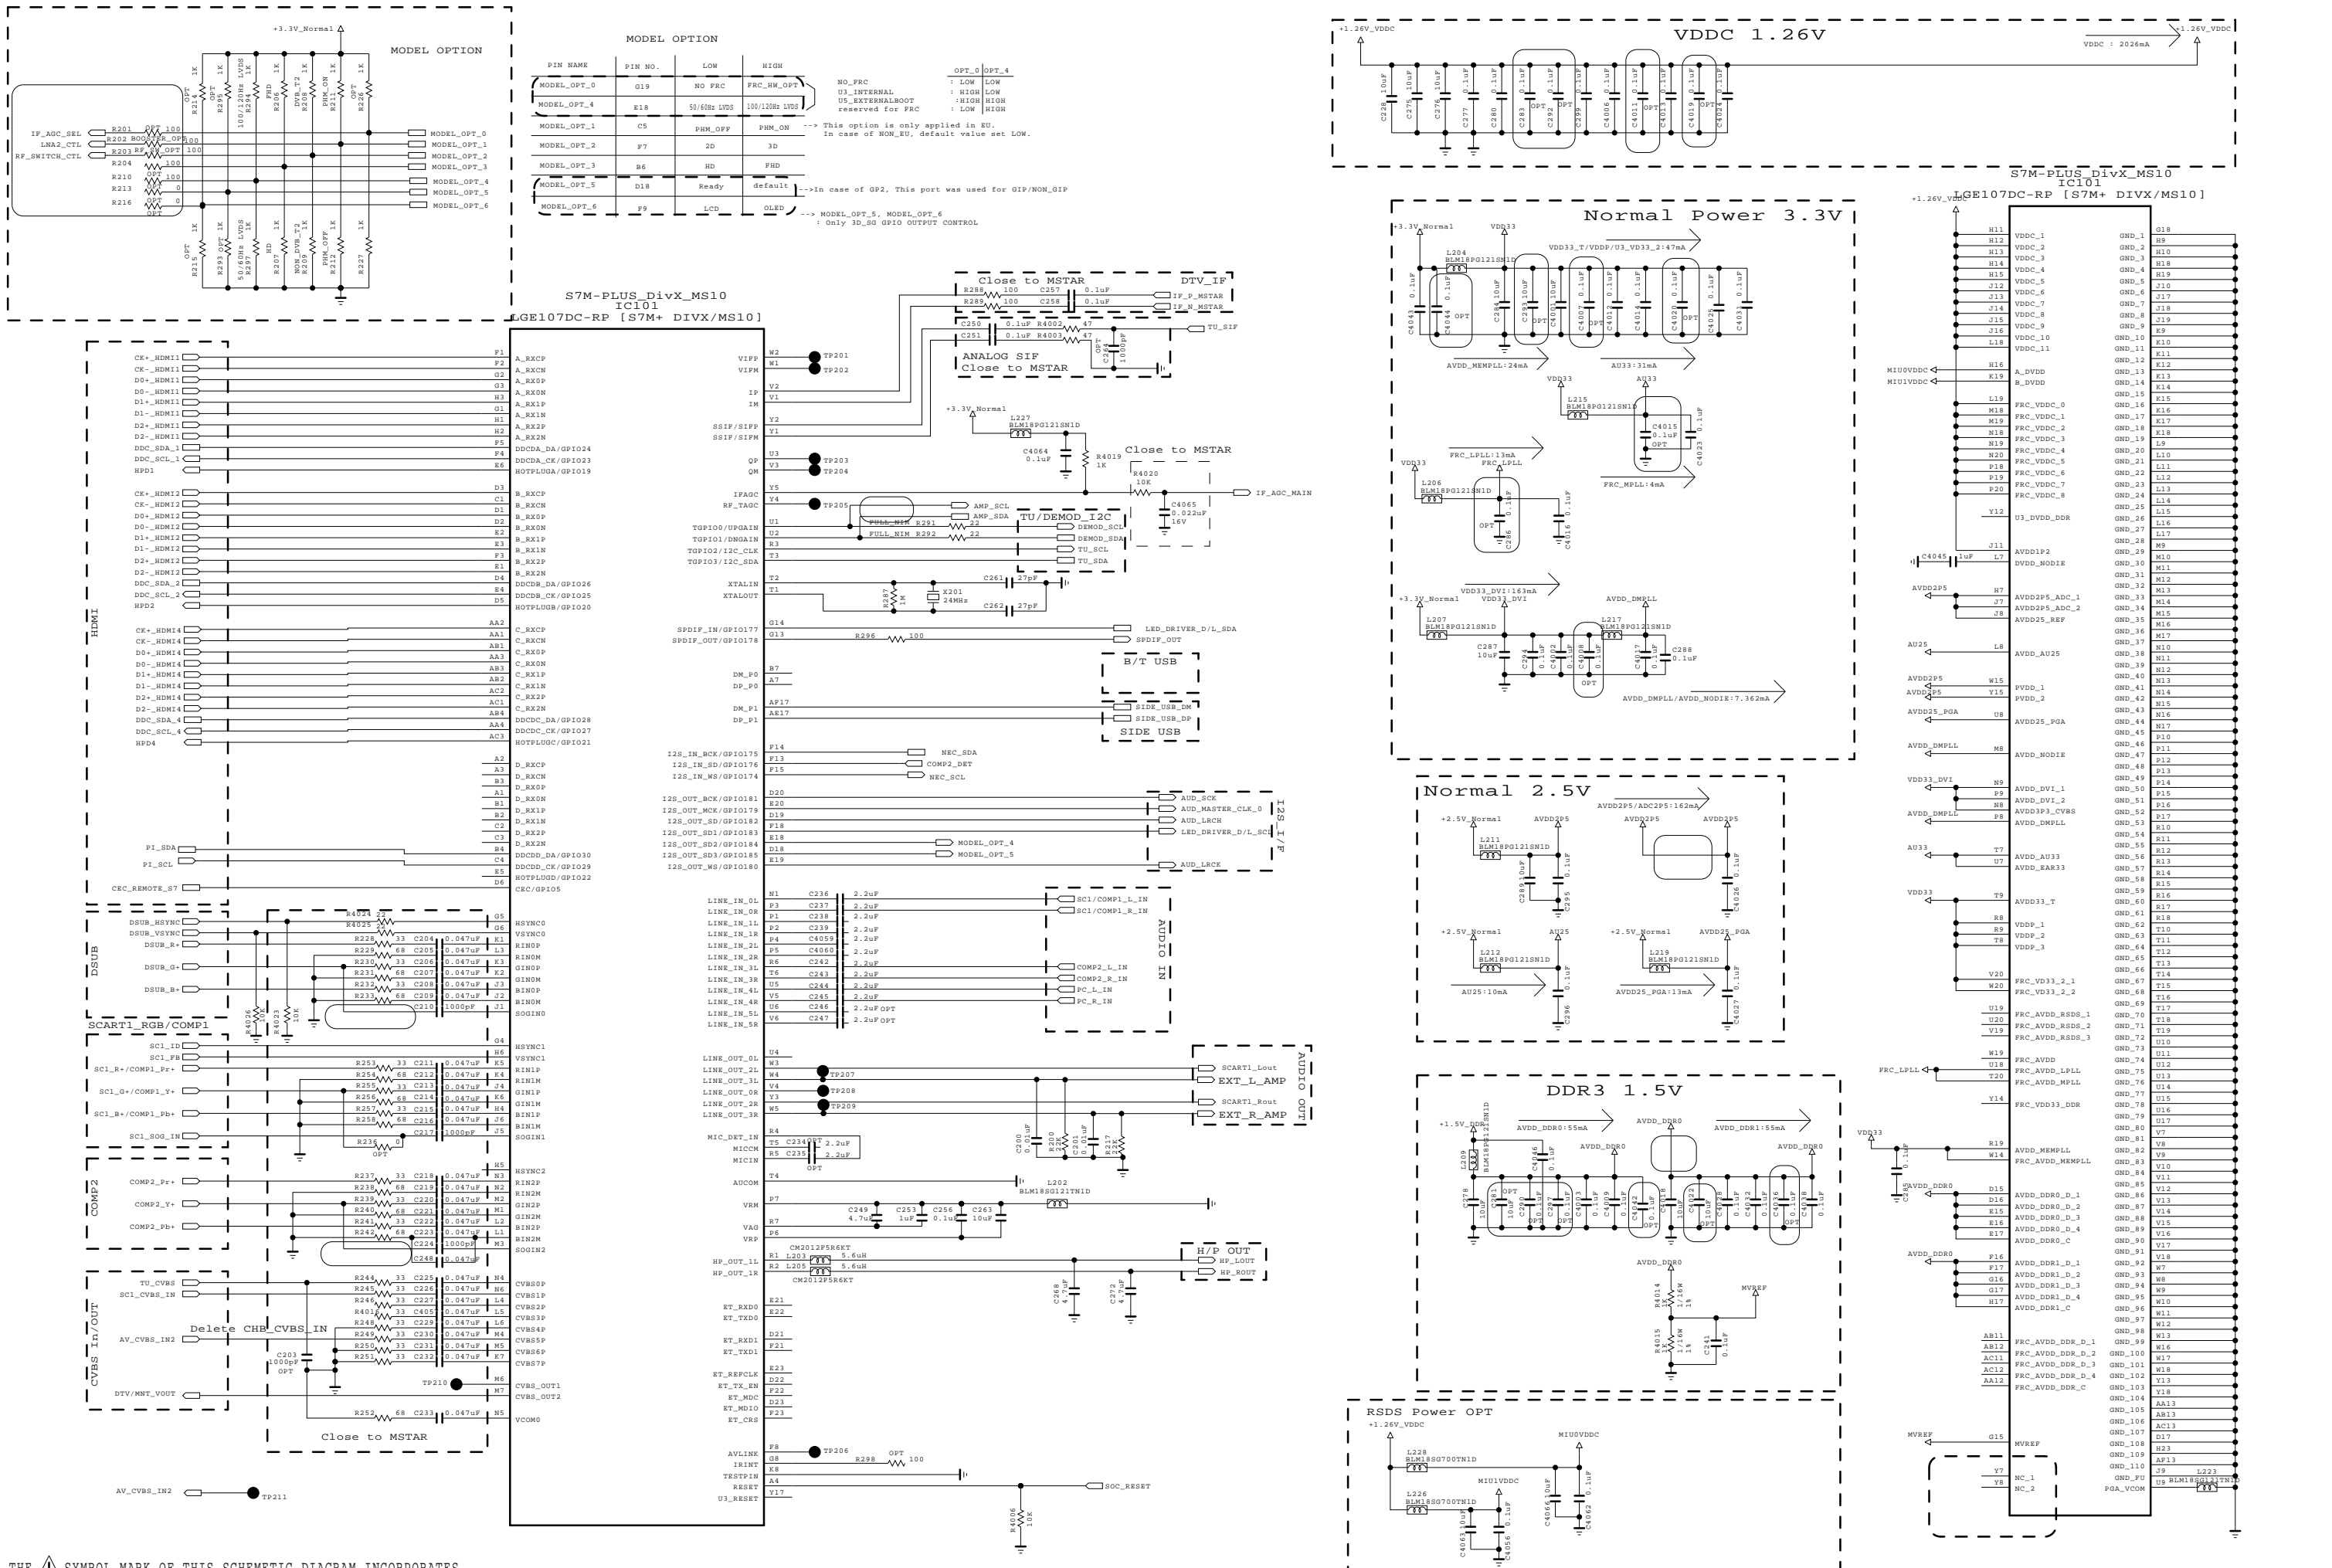


THE SYMBOL MARK OF THIS SCHEMATIC DIAGRAM INCORPORATES SPECIAL FEATURES IMPORTANT FOR PROTECTION FROM X-RADIATION. FILTRE AND ELECTRICAL SHOCK HAZARDS, WHEN SERVICING IF IS ESSENTIAL THAT ONLY MANUFACTURERS SPECIFIED PARTS BE USED FOR THE CRITICAL COMPONENTS IN THE SYMBOL MARK OF THE SCHEMATIC.



SECRET
LGElectronics



MODEL	GP2R	DATE	20101023
BLOCK	MAIN2, HV OPT	SHEET	2

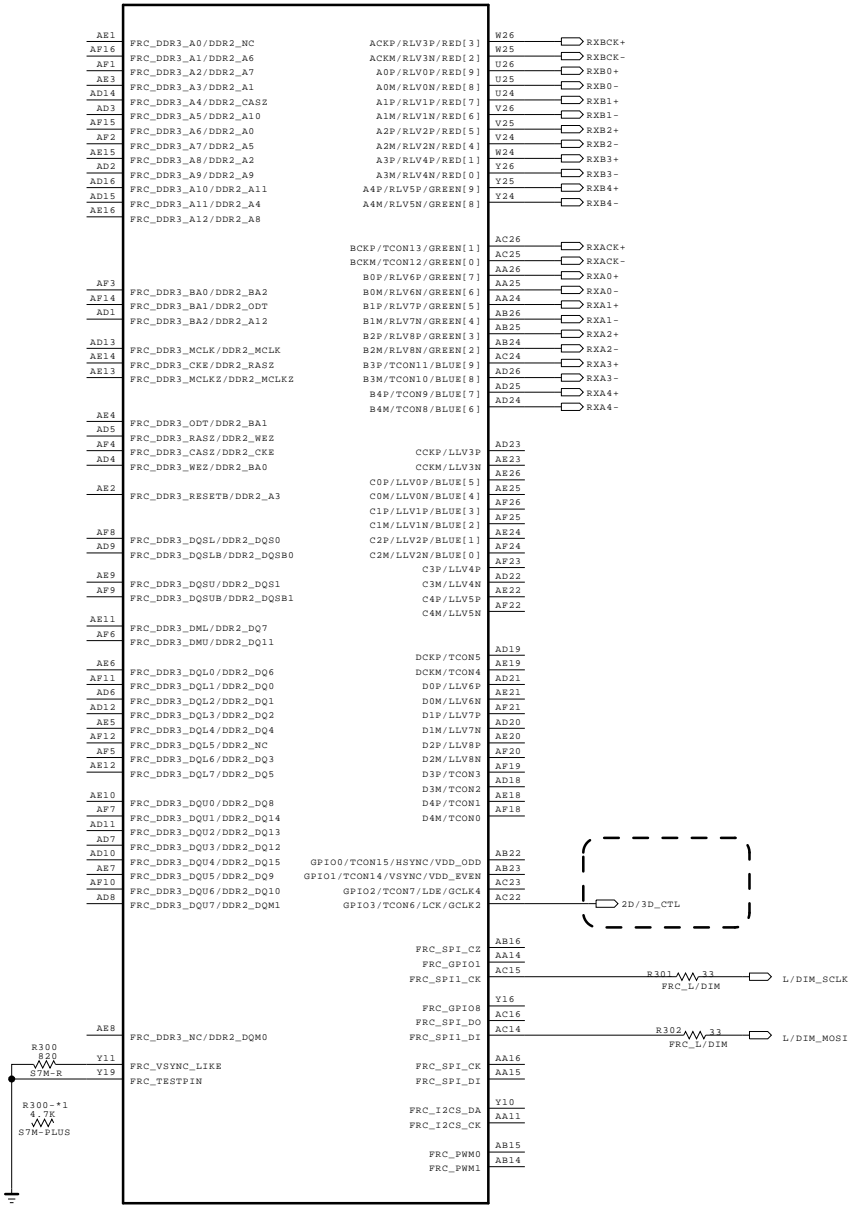S7M-PLUS_DivX_MS10
IC101
LGE107DC-RP [S7M+ DIVX/MS10]



THE  SYMBOL MARK OF THIS SCHEMATIC DIAGRAM INCORPORATES SPECIAL FEATURES IMPORTANT FOR PROTECTION FROM X-RADIATION. FILRE AND ELECTRICAL SHOCK HAZARDS, WHEN SERVICING IF IS ESSENTIAL THAT ONLY MANUFACTURES SPECIFIED PARTS BE USED FOR THE CRITICAL COMPONENTS IN THE  SYMBOL MARK OF THE SCHEMATIC.

SECRET
LGElectronics



MODEL	GP2R	DATE	20101023
BLOCK	FRC_DDR	SHEET	3 /

FROM LIPS & POWER B/D

	PIN No	LGD (PSU) or LIPS	CNO10+Lamp (PSU)	AUO 10+Lamp (PSU)	SHARP (PSU)	IPS-@ (PSU)
	16	GND	GND	GND	GND	GND
	18	INV_ON	A-DIM	INV_ON	INV_ON	INV_ON
	20	VBR-A	NC	Err_out	52/60:ERROR 26/32ND:NC	Err_out
	22	PWM_DIM	PWM_DIM	NC	26/32/52:PWM 60:NC	NC
	24	Err_out	INV_ON	PWM_DIM	26/32/52:GND 60:PWM	PWM_DIM
	23	GND	GND	GND	GND	GND

PIN No	LGD LPB/ OS LPB	32LE5300-TA CM016-LED (PSU)	32LE4500-TA A00 10-LED (PSU)	32LE5300-TA LGD 10-LED (PSU)	
16	NC	NC	NC	NC	
18	INV_ON	INV_ON	INV_ON	INV_ON	
20	NC	err_out --> NC	err_out --> NC	NC	
22	PWM_DIM	NC	NC	PWM_DIM	
24	err_out --> NC	PWM_DIM	PWM_DIM	err_out --> NC	
23	NC	NC	NC	NC	

The diagram shows a USB-to-5V converter circuit. The input is labeled +12V/-15V. The main IC is IC401 AOZ1073AIL-3, a 3A step-down converter. The output is labeled +5V_USB. A dashed box indicates a 2000 mA current limit. The circuit includes several capacitors (C405, C410, C420, C424, C428) and resistors (R410, R413, R423). The output voltage is given by the formula:
$$V_{out} = (1 + R1/R2) * 0.8$$

```
INV      <--->  MAIN
#11      <--->  #24
#12      <--->  #18
#13      <--->  #20
#14      <--->  #22
```

[illegible]

S7M DDR 1.5V

1074 mA

3A \$ 0.145

$V_{out} = 0.827 * (1 + R1/R2) = 1.521V$

+2.5V/+1.8V

S7M core 1.26V volt

POWER_ON/OFF2_1

+3.5V_ST

L413

C430 10uF 10V

C431 0.1uF 16V

VIN_1

VIN_2

GND_1

GND_2

IC403 SNI1007054RTRR

THERMAL

PH_3

PH_2

PH_1

PH_0

PH_4

PH_5

PH_6

PH_7

PH_8

PH_9

PH_10

PH_11

PH_12

PH_13

PH_14

PH_15

PH_16

PH_17

PH_18

PH_19

PH_20

PH_21

PH_22

PH_23

PH_24

PH_25

PH_26

PH_27

PH_28

PH_29

PH_30

PH_31

PH_32

PH_33

PH_34

PH_35

PH_36

PH_37

PH_38

PH_39

PH_40

PH_41

PH_42

PH_43

PH_44

PH_45

PH_46

PH_47

PH_48

PH_49

PH_50

PH_51

PH_52

PH_53

PH_54

PH_55

PH_56

PH_57

PH_58

PH_59

PH_60

PH_61

PH_62

PH_63

PH_64

PH_65

PH_66

PH_67

PH_68

PH_69

PH_70

PH_71

PH_72

PH_73

PH_74

PH_75

PH_76

PH_77

PH_78

PH_79

PH_80

PH_81

PH_82

PH_83

PH_84

PH_85

PH_86

PH_87

PH_88

PH_89

PH_90

PH_91

PH_92

PH_93

PH_94

PH_95

PH_96

PH_97

PH_98

PH_99

PH_100

PH_101

PH_102

PH_103

PH_104

PH_105

PH_106

PH_107

PH_108

PH_109

PH_110

PH_111

PH_112

PH_113

PH_114

PH_115

PH_116

PH_117

PH_118

PH_119

PH_120

PH_121

PH_122

PH_123

PH_124

PH_125

PH_126

PH_127

PH_128

PH_129

PH_130

PH_131

PH_132

PH_133

PH_134

PH_135

PH_136

PH_137

PH_138

PH_139

PH_140

PH_141

PH_142

PH_143

PH_144

PH_145

PH_146

PH_147

PH_148

PH_149

PH_150

PH_151

PH_152

PH_153

PH_154

PH_155

PH_156

PH_157

PH_158

PH_159

PH_160

PH_161

PH_162

PH_163

PH_164

PH_165

PH_166

PH_167

PH_168

PH_169

PH_170

PH_171

PH_172

PH_173

PH_174

PH_175

PH_176

PH_177

PH_178

PH_179

PH_180

PH_181

PH_182

PH_183

PH_184

PH_185

PH_186

PH_187

PH_188

PH_189

PH_190

PH_191

PH_192

PH_193

PH_194

PH_195

PH_196

PH_197

PH_198

PH_199

PH_200

PH_201

PH_202

PH_203

PH_204

PH_205

PH_206

PH_207

PH_208

PH_209

PH_210

PH_211

PH_212

PH_213

PH_214

PH_215

PH_216

PH_217

PH_218

PH_219

PH_220

PH_221

PH_222

PH_223

PH_224

PH_225

PH_226

PH_227

PH_228

PH_229

PH_230

PH_231

PH_232

PH_233

PH_234

PH_235

PH_236

PH_237

PH_238

PH_239

PH_240

PH_241

PH_242

PH_243

PH_244

PH_245

PH_246

PH_247

PH_248

PH_249

PH_250

PH_251

PH_252

PH_253

PH_254

PH_255

PH_256

PH_257

PH_258

PH_259

PH_260

PH_261

PH_262

PH_263

PH_264

PH_265

PH_266

PH_267

PH_268

PH_269

PH_270

PH_271

PH_272

PH_273

PH_274

PH_275

PH_276

PH_277

PH_278

PH_279

PH_280

PH_281

PH_282

PH_283

PH_284

PH_285

PH_286

PH_287

PH_288

PH_289

PH_290

PH_291

PH_292

PH_293

PH_294

PH_295

PH_296

PH_297

PH_298

PH_299

PH_300

PH_301

PH_302

PH_303

PH_304

PH_305

PH_306

PH_307

PH_308

PH_309

PH_310

PH_311

PH_312

PH_313

PH_314

PH_315

PH_316

PH_317

PH_318

PH_319

PH_320

PH_321

PH_322

PH_323

PH_324

PH_325

PH_326

PH_327

PH_328

PH_329

PH_330

PH_331

PH_332

PH_333

PH_334

PH_335

PH_336

PH_337

PH_338

PH_339

PH_340

PH_341

PH_342

PH_343

PH_344

PH_345

PH_346

PH_347</

ST_3.5V--> 3.375V --> 3.46V
 20V-->3.51V --> 3.76V (3.59V)
 24V-->3.78V --> 3.92V (3.79V)
 12V -->3.58V --> 3.82V (3.68V)
 18.5V-->3.5V --> 3.75V (3.59V)

POWER_DET

IC408-1
 NCP803GN293
 PWR_DET_ON_SEMI

IC409-1
 NCP803GN293
 PD_12V_PWR_DET_ON_SEMI

Power_DET

The diagram shows a 3A 3.3V Normal LDO regulator circuit. The input is 12V/15V, which is filtered by capacitors C457 (10uF 25V) and C459 (10uF 25V). The input is connected to the VIN pin of the IC405 AOZ1073AIL-3. The output of the LDO is 3.3V, which is filtered by capacitors C469 (22uF 15V) and C473 (0.1uF 16V). The output is connected to a load of 1934mA. The feedback network consists of a 1.2k sense resistor (R454) and a 2200pF compensation capacitor (C664). The output voltage is regulated by the feedback network, which is connected to the FB pin of the LDO. The output voltage is 3.3V, and the formula for the output voltage is given as $V_{out} = (1 + R1/R2) * 0.8$.






+5V_Normal

MAX 1A

$V_{out} = 0.8 * (1 + R1/R2)$

 SECRET
LGElectronics



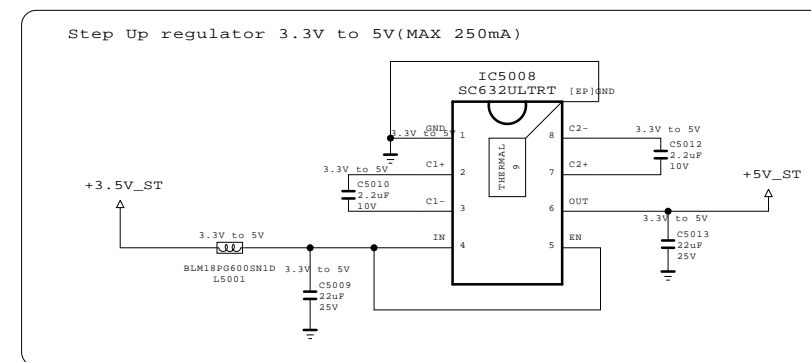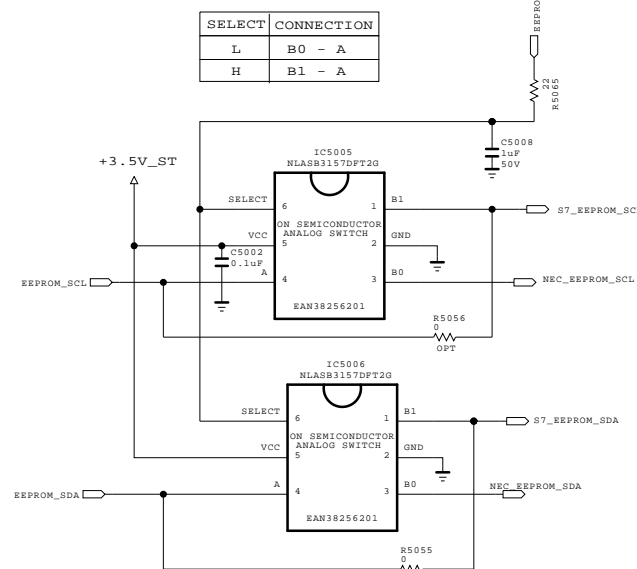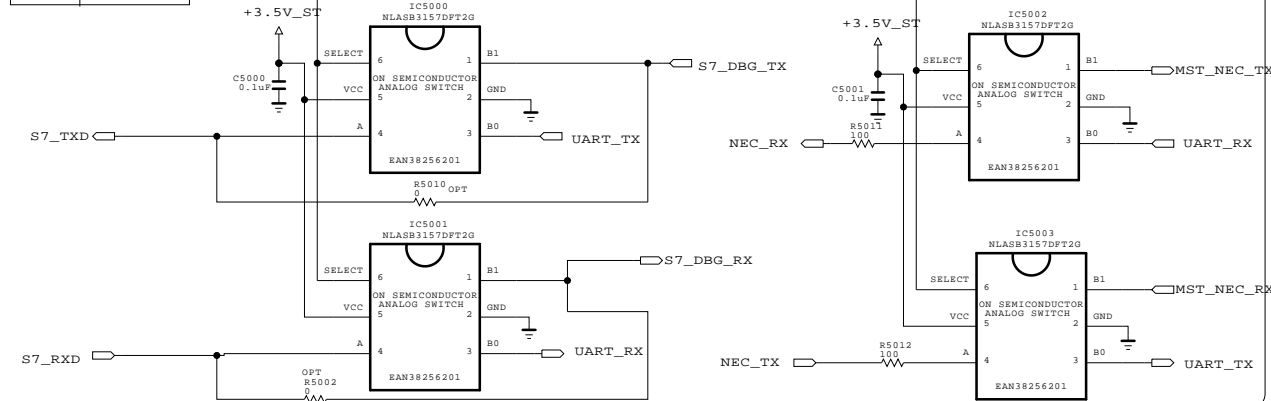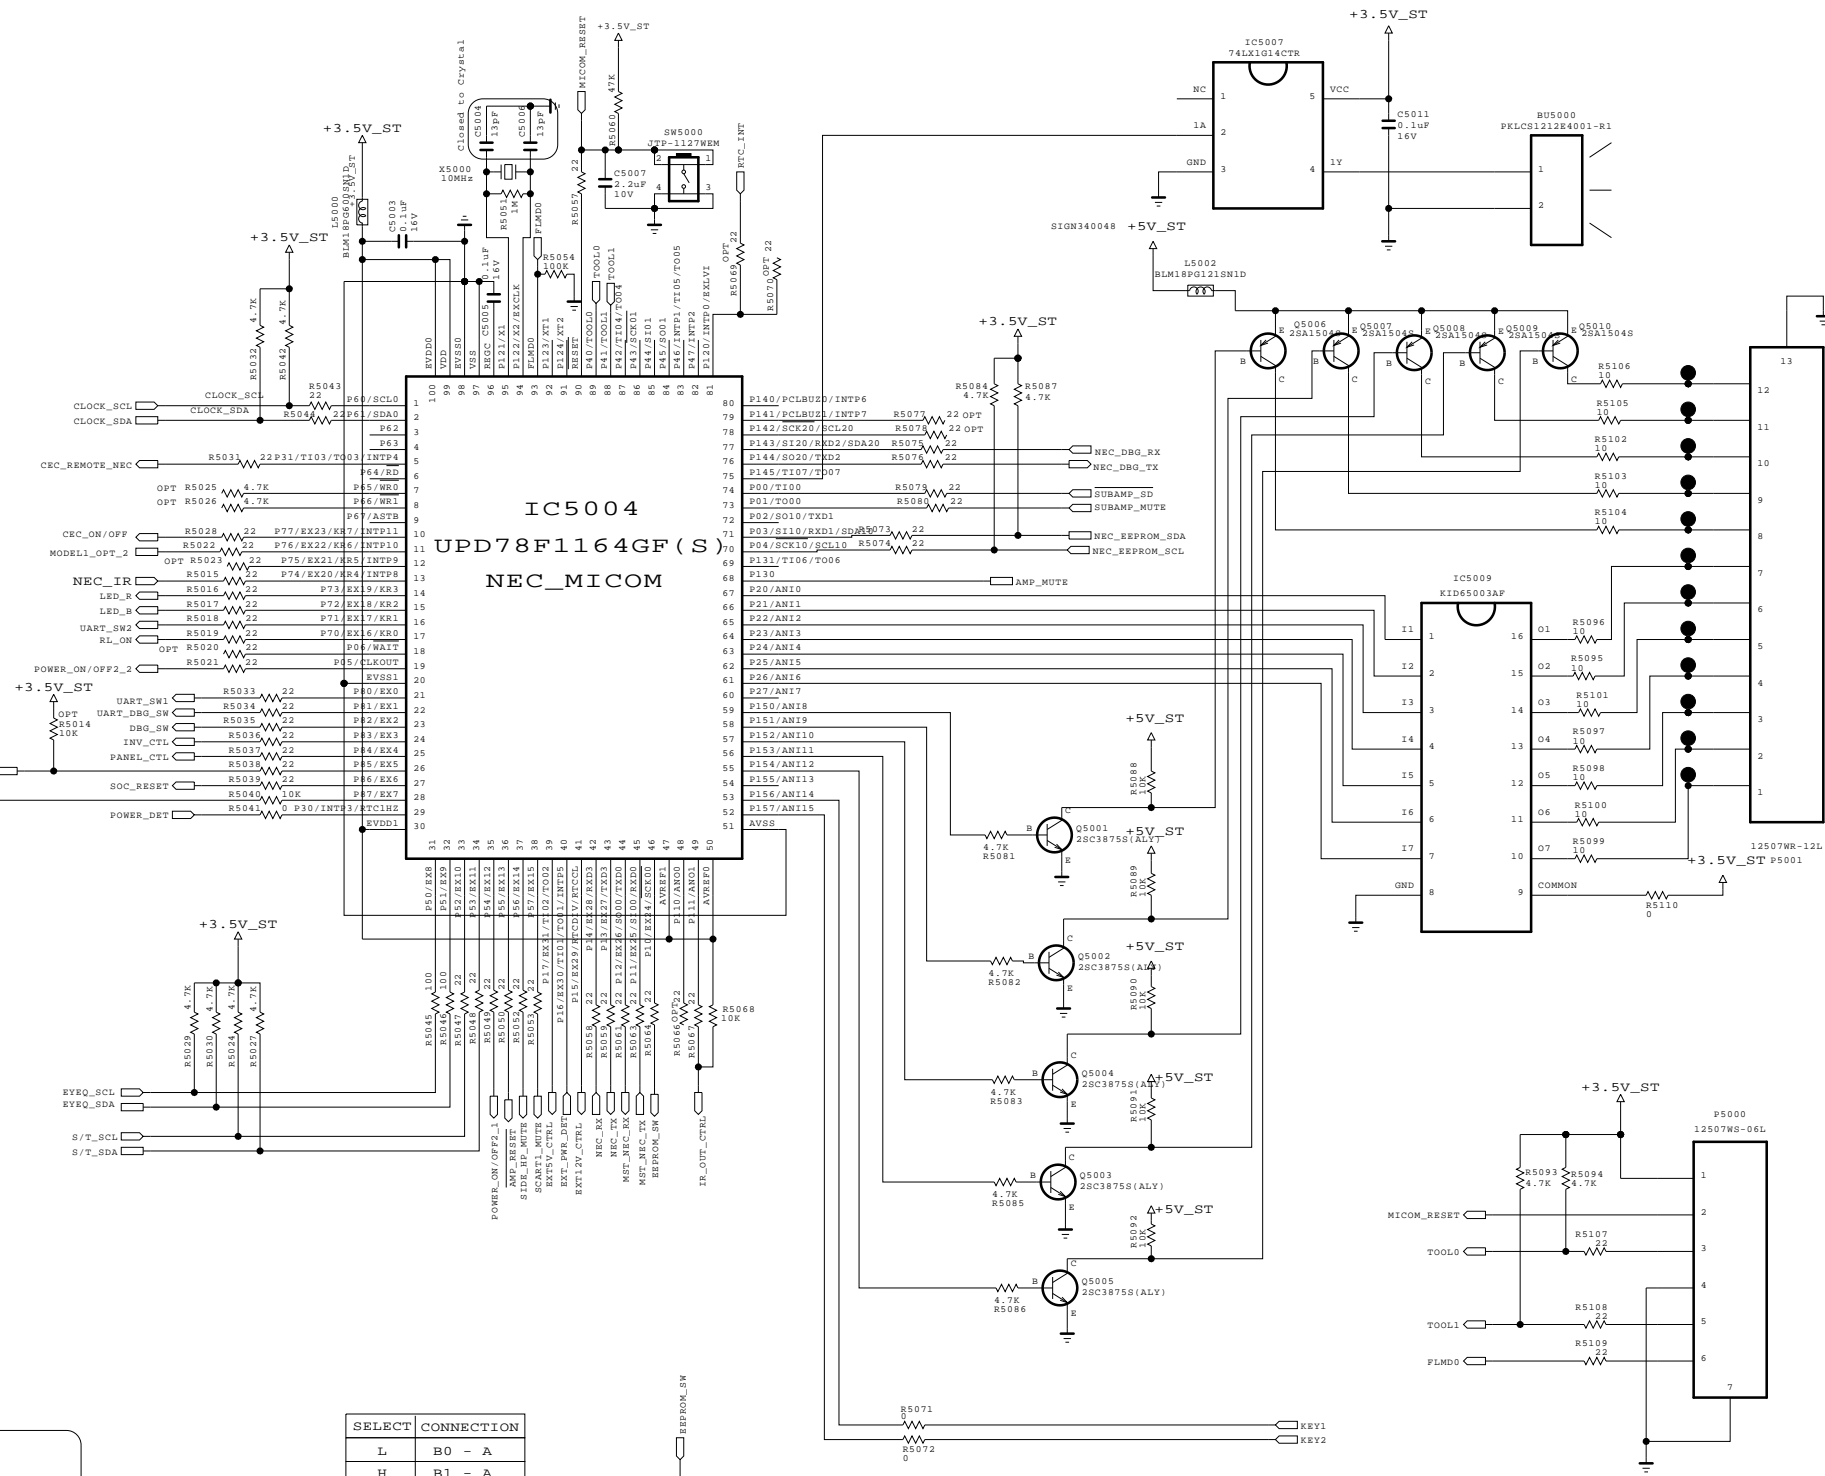




SECRET
LGElectronics



MODEL	GP2R	DATE	20101023
BLOCK	MICOM	SHEET	5 /

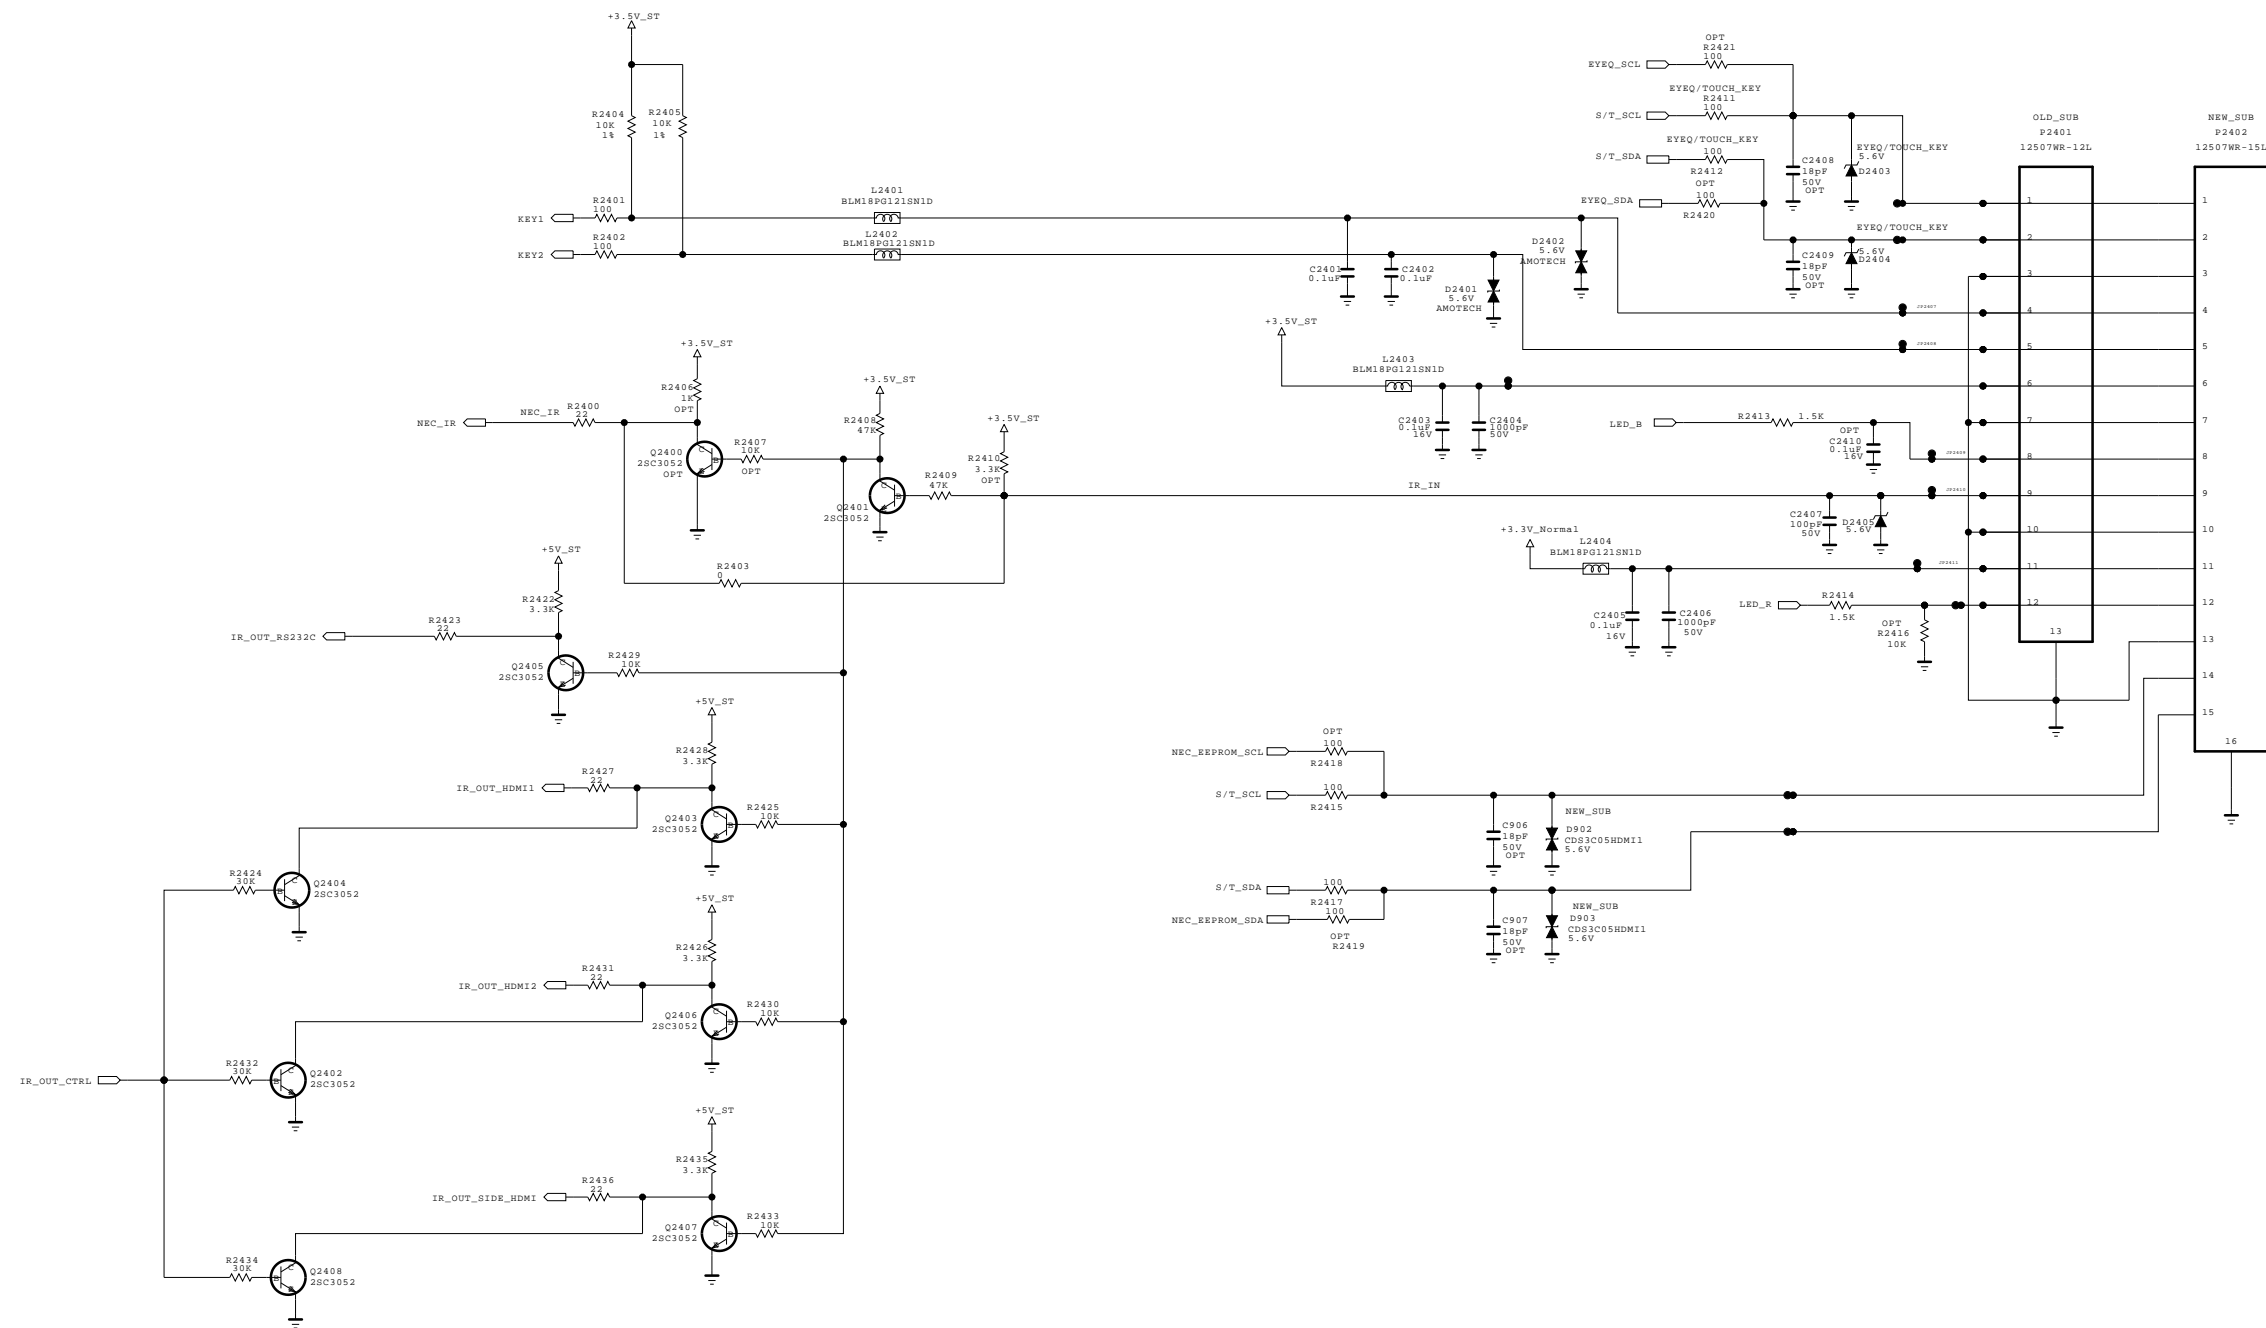CONTROL
IR & LED






THE  SYMBOL MARK OF THIS SCHEMATIC DIAGRAM INCORPORATES SPECIAL FEATURES IMPORTANT FOR PROTECTION FROM X-RADIATION. FILRE AND ELECTRICAL SHOCK HAZARDS, WHEN SERVICING IF IS ESSENTIAL THAT ONLY MANUFACTURES SPECIFIED PARTS BE USED FOR THE CRITICAL COMPONENTS IN THE  SYMBOL MARK OF THE SCHEMATIC.







SECRET
LGElectronics




MODEL	GP2R	DATE	20101023
BLOCK	IR/CONTROL-L	SHEET	6 /

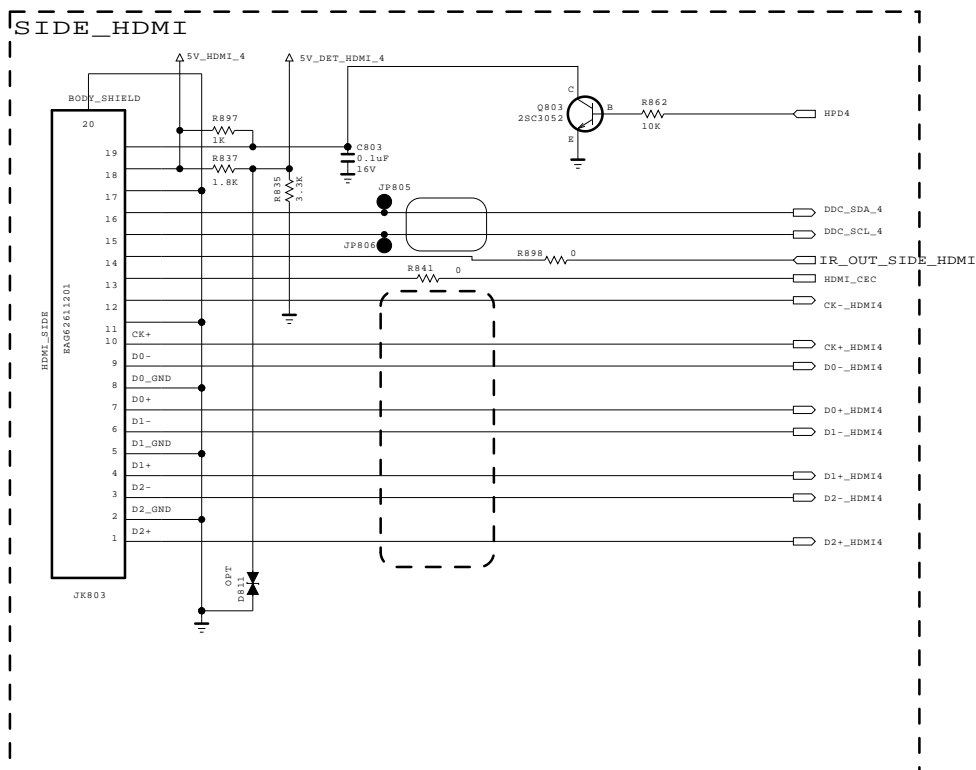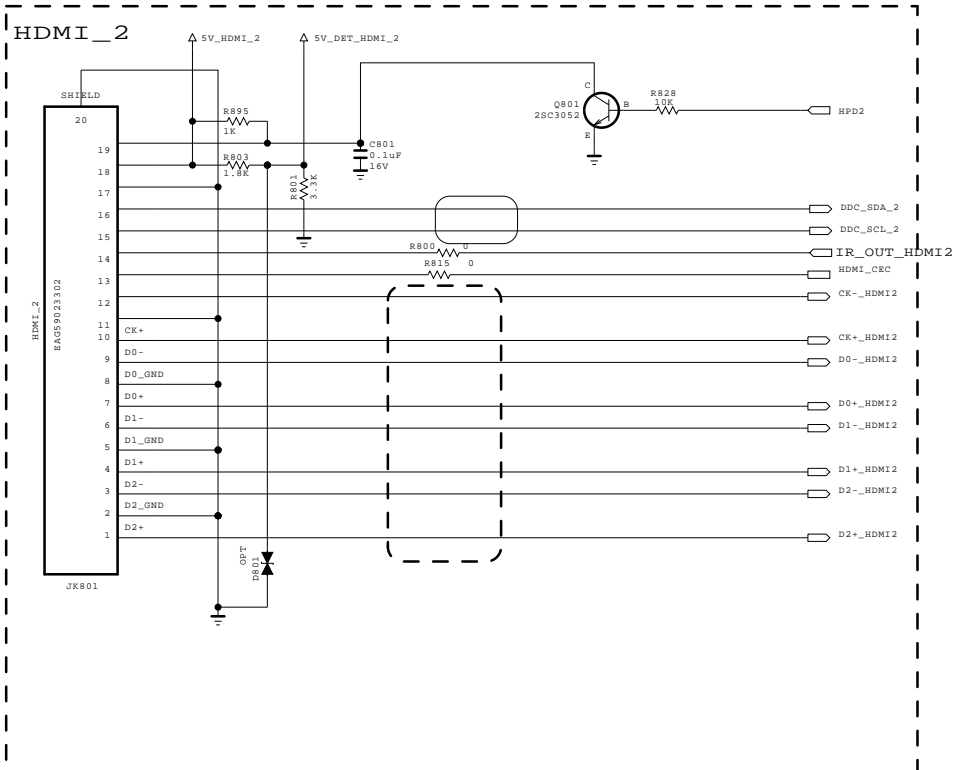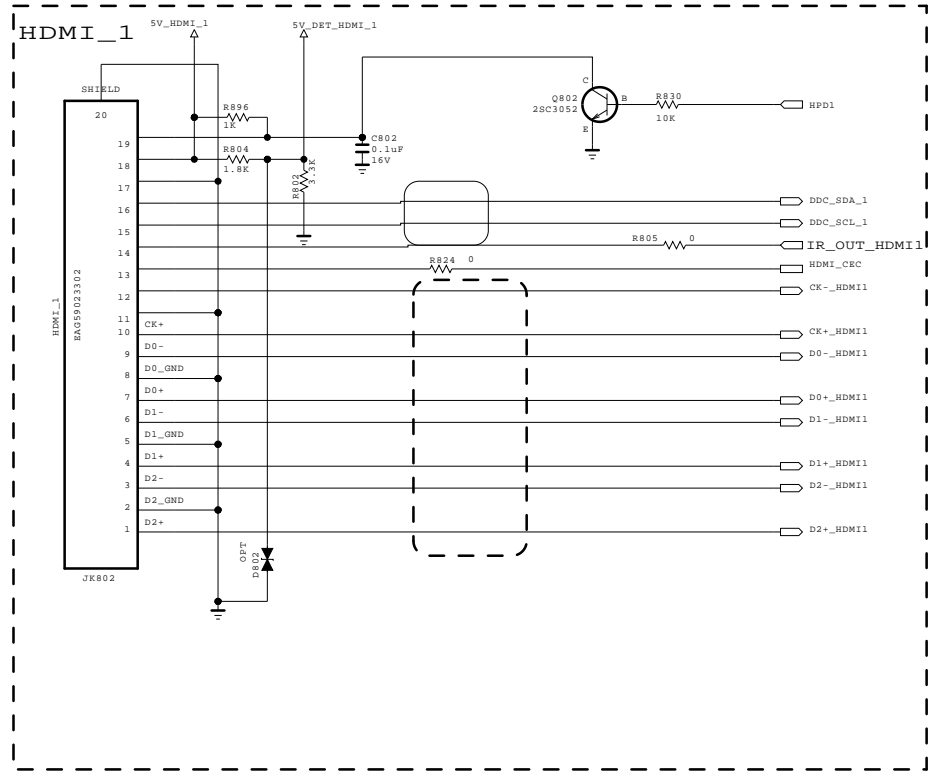



HDMI EEPROM

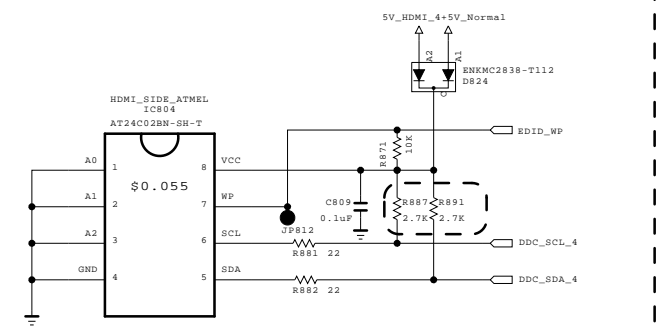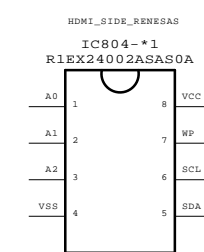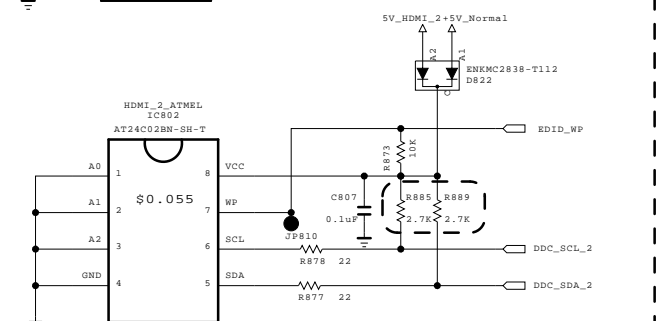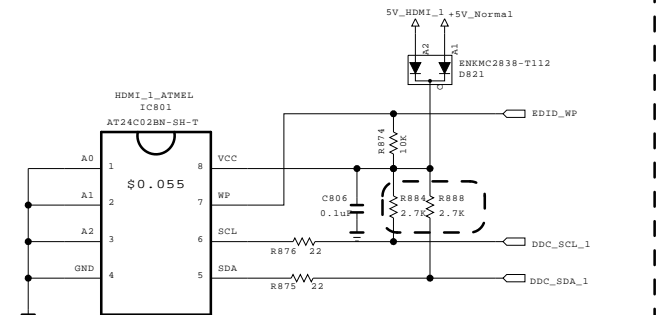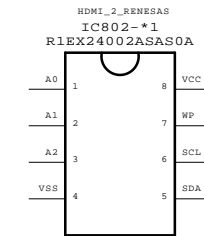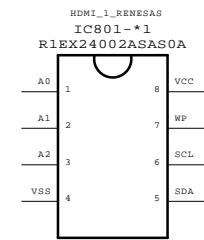

For CEC

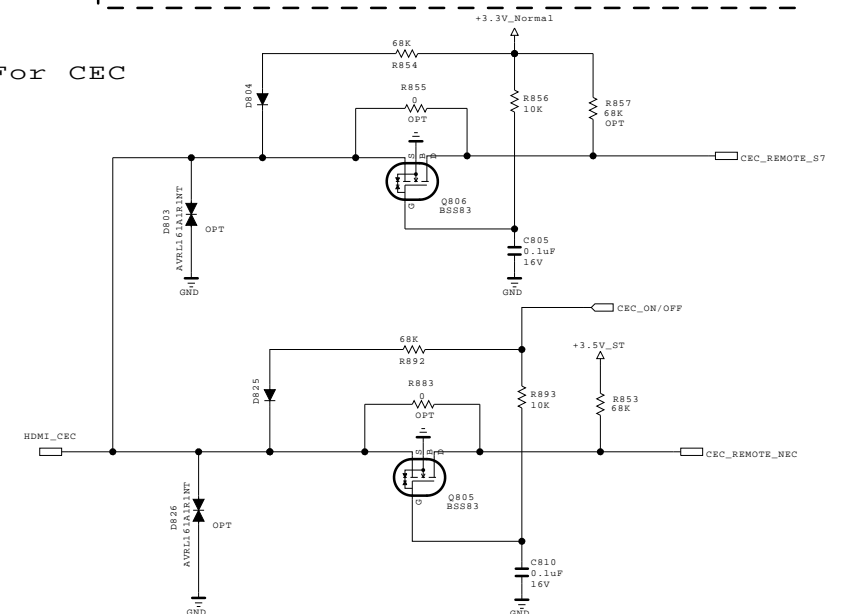

 THE  SYMBOL MARK OF THIS SCHEMATIC DIAGRAM INCORPORATES SPECIAL FEATURES IMPORTANT FOR PROTECTION FROM X-RADIATION. FILRE AND ELECTRICAL SHOCK HAZARDS, WHEN SERVICING IF IS ESSENTIAL THAT ONLY MANUFACTURES SPECIFIED PARTS BE USED FOR THE CRITICAL COMPONENTS IN THE  SYMBOL MARK OF THE SCHEMATIC.


SECRET
LGElectronics

 LG ELECTRONICS


MODEL	GP2R	DATE	20101023
BLOCK	HDMI	SHEET	8

RGB / SPDIF / PC / HP

New Item Development
EARPHONE BLOCK

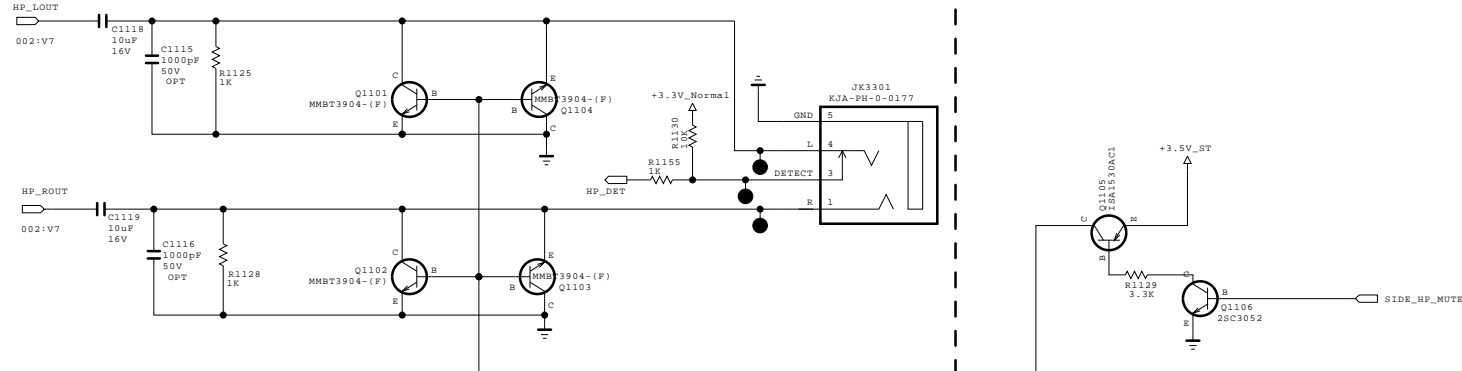


PC AUDIO

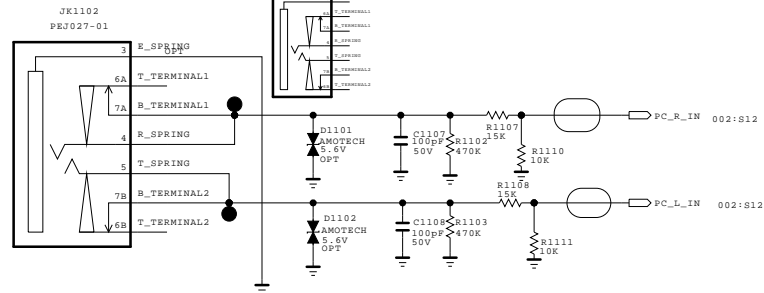


SPDIF OPTIC JACK

5.15 Mstar Circuit Application

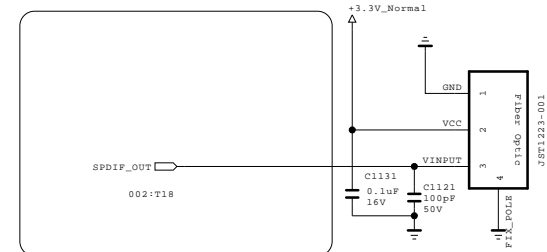

RGB PC

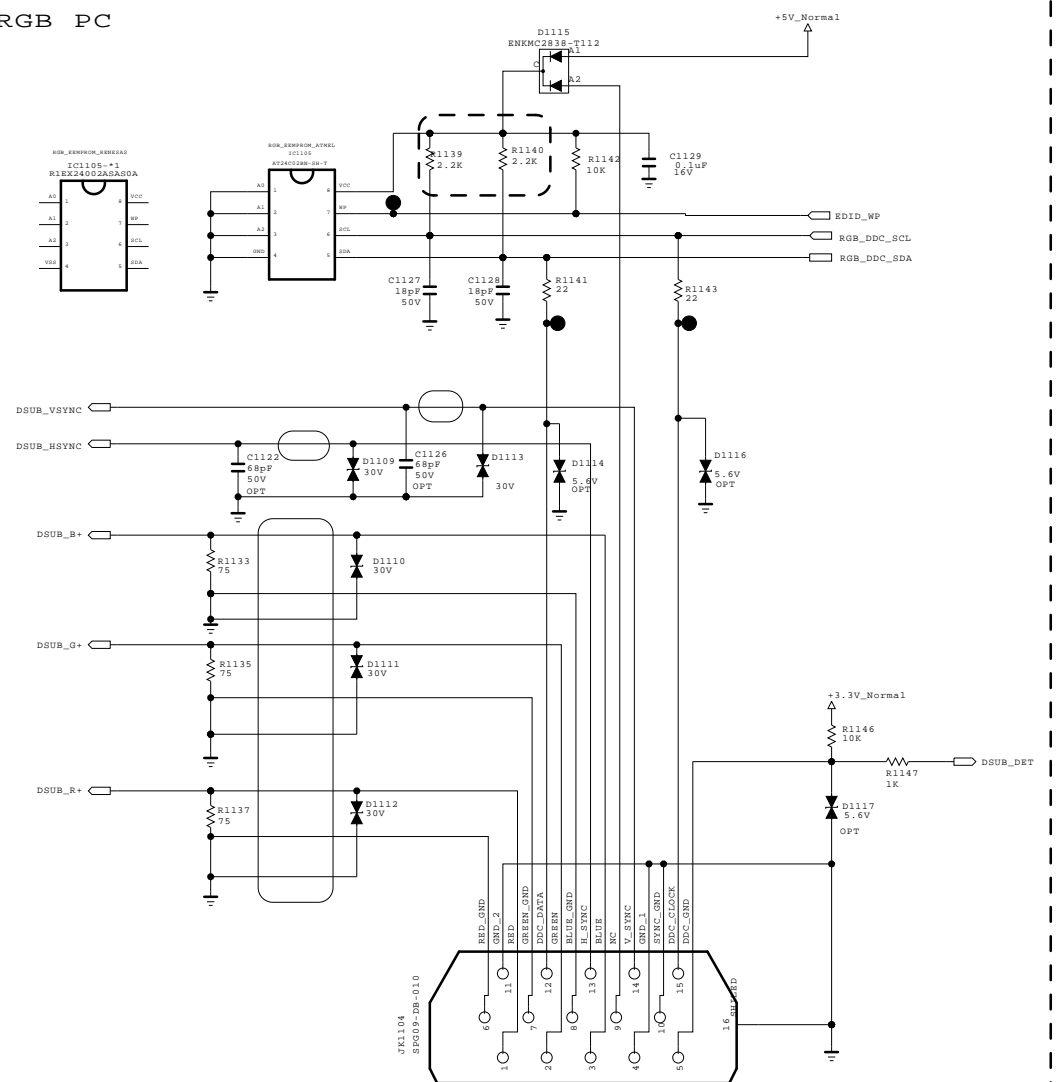


THE ⚠ SYMBOL MARK OF THIS SCHEMATIC DIAGRAM INCORPORATES SPECIAL FEATURES IMPORTANT FOR PROTECTION FROM X-RADIATION. FILTRE AND ELECTRICAL SHOCK HAZARDS, WHEN SERVICING IF IS ESSENTIAL THAT ONLY MANUFACTURES SPECIFIED PARTS BE USED FOR THE CRITICAL COMPONENTS IN THE ⚠ SYMBOL MARK OF THE SCHEMATIC.

SECRET
LGElectronics






MODEL	GP2R	DATE	20101023
PACK	RGB/SPDIF/HP	SHEET	9 /

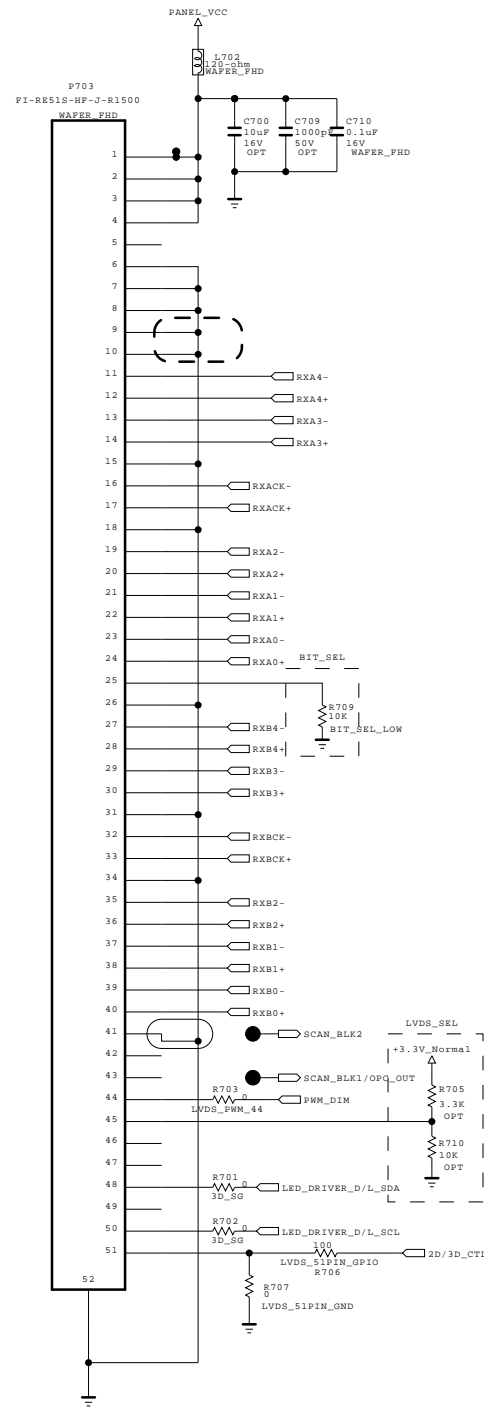[51Pin LVDS Connector]
(For FHD 60/120Hz)

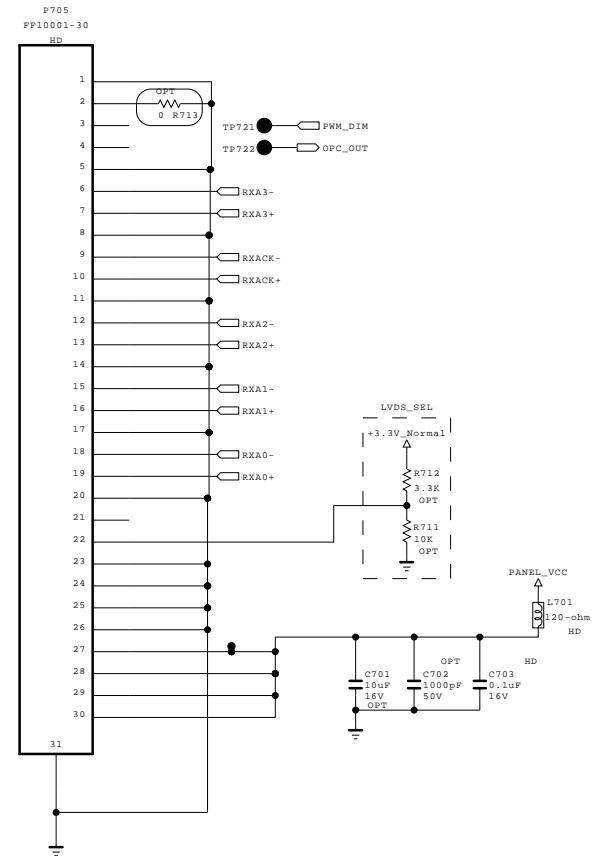

[30Pin LVDS Connector]
(For HD 60Hz_Normal)





THE  SYMBOL MARK OF THIS SCHEMATIC DIAGRAM INCORPORATES SPECIAL FEATURES IMPORTANT FOR PROTECTION FROM X-RADIATION. FILRE AND ELECTRICAL SHOCK HAZARDS, WHEN SERVICING IF IS ESSENTIAL THAT ONLY MANUFACTURES SPECIFIED PARTS BE USED FOR THE CRITICAL COMPONENTS IN THE  SYMBOL MARK OF THE SCHEMATIC.



SECRET
LGElectronics

 LG ELECTRONICS

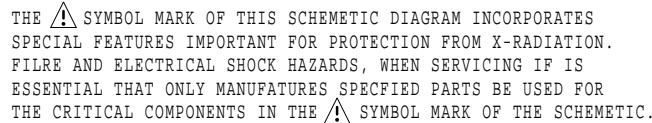MODEL	GP2R	DATE	20101023
BLOCK	LVDS_LARGE	SHEET	11 /

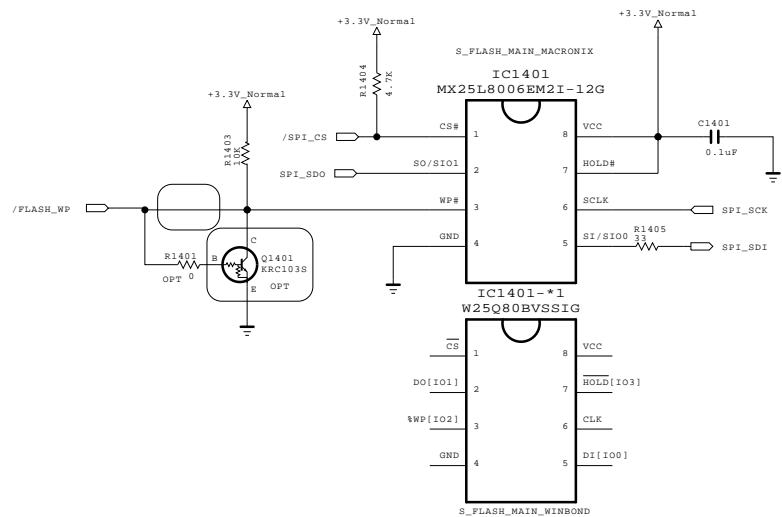




THE  SYMBOL MARK OF THIS SCHEMATIC DIAGRAM INCORPORATES SPECIAL FEATURES IMPORTANT FOR PROTECTION FROM X-RADIATION. FILRE AND ELECTRICAL SHOCK HAZARDS, WHEN SERVICING IF IS ESSENTIAL THAT ONLY MANUFACTURES SPECIFIED PARTS BE USED FOR THE CRITICAL COMPONENTS IN THE  SYMBOL MARK OF THE SCHEMATIC.

SECRET
LGElectronics



MODEL	GP2R	DATE	20101023
BLOCK	SFLASH 1MB	SHEET	13 /

GP2R_LARGE_TUNER

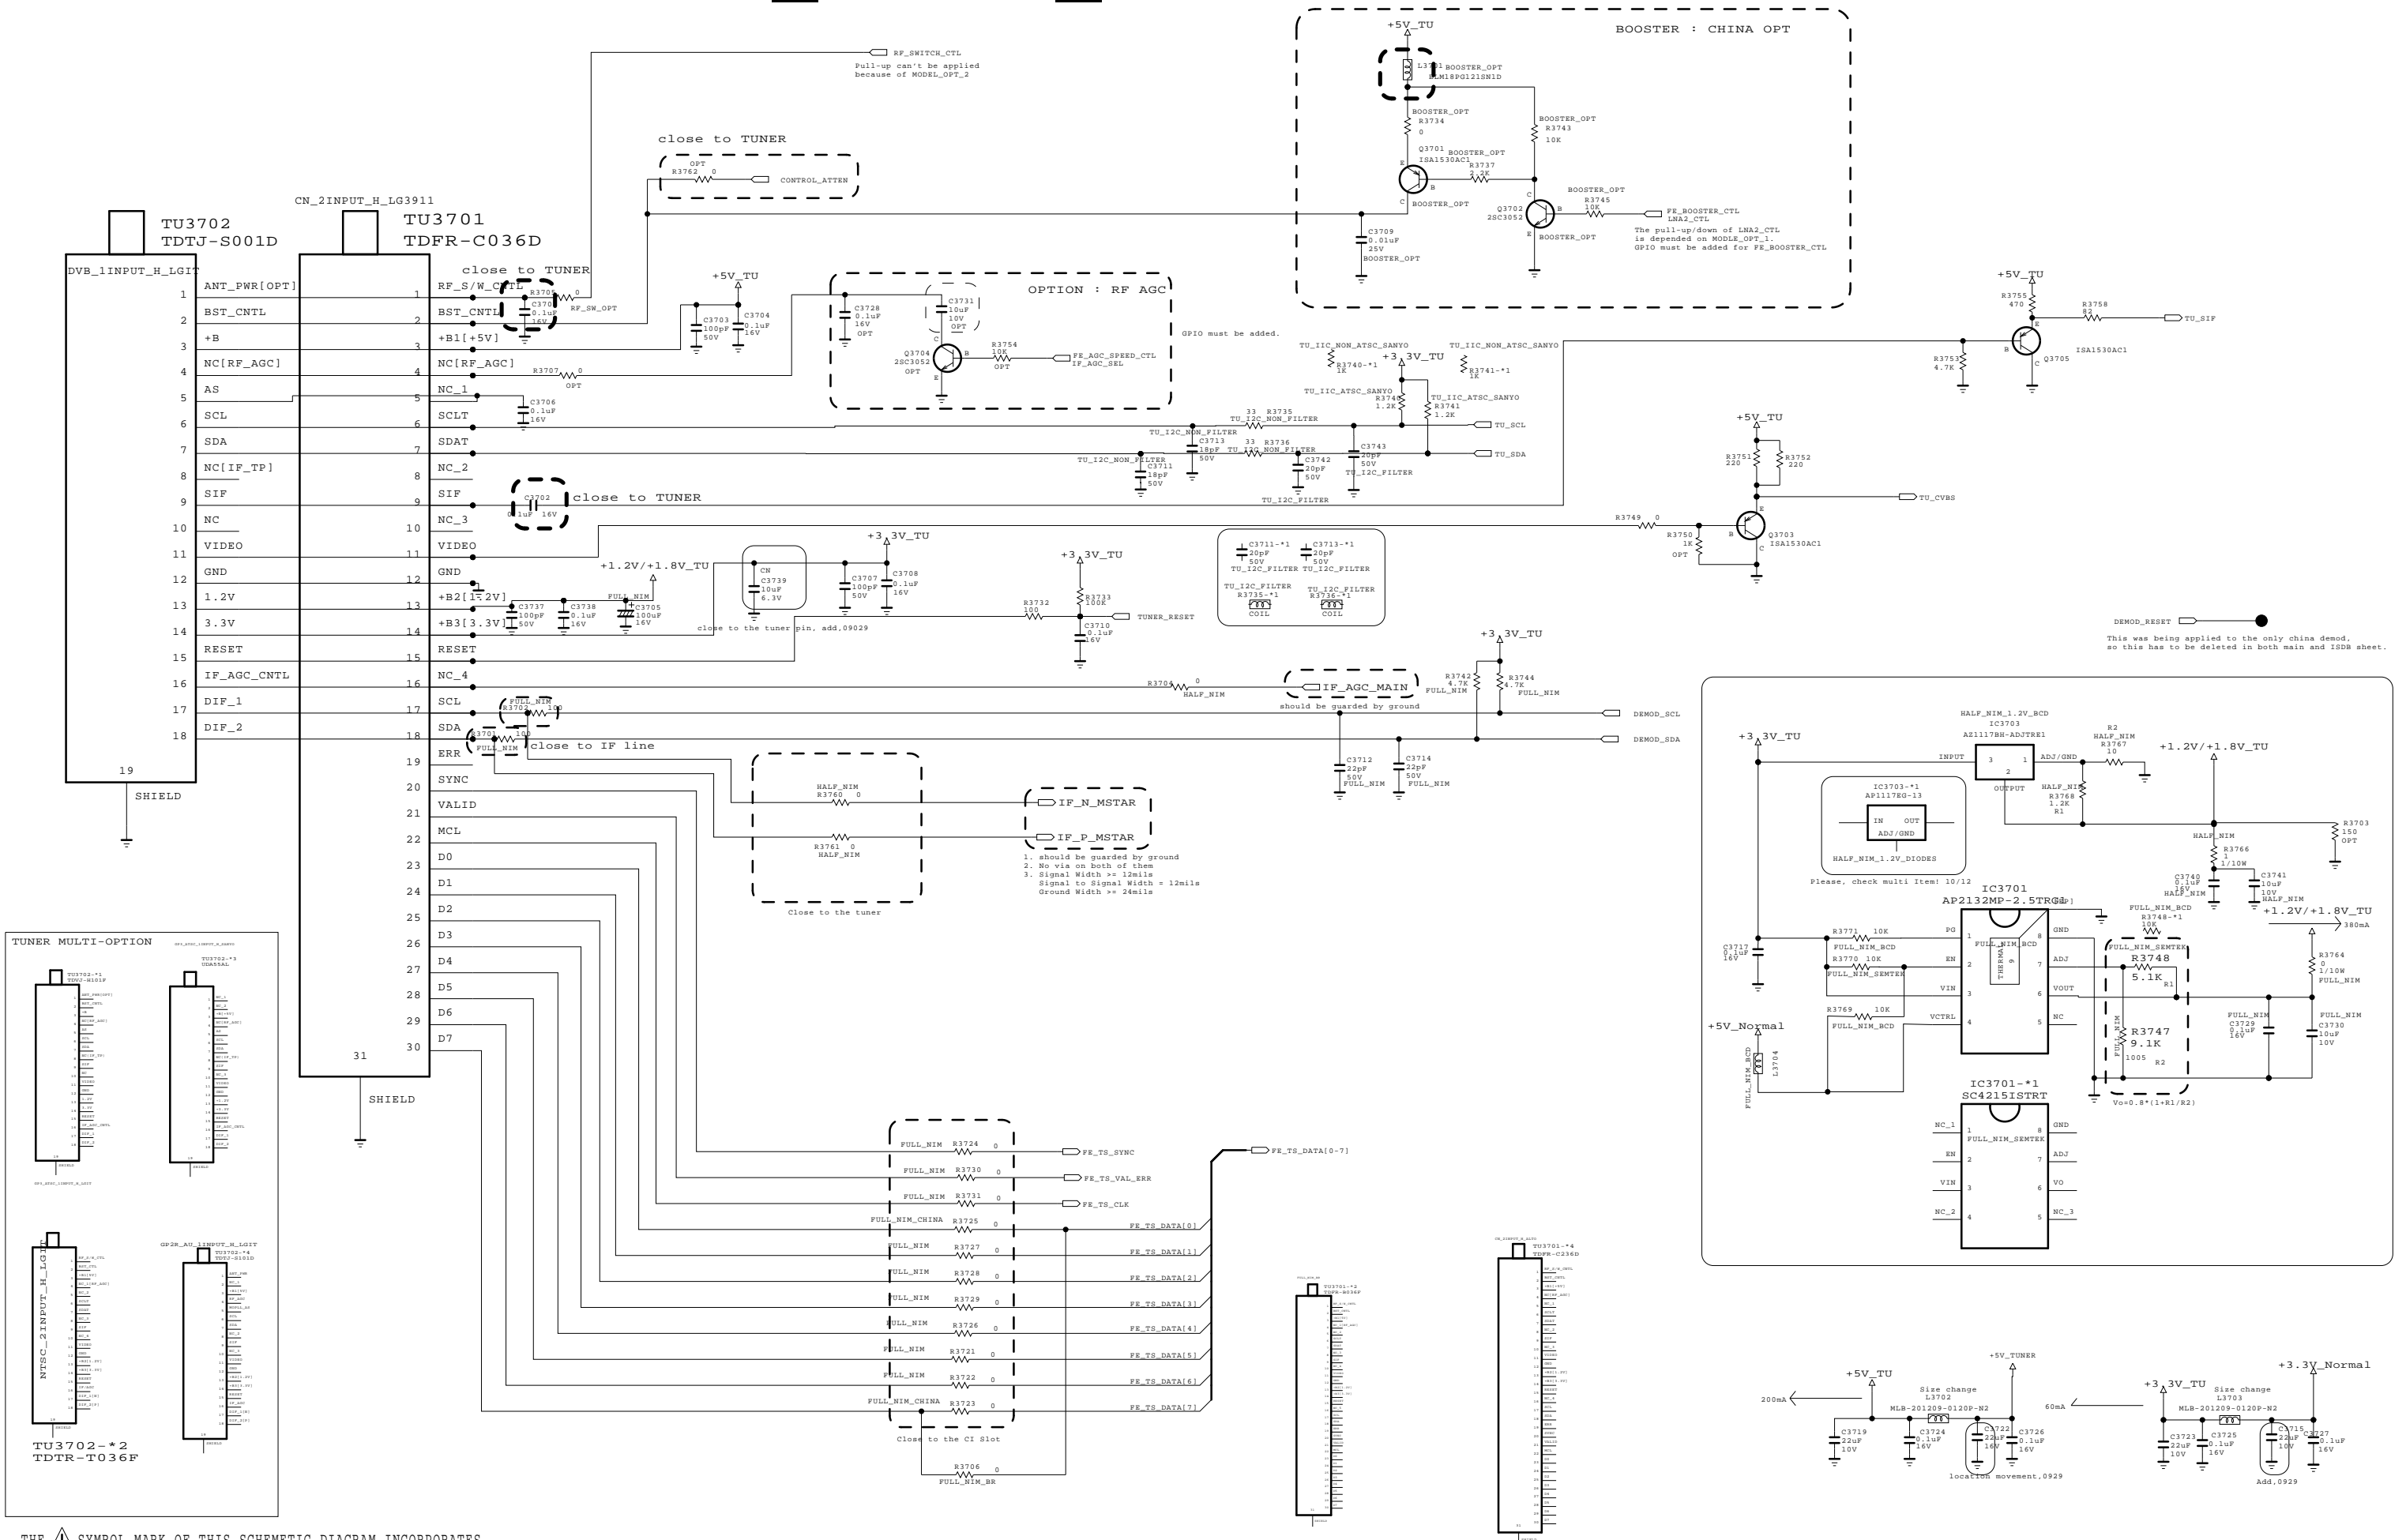


THE ⚠ SYMBOL MARK OF THIS SCHEMATIC DIAGRAM INCORPORATES SPECIAL FEATURES IMPORTANT FOR PROTECTION FROM X-RADIATION. FILRE AND ELECTRICAL SHOCK HAZARDS, WHEN SERVICING IF IS ESSENTIAL THAT ONLY MANUFACTURES SPECIFIED PARTS BE USED FOR THE CRITICAL COMPONENTS IN THE ⚠ SYMBOL MARK OF THE SCHEMATIC.

SECRET
LGElectronics




MODEL	GP2R	DATE	20101023
BLOCK	TUNER L	SHEET	14 /


EXT_SPEAKER_AMP

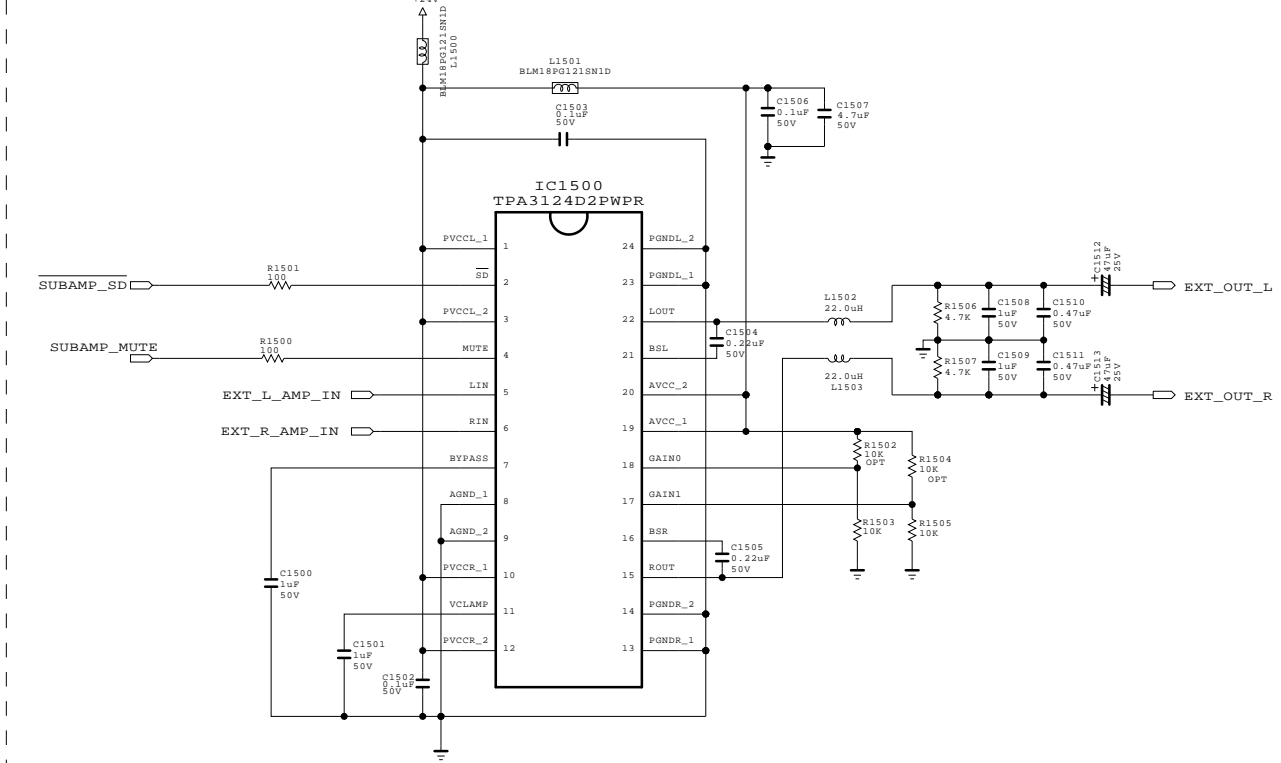


EXT_SPK_CONTROL/DEBUG

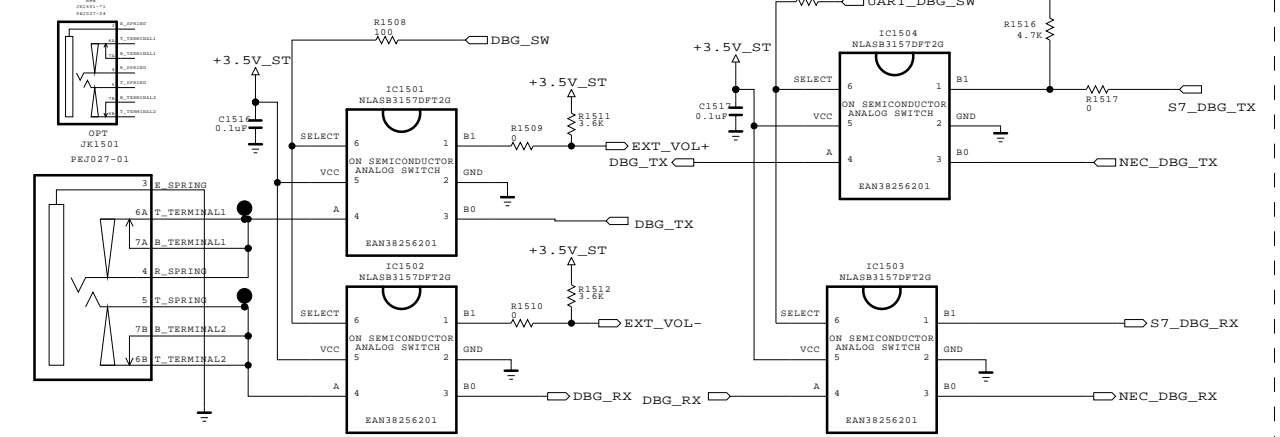

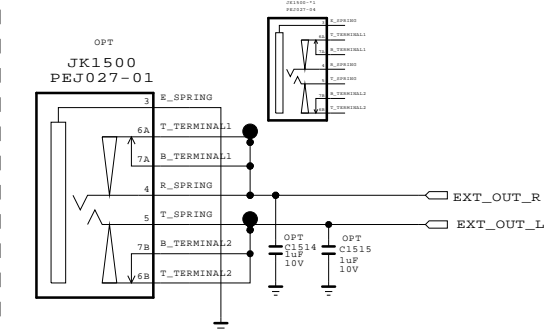

EXT_SPEAKER

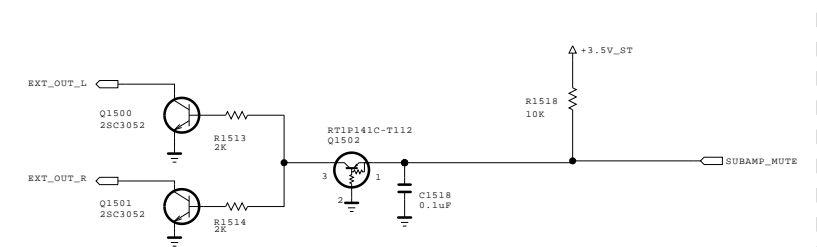

EXT_SPEAKER_MUTE




THE  SYMBOL MARK OF THIS SCHEMATIC DIAGRAM INCORPORATES SPECIAL FEATURES IMPORTANT FOR PROTECTION FROM X-RADIATION. FILRE AND ELECTRICAL SHOCK HAZARDS, WHEN SERVICING IF IS ESSENTIAL THAT ONLY MANUFACTURES SPECIFIED PARTS BE USED FOR THE CRITICAL COMPONENTS IN THE  SYMBOL MARK OF THE SCHEMATIC.

SECRET
LGElectronics







MODEL		DATE	
BLOCK		SHEET	/

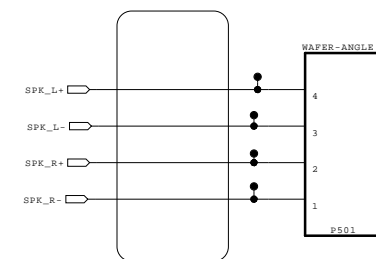

SECRET
LGElectronics



 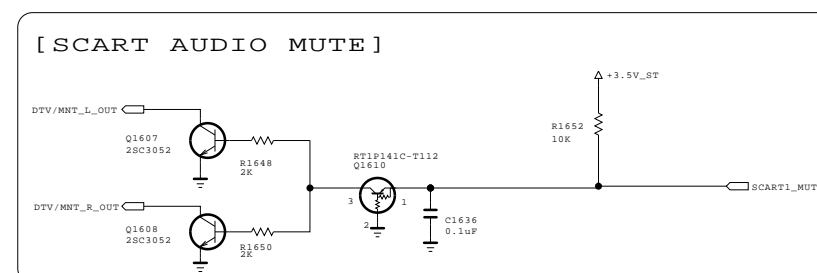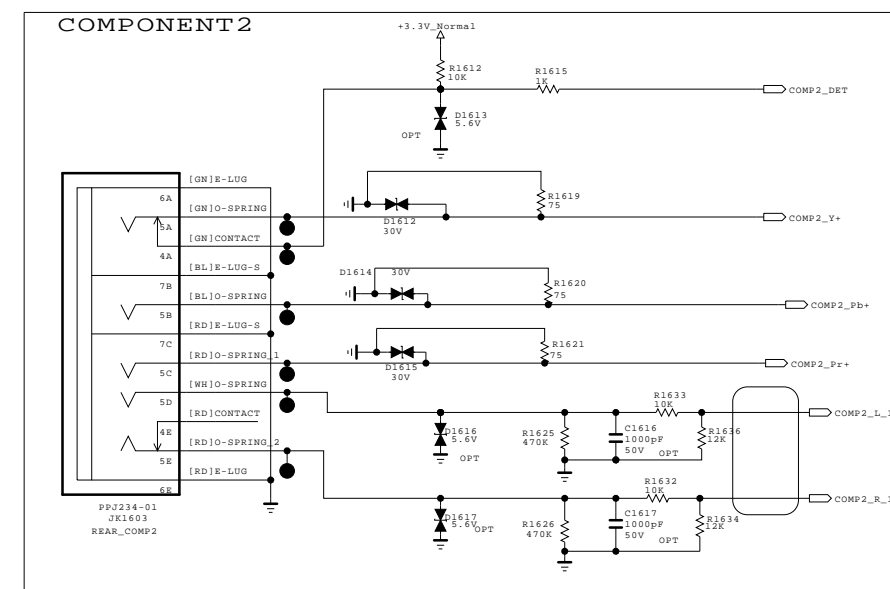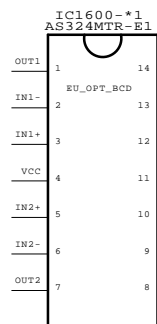



SECRET
LGElectronics



MODEL	GP2R	DATE	20101023
BLK	REAR JACK	SHEET	17 /

THE  SYMBOL MARK OF THIS SCHEMATIC DIAGRAM INCORPORATES SPECIAL FEATURES IMPORTANT FOR PROTECTION FROM X-RADIATION. FILRE AND ELECTRICAL SHOCK HAZARDS, WHEN SERVICING IF IS ESSENTIAL THAT ONLY MANUFACTURES SPECIFIED PARTS BE USED FOR THE CRITICAL COMPONENTS IN THE  SYMBOL MARK OF THE SCHEMATIC.



SECRET
LG Electronics







MODEL	GP2R	DATE	20101023
BLOCK	SIDE_JACK	SHEET	18 /



CI Region
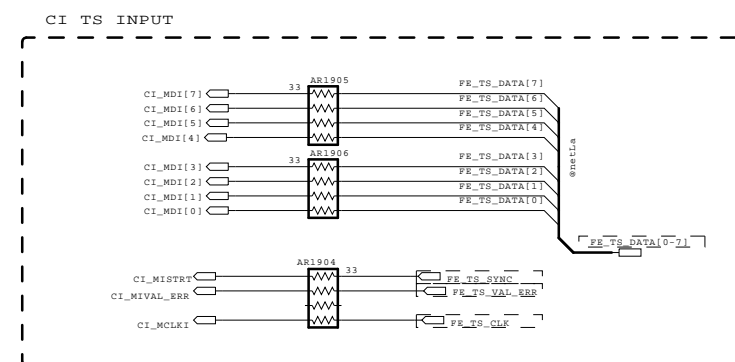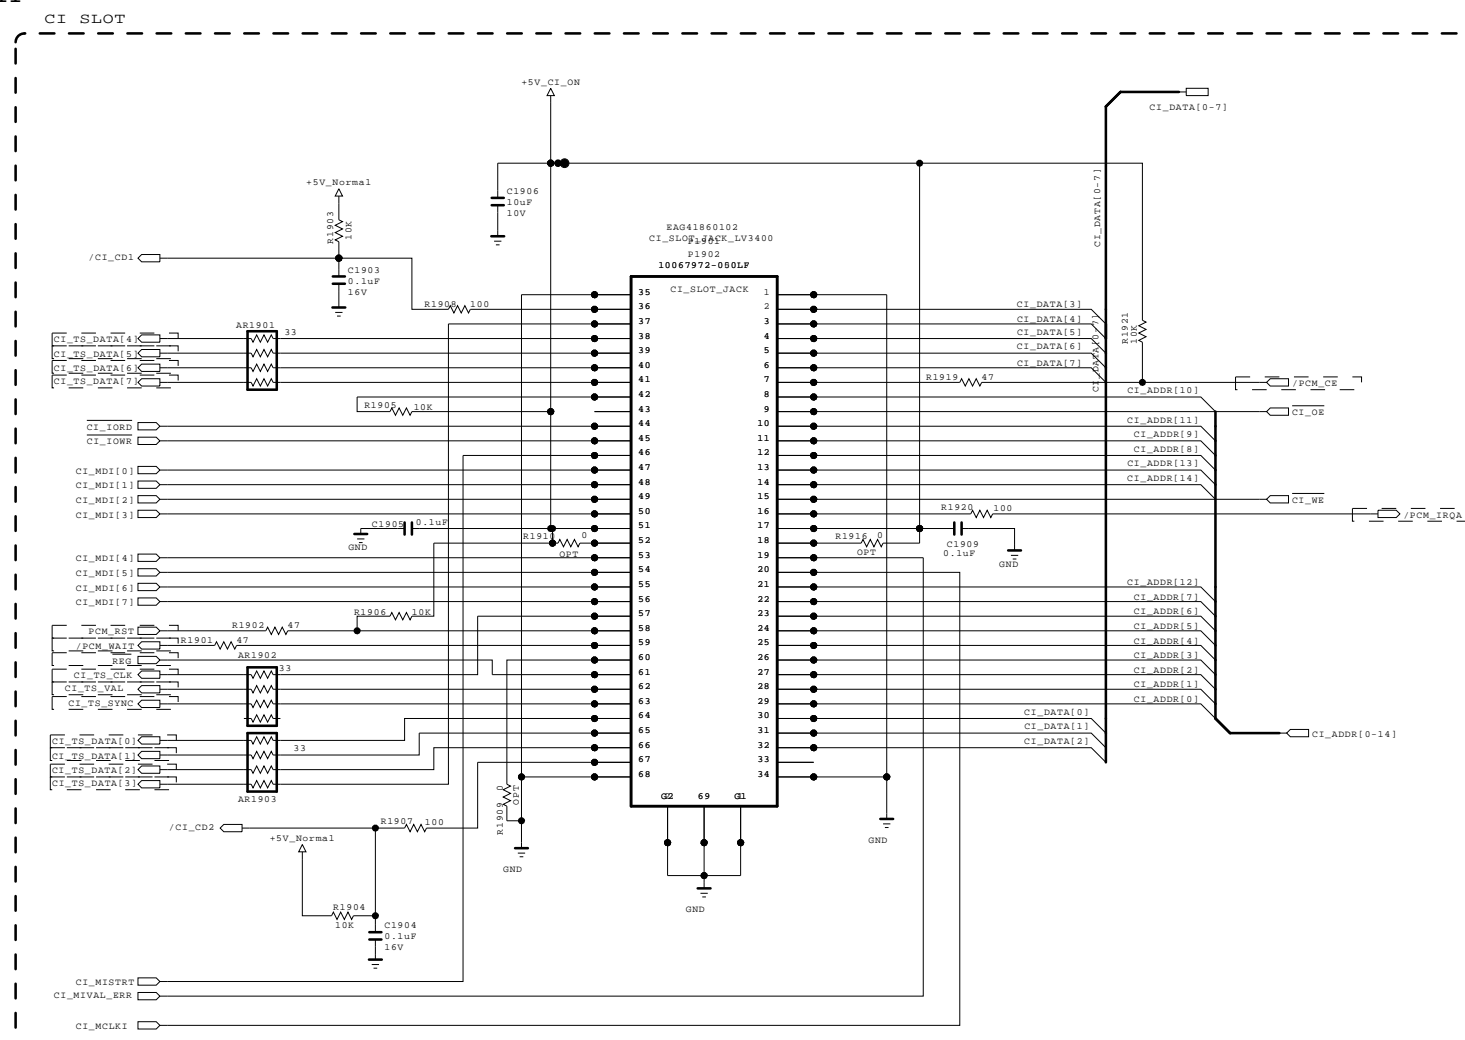
```
* Option name of this page : CI_SLOT
(because of Hong Kong)
```

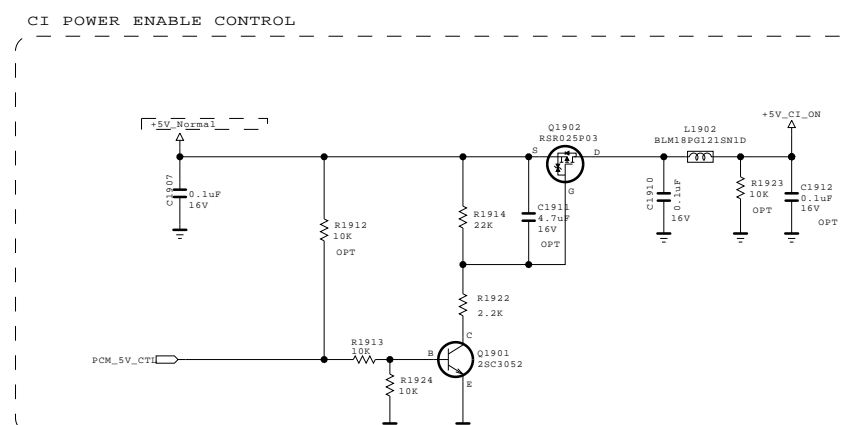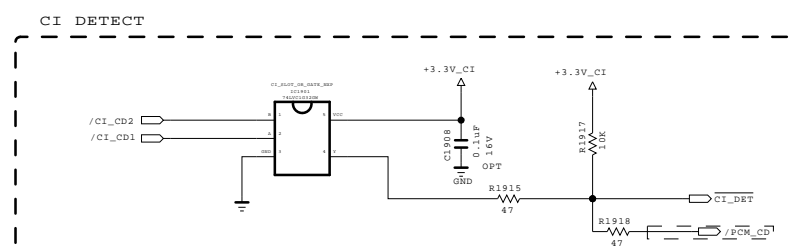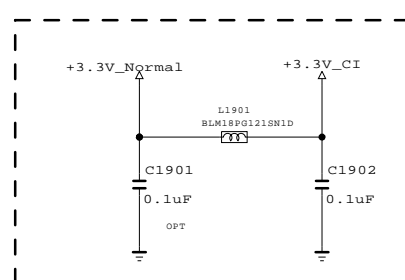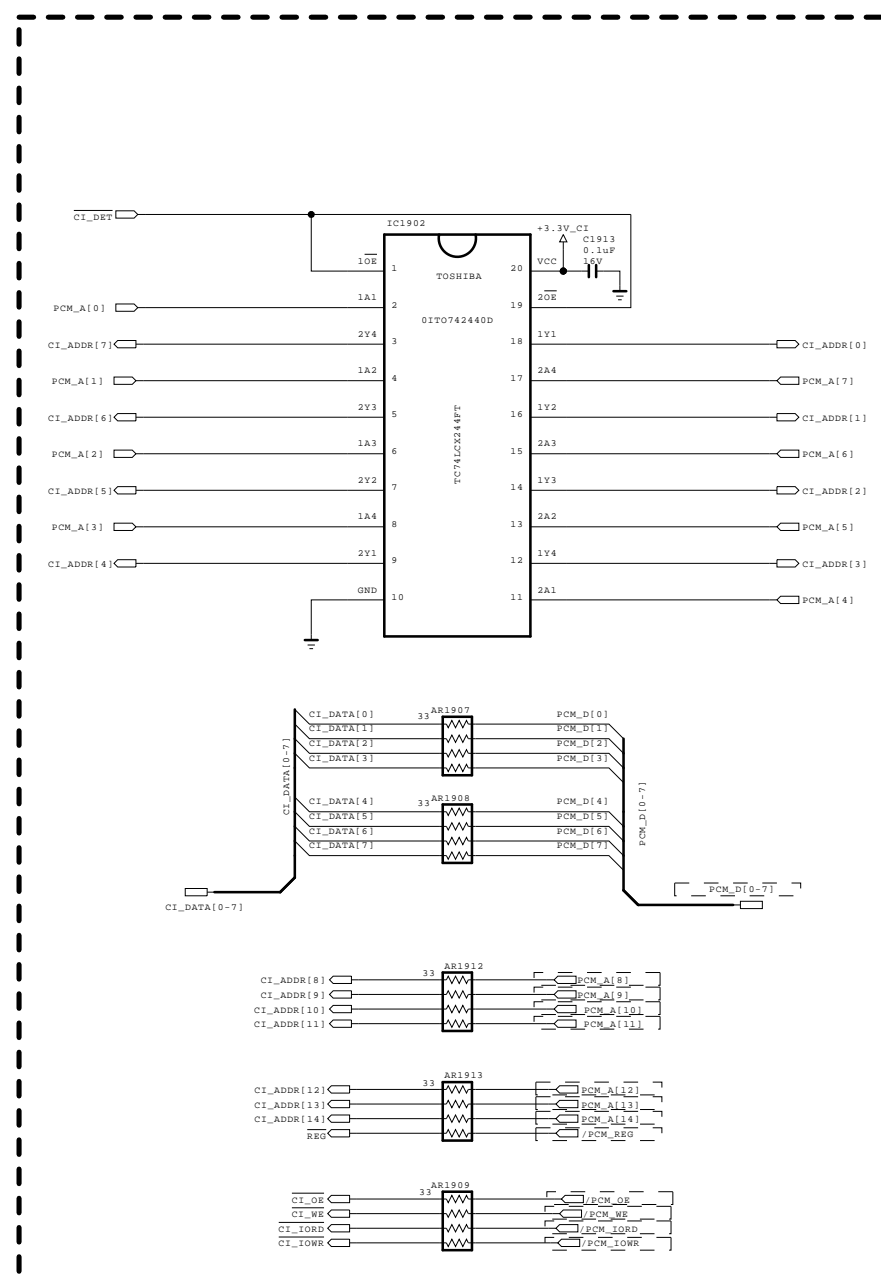

CI HOST I/F





THE  SYMBOL MARK OF THIS SCHEMATIC DIAGRAM INCORPORATES SPECIAL FEATURES IMPORTANT FOR PROTECTION FROM X-RADIATION. FILRE AND ELECTRICAL SHOCK HAZARDS, WHEN SERVICING IF IS ESSENTIAL THAT ONLY MANUFACTURES SPECIFIED PARTS BE USED FOR THE CRITICAL COMPONENTS IN THE  SYMBOL MARK OF THE SCHEMATIC.

SECRET
LGElectronics



MODEL	GP2R	DATE	20101023
FIGK	PCMC1	SHEET	20 /


THE  SYMBOL MARK OF THIS SCHEMETIC DIAGRAM INCORPORATES SPECIAL FEATURES IMPORTANT FOR PROTECTION FROM X-RADIATION. FILRE AND ELECTRICAL SHOCK HAZARDS, WHEN SERVICING IF IS ESSENTIAL THAT ONLY MANUFACTURES SPECIFIED PARTS BE USED FOR THE CRITICAL COMPONENTS IN THE  SYMBOL MARK OF THE SCHEMETIC.


SECRET
LGElectronics





MODEL	GP2R	DATE	20101023
BLOCK	SMD_GAS	SHEET	20 /

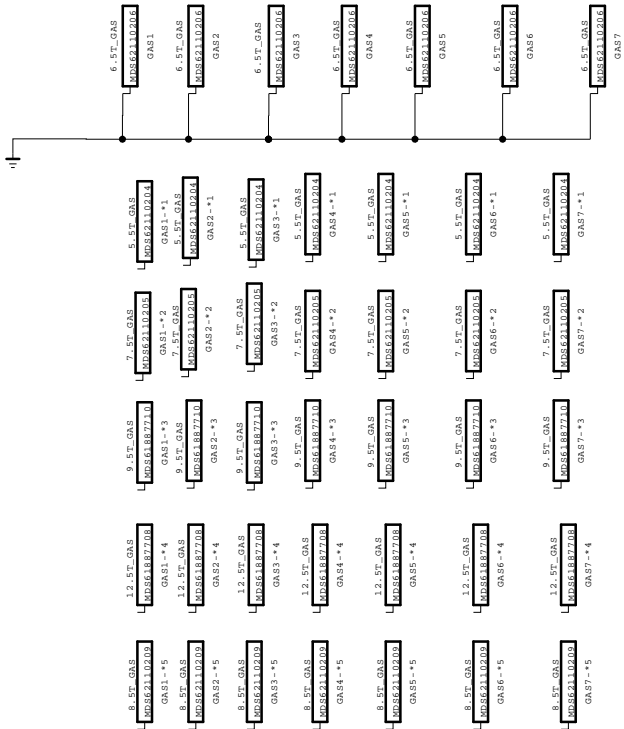SMD GASKET

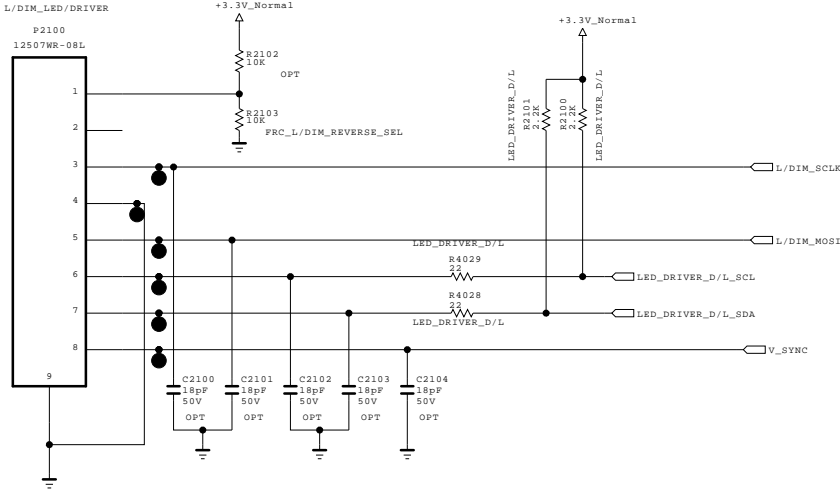



THE  SYMBOL MARK OF THIS SCHEMATIC DIAGRAM INCORPORATES SPECIAL FEATURES IMPORTANT FOR PROTECTION FROM X-RADIATION. FILRE AND ELECTRICAL SHOCK HAZARDS, WHEN SERVICING IF IS ESSENTIAL THAT ONLY MANUFACTURES SPECIFIED PARTS BE USED FOR THE CRITICAL COMPONENTS IN THE  SYMBOL MARK OF THE SCHEMATIC.

SECRET
LGElectronics



MODEL	GP2R	DATE	20101023
BLOCK	L/DIM_LED	SHEET	21 /

DC DC CONVERTER +12V (For External power)

DC DC CONVERTER +12V
(For External power)

PSU
R2202
100k

Switching noise reducing [MPS recommend]

C2203 50V 0.1uF

IC2200 MP44850G-LF-S

PSU
R2201 100k 50V

MPSA340T3G close to pin

PSU
R2200 100k

PSU
R2204 220k 1/8W 1k

PSU
C2200 150pF 50V

PSU
C2204 22uF 25V

PSU
C2207 0.1uF 50V

PSU
C2208 3.3uF 50V

PSU
C2210 0.1uF 50V

PSU
R2211 1/16W 1k

PSU
R2212 1/16W 1k

+24V

+12V

PSU
R2201 100k 50V

PSU
R2202 100k

PSU
R2204 220k 1/8W 1k

PSU
C2200 150pF 50V

PSU
C2204 22uF 25V

PSU
C2207 0.1uF 50V

PSU
C2208 3.3uF 50V


PSU
C2210 0.1uF 50V

PSU
R2211 1/16W 1k

PSU
R2212 1/16W 1k

+24V

+12V

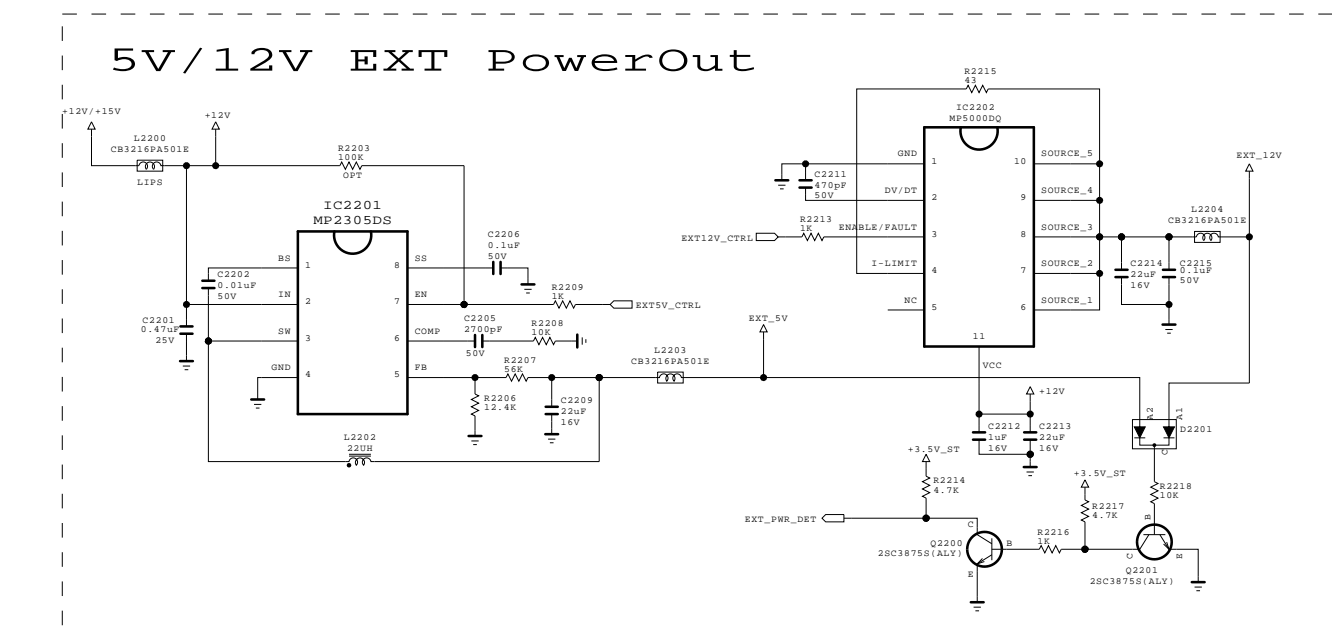

REAL TIME CLOCK

The diagram shows the following components and connections:

- IC2204 (M41T61):** The Real Time Clock chip.
- Power Supply:** +3.5V_ST.
- Crystal:** 32.768 kHz.
- Battery:** M2200 BATTERY.
- Resistors:** R2216 (2pF), R2217 (2pF), R2221 (1k), R2225 (22k), R2226 (22k), R2227 (4.7k).
- Capacitors:** C2216 (2pF), C2217 (2pF), C2219 (0.1uF).
- Connections:**
 - Pin 1 (X1) to VCC.
 - Pin 2 (X0) to VCC.
 - Pin 3 (VBAT) to VBAT.
 - Pin 4 (VSS) to VSS.
 - Pin 6 (SCL) to SCL.
 - Pin 5 (SDA) to SDA.
 - Pin 7 (IRQ/FT/OUT/SQW) to RTC_INT.

SECRET
LGElectronics






1. Trouble Shooting

Contents of LCD TV Standard Repair Process

No.	Error symptom (High category)	Error symptom (Mid category)	Page	Remarks
1	A. Video error	No video/Normal audio	1	
2		No video/No audio	2	
3		Video error, video lag/stop	3	
4		Color error	4	
5		Vertical/Horizontal bar, residual image, light spot, external device color error	5	
6	B. Power error	No power	6	
7		Off when on, off while viewing, power auto on/off	7	
8	C. Audio error	No audio/Normal video	8	
9		Wrecked audio/discontinuation/noise	9	
10	D. Function error	No response in remote controller, key error, recording error, memory error	10	
11		External device recognition error	11	
12	E. Noise	Circuit noise, mechanical noise	12	
13	F. Exterior error	Exterior defect	13	

LCD TV	Error symptom	A. Video error	Established date		
		No video/ Normal audio	Revised date		1/13

**First of all, Check whether all of cables between board is inserted properly or not.
(Main B/D ↔ Power B/D, LVDS Cable, Speaker Cable, IR B/D Cable,,)**

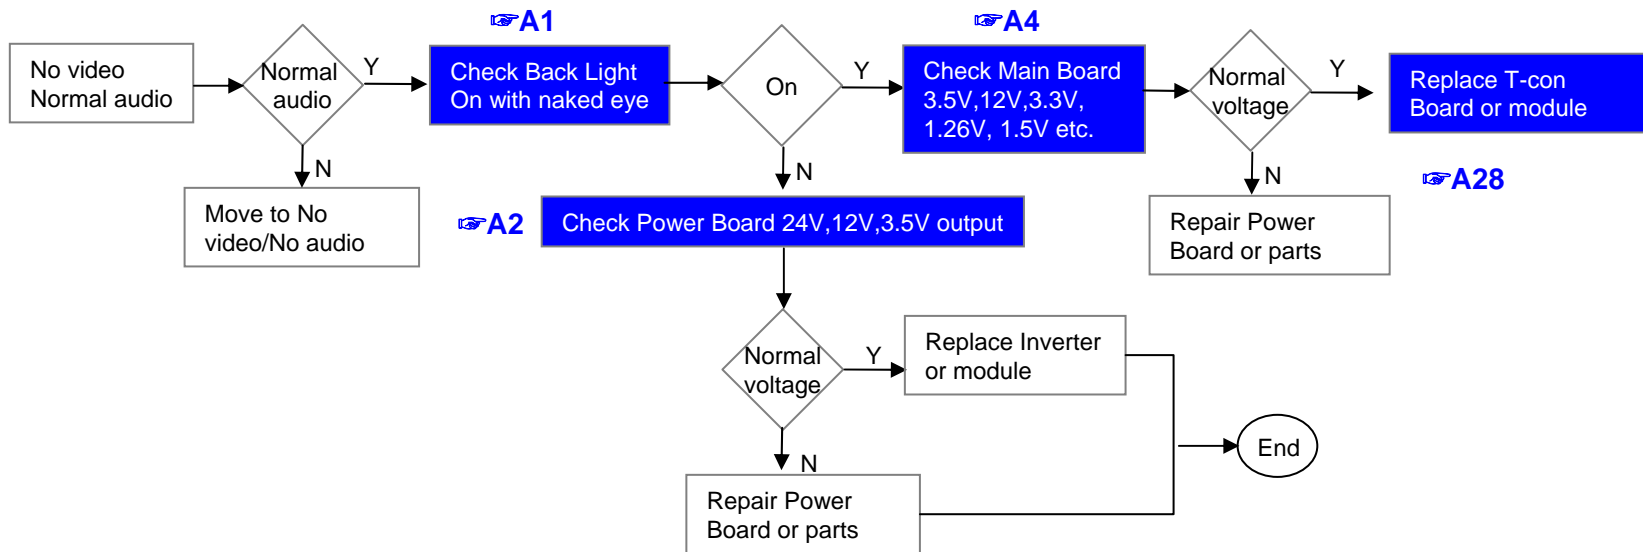


※ Precaution A7 & A3

Always check & record S/W Version and White Balance value before replacing the Main Board

Replace Main Board

Re-enter White Balance value


LCD TV	Error symptom	A. Video error	Established date		
		No video/ No audio	Revised date		2/13

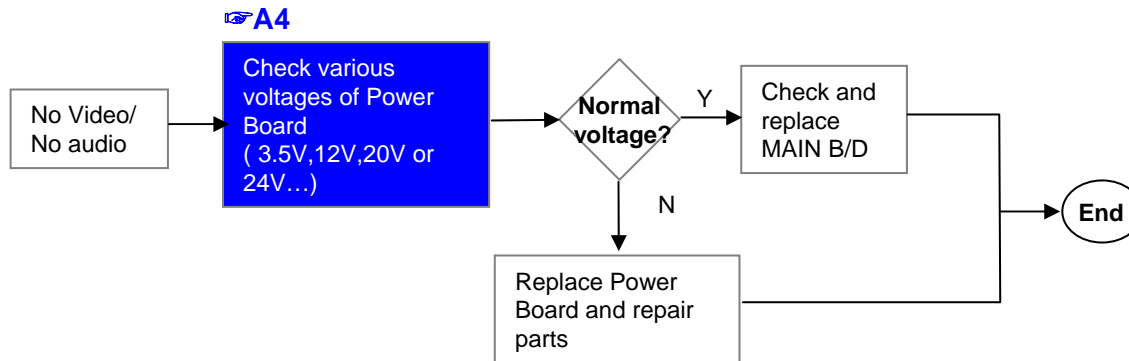


LCD TV	Error symptom	A. Picture Problem	Established date		
		Picture broken/ Freezing	Revised date		3/13

Check RF Signal level

- . By using Digital signal level meter
- . By using Diagnostics menu on OSD
(Menu→Setup→Manual Tuning)
- Signal strength (Normal : over 30%)
- Signal Quality (Normal: over 30%)

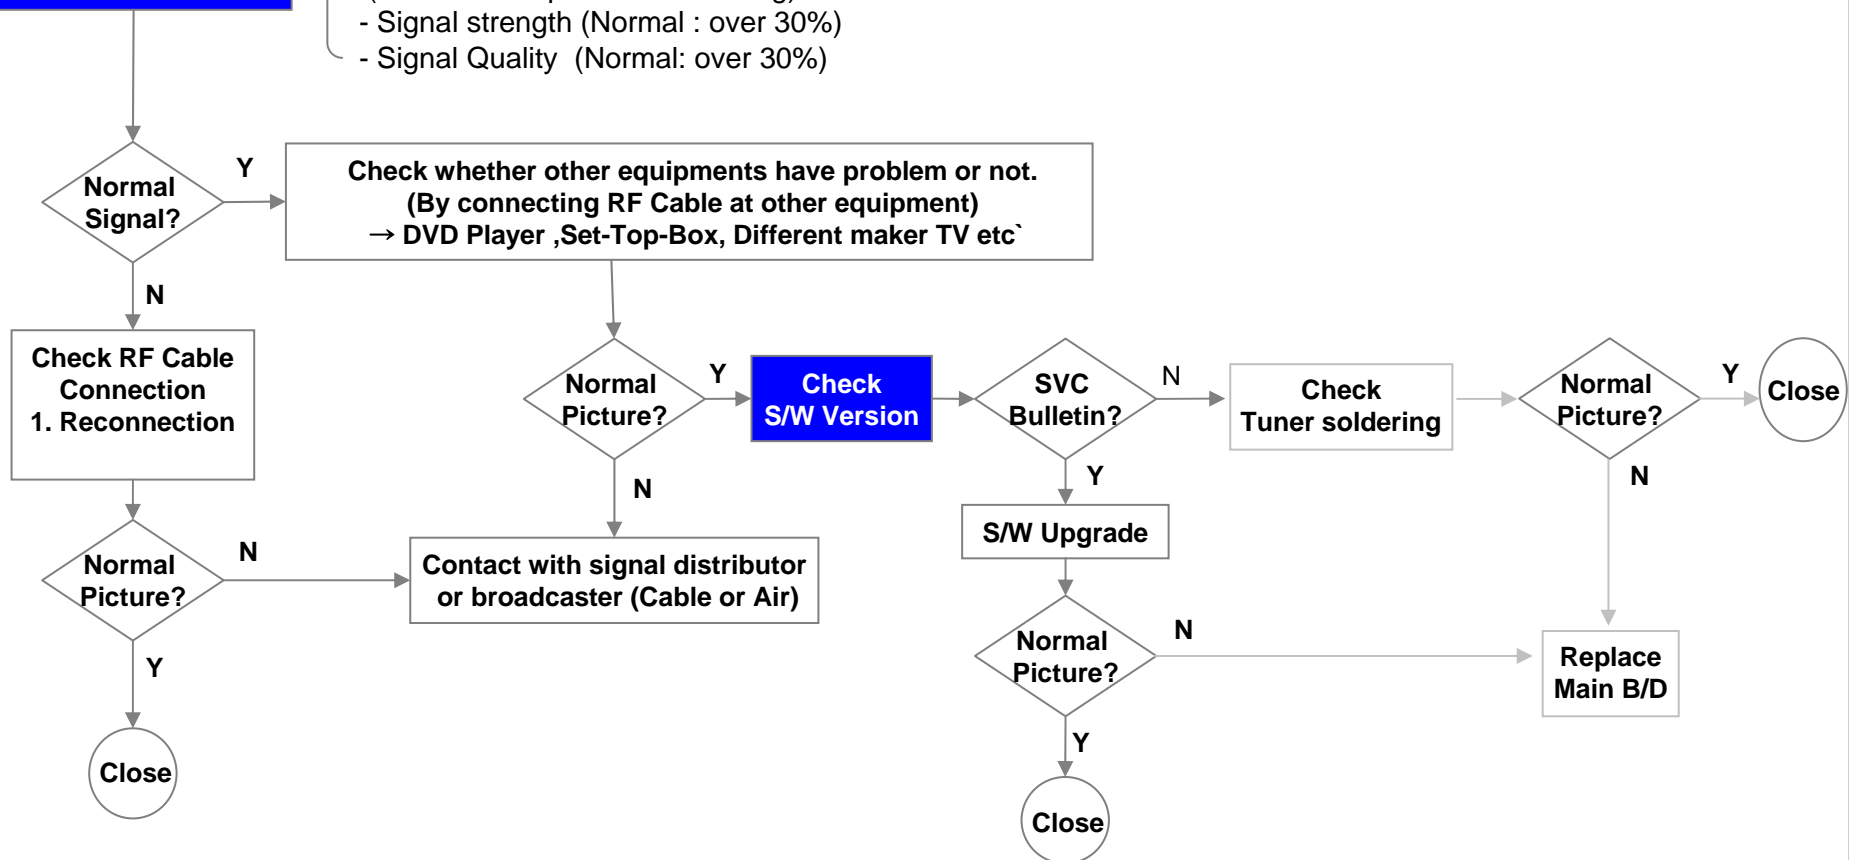


LCD TV	Error symptom	A. Video error	Established date		
		Color error	Revised date		4/13

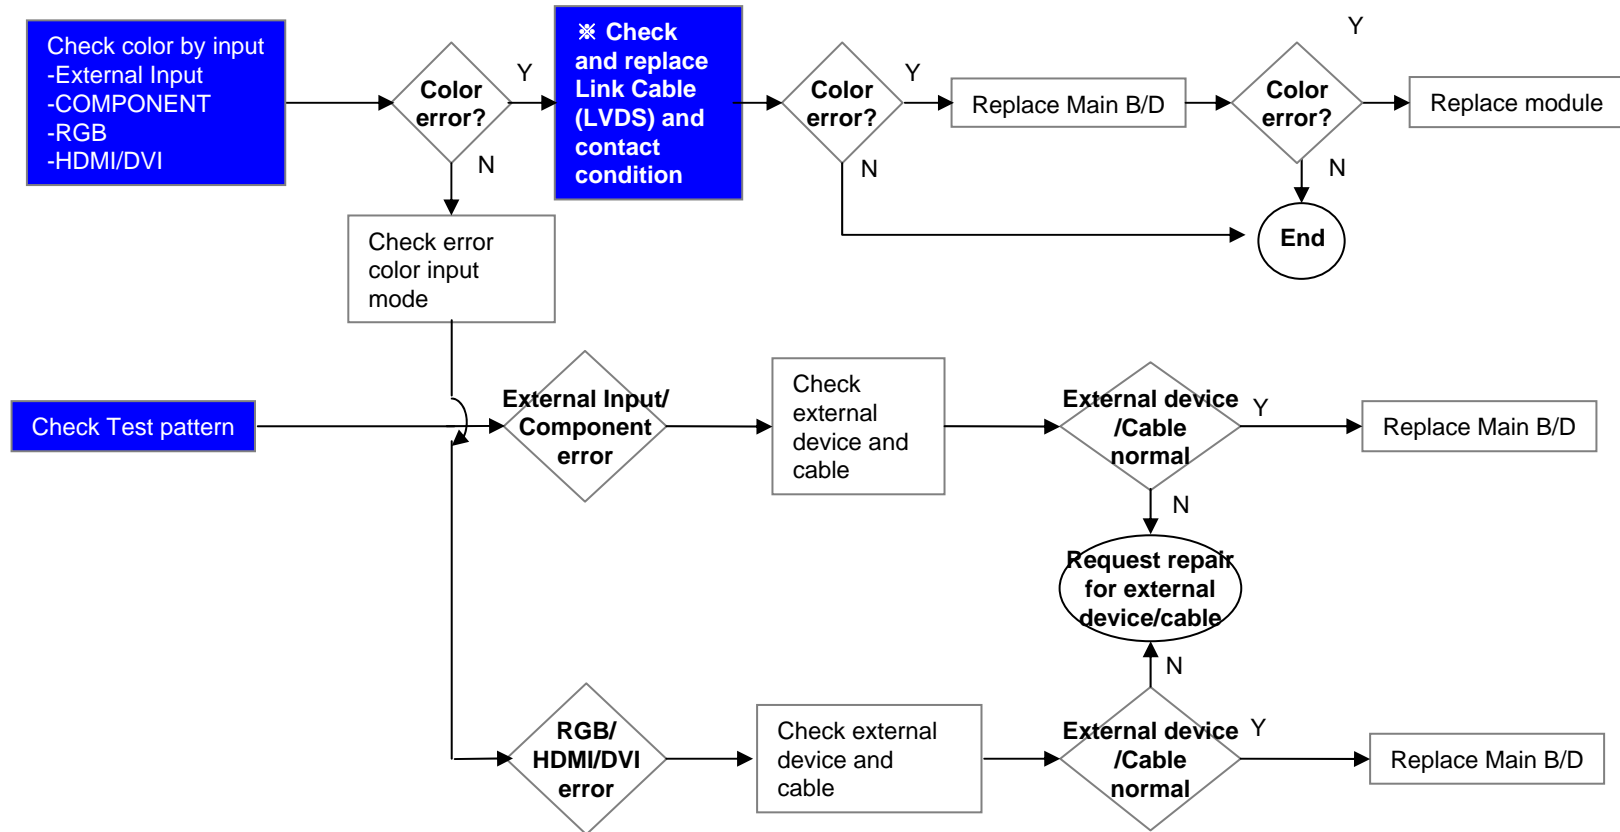


LCD TV	Error symptom	A. Video error	Established date		
		Vertical / Horizontal bar, residual image, light spot, external device color error	Revised date		5/13


Vertical/Horizontal bar, residual image, light spot

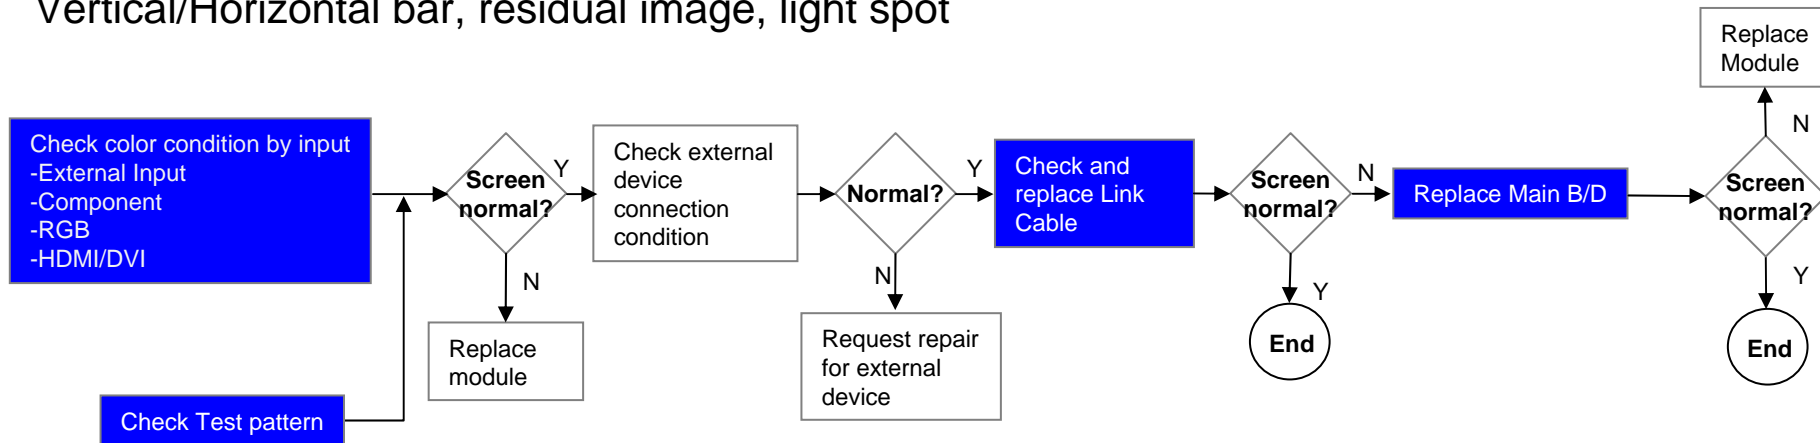


External device screen error-Color error

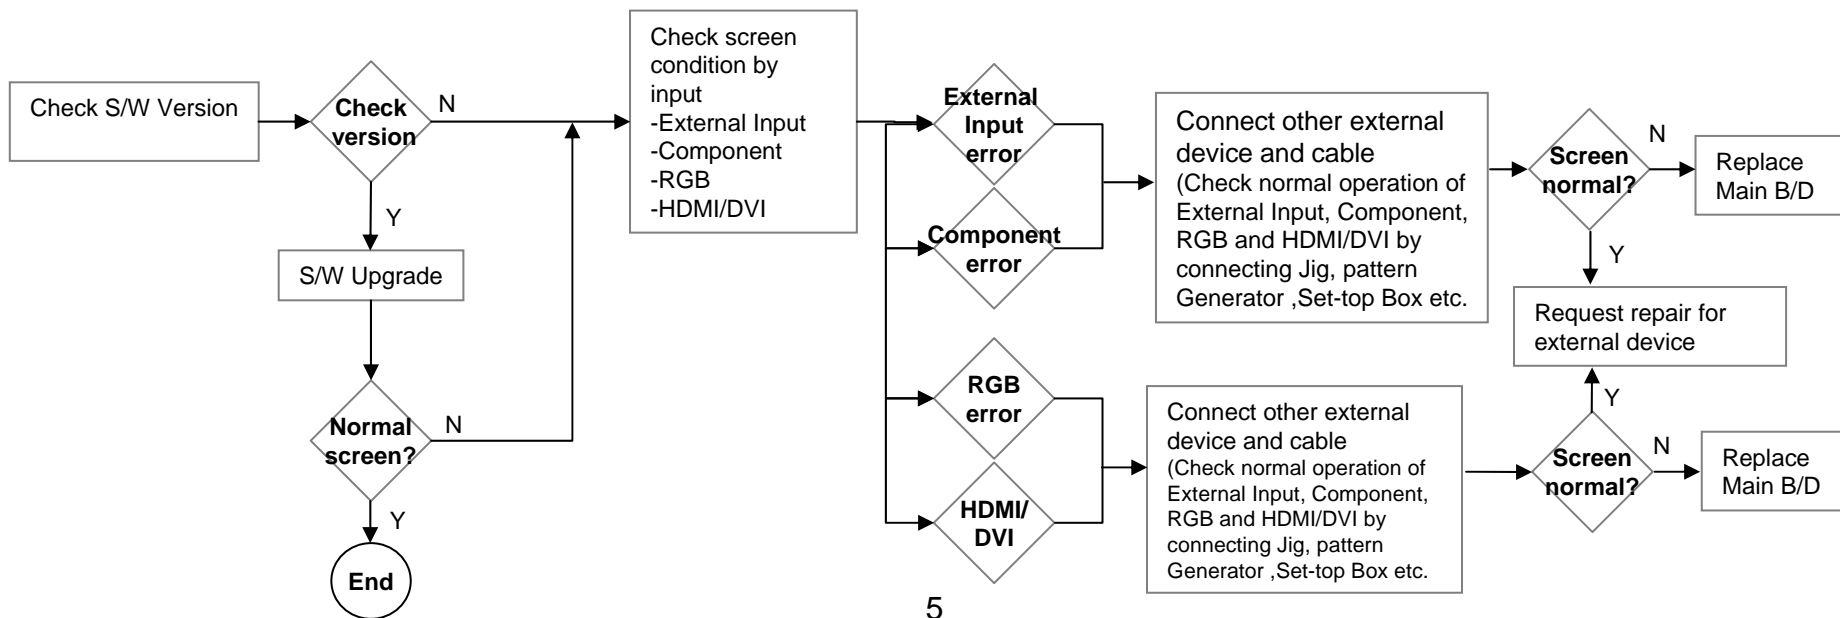

LCD TV	Error symptom	B. Power error	Established date		
		No power	Revised date		6/13

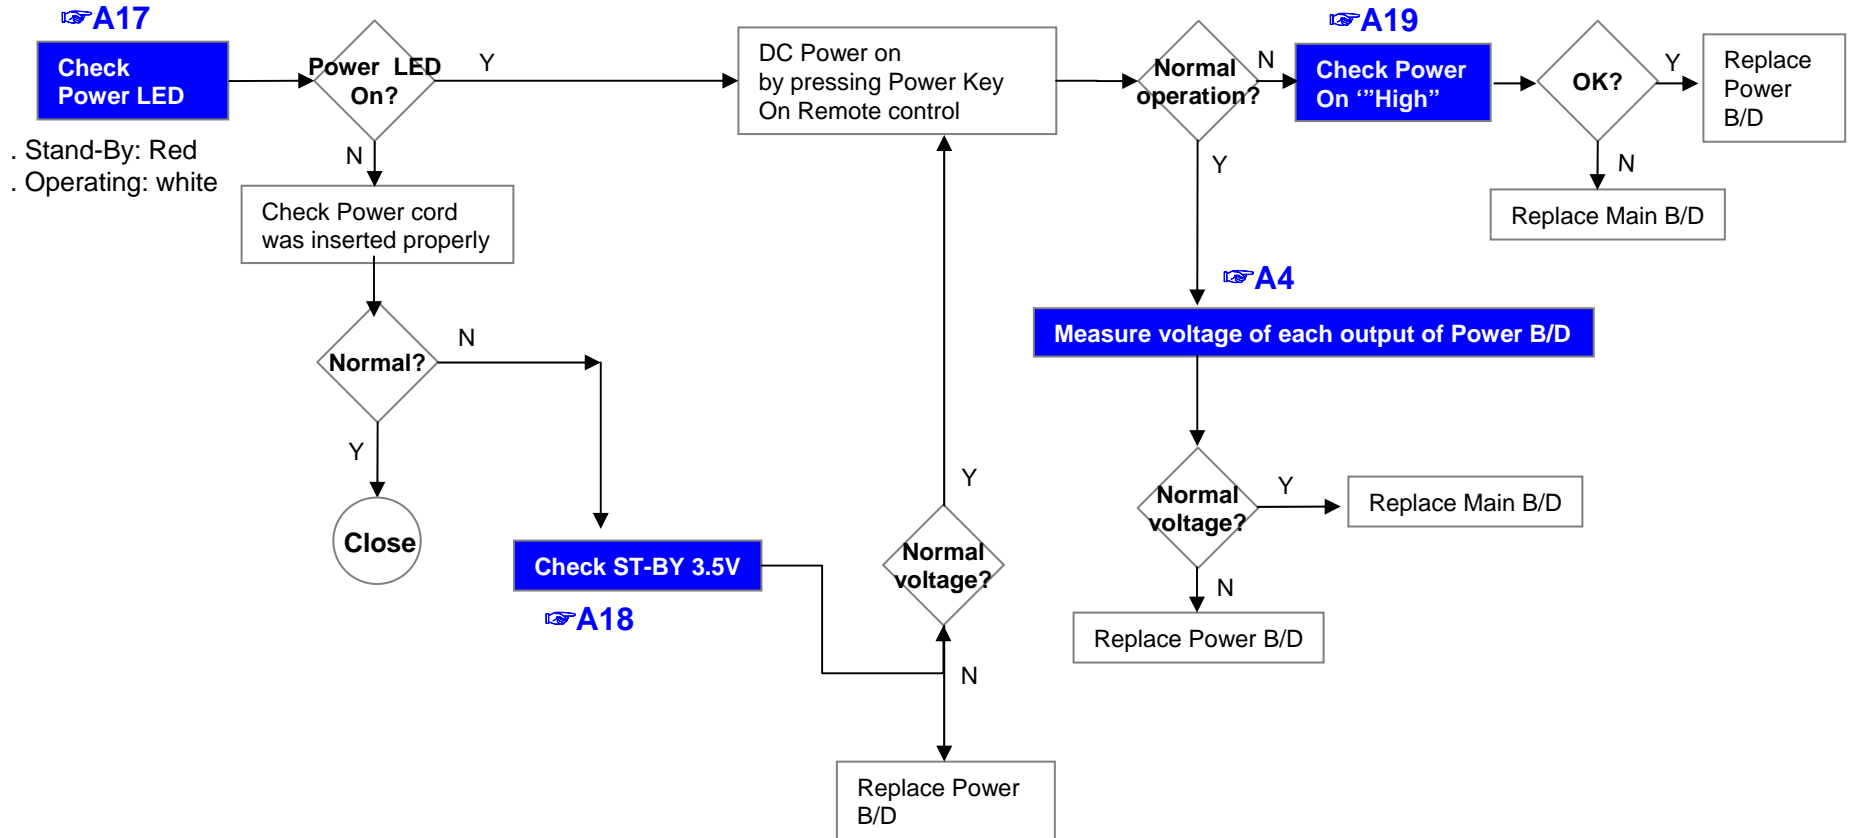


LCD TV	Error symptom	B. Power error	Established date		
		Off when on, off while viewing, power auto on/off	Revised date		7/13

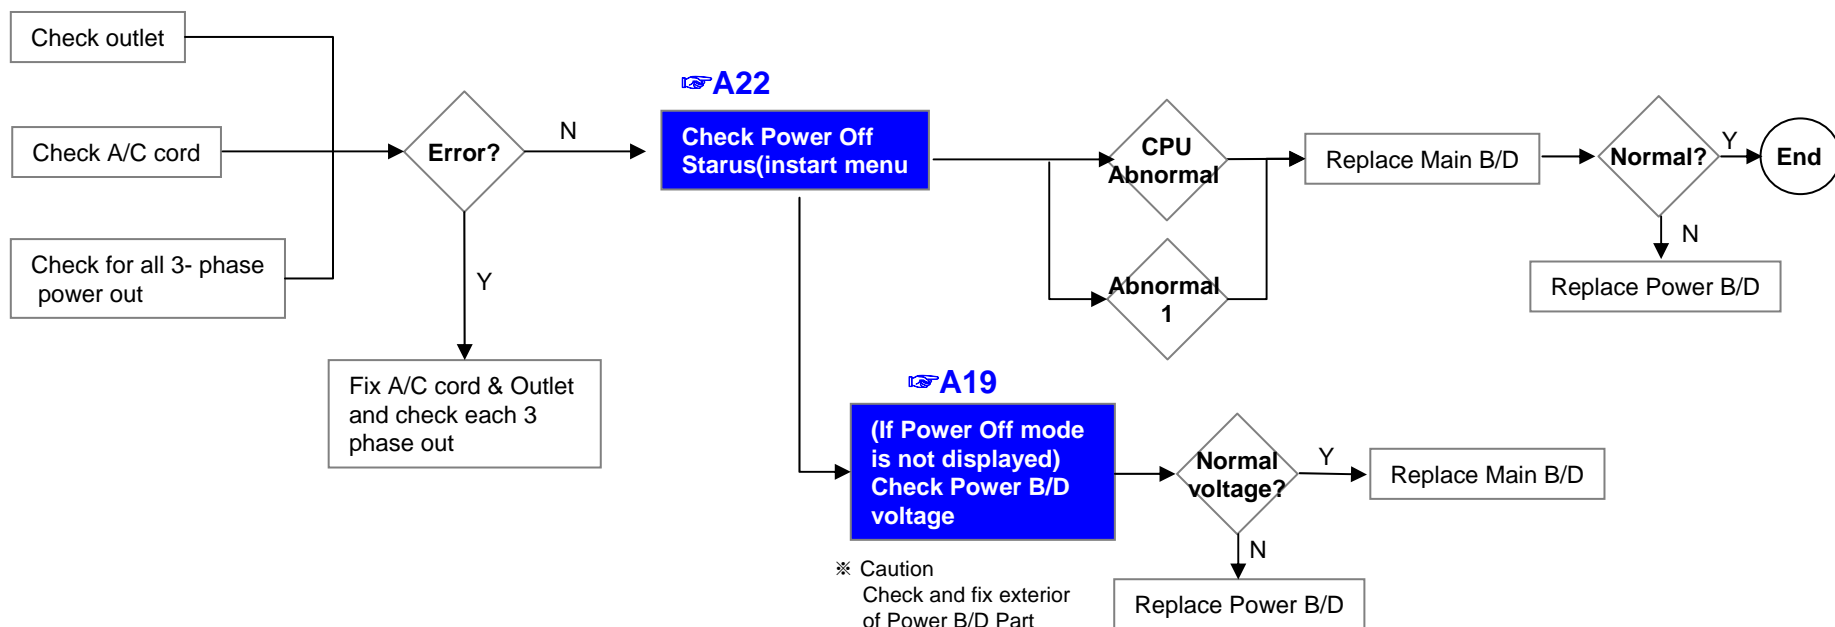

* Please refer to the all cases which can be displayed on power off mode.


Status	Power off List	Explanation
Normal	"POWEROFF_REMOTEKEY"	Power off by REMOTE CONTROL
	"POWEROFF_OFFTIMER"	Power off by OFF TIMER
	"POWEROFF_SLEEPTIMER"	Power off by SLEEP TIMER
	"POWEROFF_INSTOP"	Power off by INSTOP KEY
	"POWEROFF_AUTOOFF"	Power off by AUTO OFF
	"POWEROFF_ONTIMER"	Power off by ON TIMER
	"POWEROFF_RS232C"	Power off by RS232C
	"POWEROFF_RESREC"	Power off by Reserved Record
	"POWEROFF_RECEND"	Power off by End of Recording
	"POWEROFF_SWDOWN"	Power off by S/W Download
Abnormal	"POWEROFF_UNKNOWN"	Power off by unknown status except listed case
	"POWEROFF_ABNORMAL1"	Power off by abnormal status except CPU trouble
	"POWEROFF_CPUABNORMAL"	Power off by CPU Abnormal

LCD TV	Error symptom	C. Audio error	Established date		
		No audio/ Normal video	Revised date		8/13

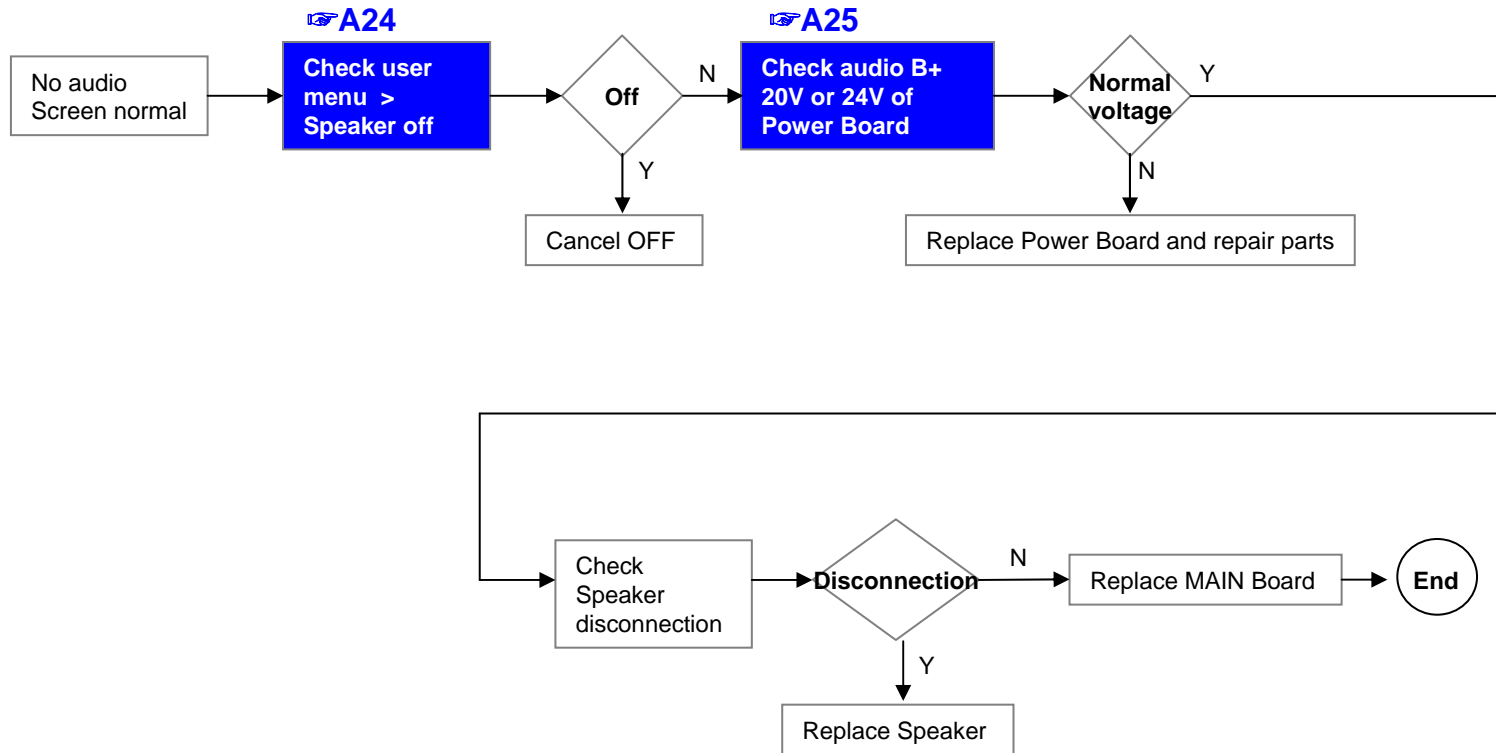


LCD TV	Error symptom	C. Audio error	Established date		
		Wrecked audio/ discontinuation/noise	Revised date		9/13

→ abnormal audio/discontinuation/noise is same after “Check input signal” compared to No audio

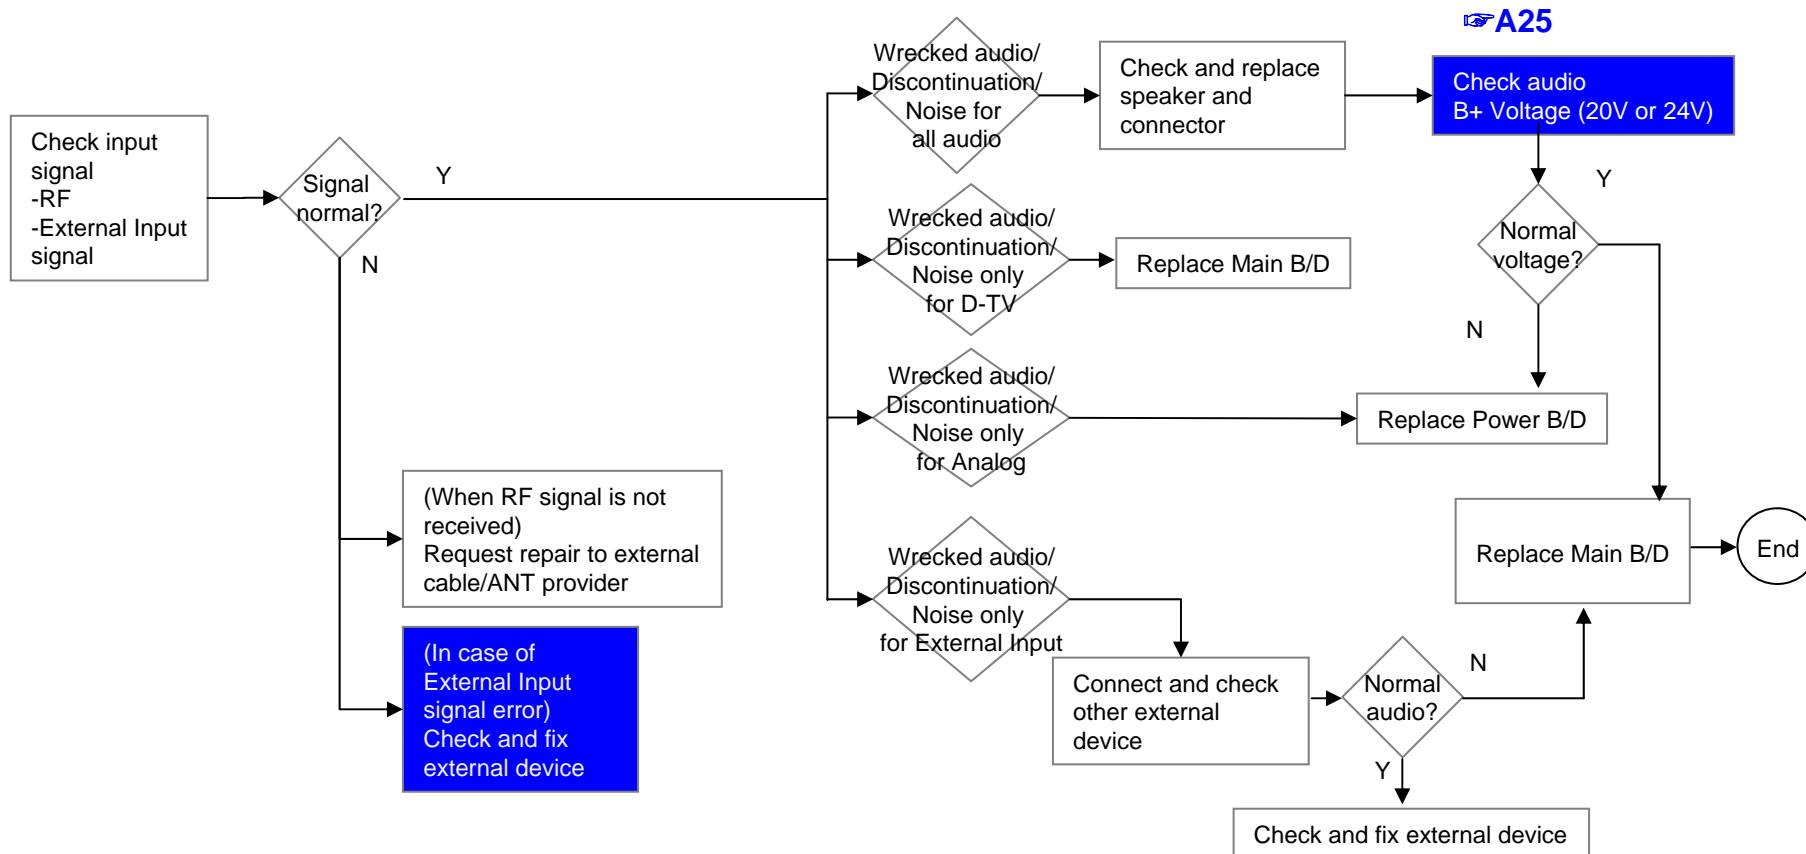


LCD TV	Error symptom	D. General Function Problem	Established date		
		Remote control & Local switch checking	Revised date		10/13


1. Remote control(R/C) operating error

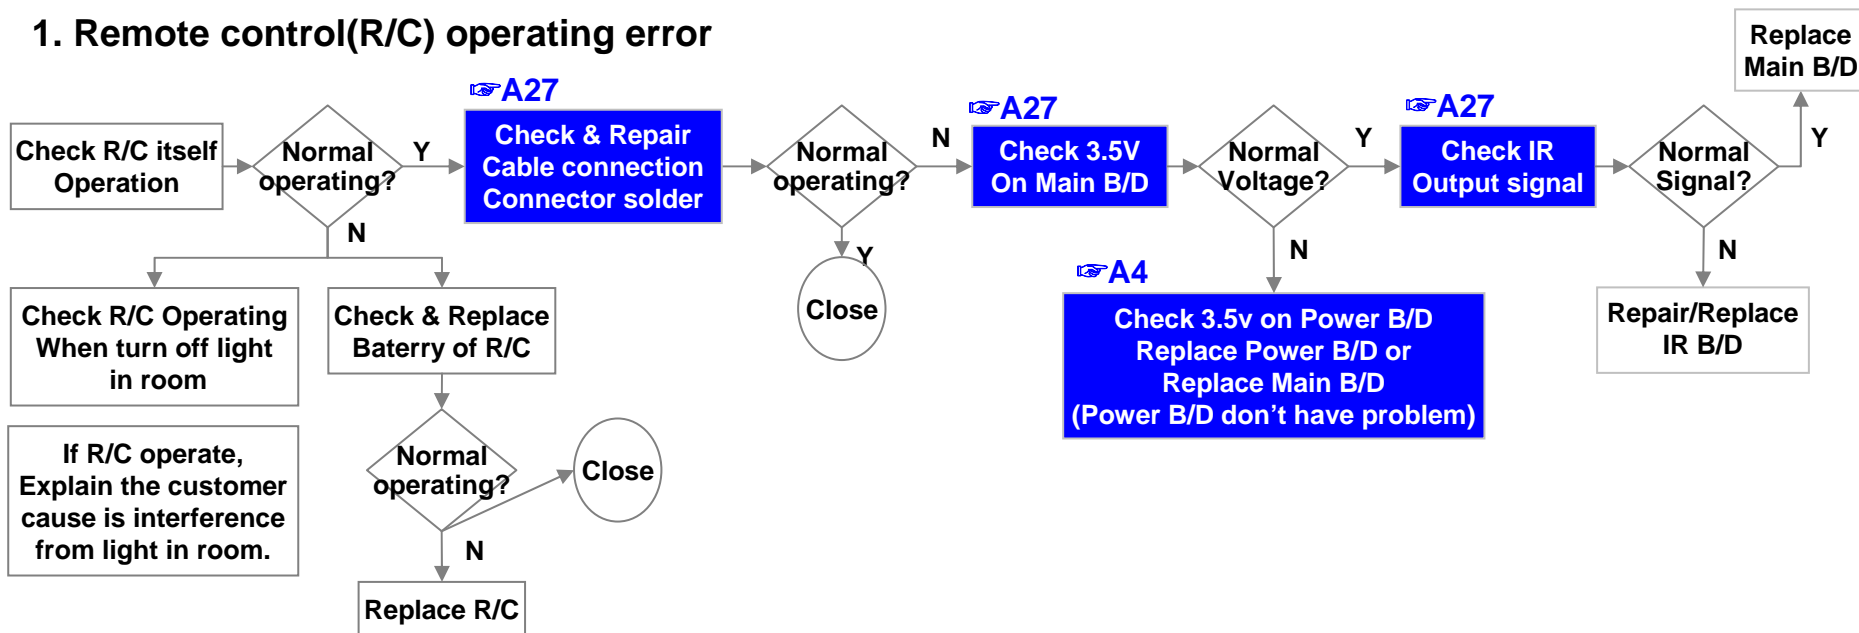


LCD TV	Error symptom	D. Function error	Established date		
		External device recognition error	Revised date		11/13

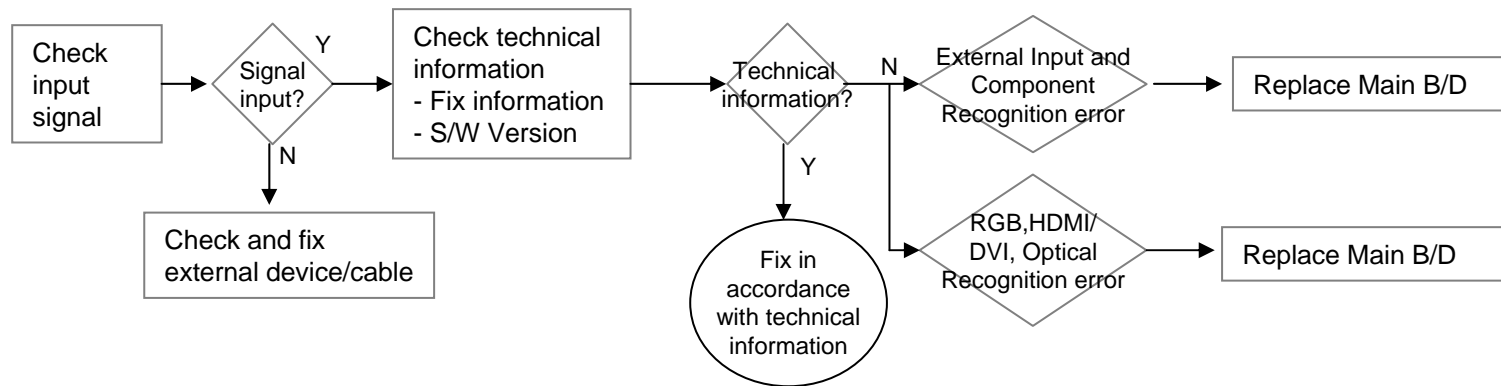

LCD TV	Error symptom	E. Noise	Established date		
		Circuit noise, mechanical noise	Revised date		12/13

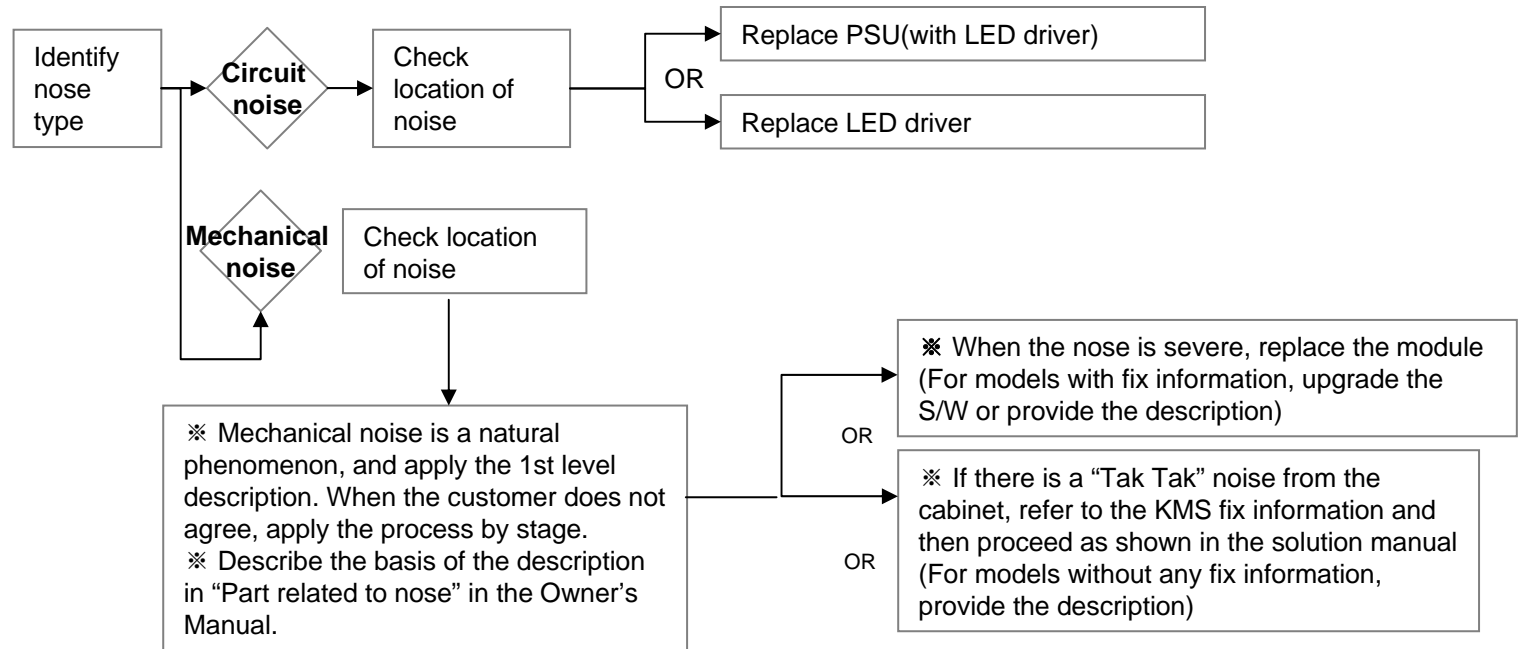


LCD TV	Error symptom	F. Exterior defect	Established date		
		Exterior defect	Revised date		13/13

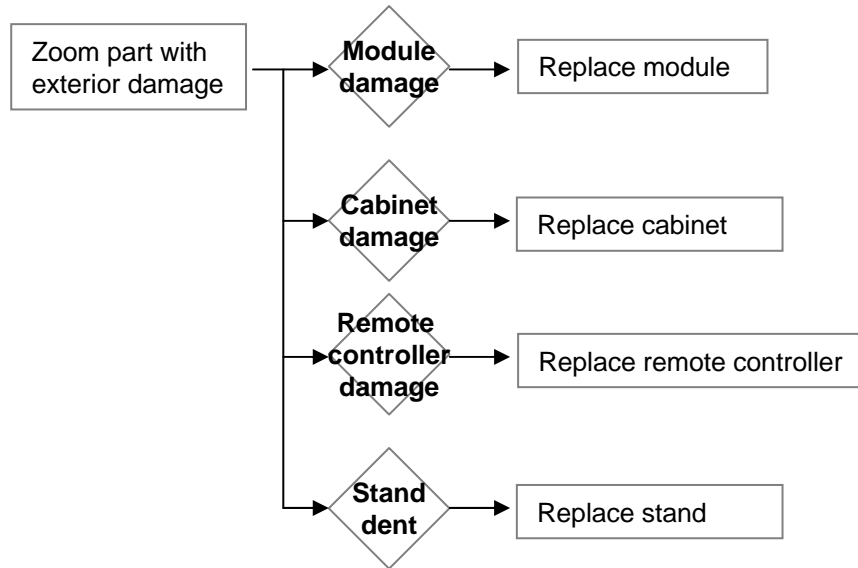


Standard Repair Process Detail Technical Manual

LCD TV	Error symptom	A. Video error_Video error, video lag/stop	Established date		
	Content	TUNER input signal strength checking method	Revised date		A6

<ALL MODELS>

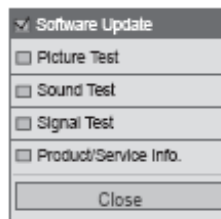

MENU → red key(customer support → signal test
→ select channel

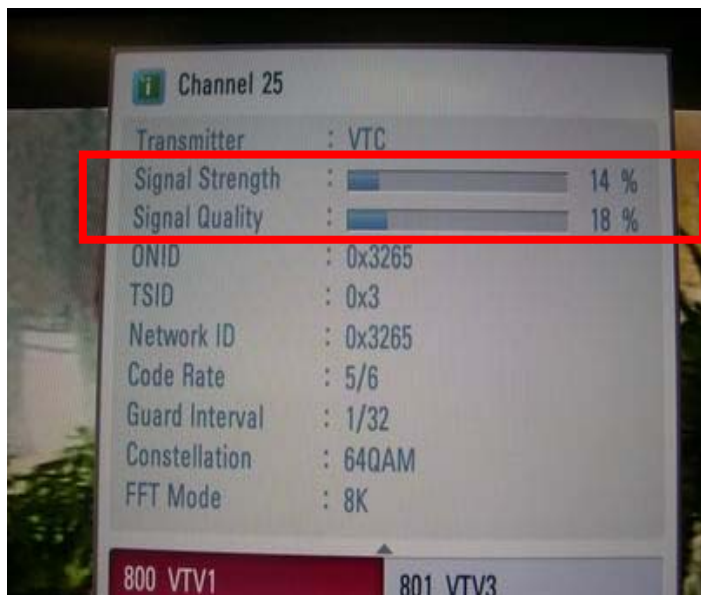

When the signal is strong, use the attenuator (-10dB, -15dB, -20dB etc.)



Standard Repair Process Detail Technical Manual

LCD TV	Error symptom	A. Video error_Video error, video lag/stop	Established date		
	Content	LCD-TV Version checking method	Revised date		A7

<ALL MODELS>

1. Checking method for remote controller for adjustment

Version






Press the IN-START with the remote controller for adjustment

A7

Standard Repair Process Detail Technical Manual

LCD TV	Error symptom	A. Video error_Color error	Established date		
	Content	Adjustment Test pattern - ADJ Key	Revised date		A12

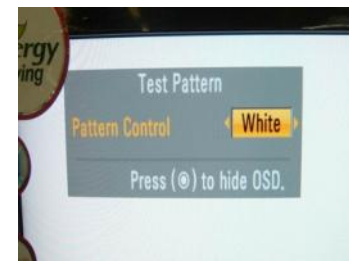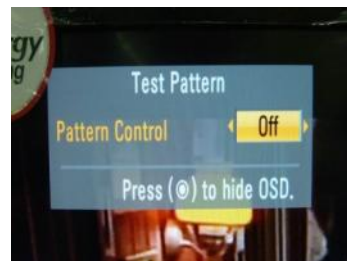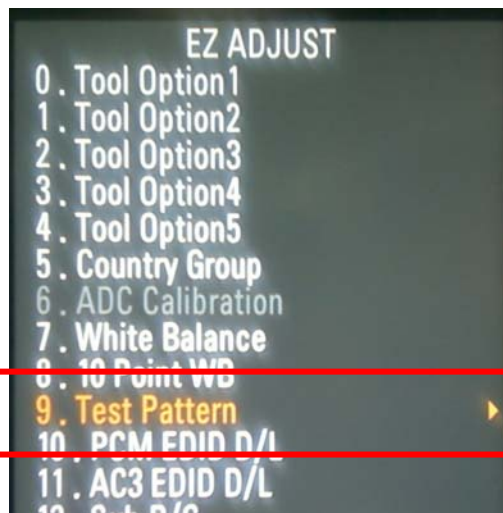

You can view 6 types of patterns using the ADJ Key


Checking item : 1. Defective pixel 2. Residual image 3. MODULE error (ADD-BAR,SCAN BAR..) 4.Video error (Classification of MODULE or Main-B/D!)

A12


Appendix : Exchange T-Con Board (1)



Solder defect, CNT Broken

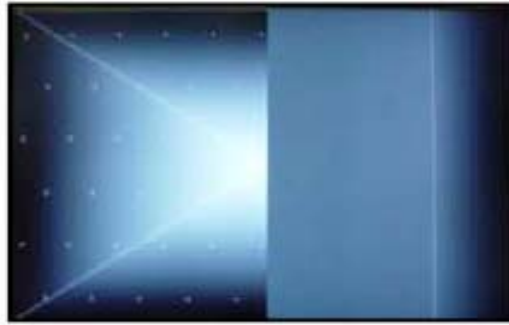


Solder defect, CNT Broken

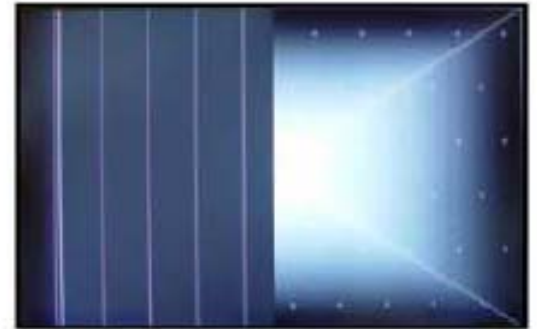

Solder defect, CNT Broken




Solder defect, CNT Broken

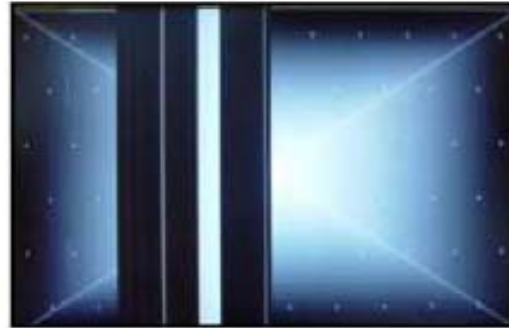

Solder defect, CNT Broken



Abnormal Power Section

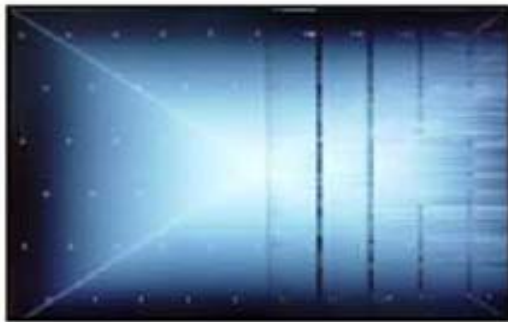

Solder defect, Short/Crack



Abnormal Power Section



Solder defect, Short/Crack

Appendix : Exchange T-Con Board (2)



Abnormal Power Section



Abnormal Power Section



Solder defect, Short/Crack



Solder defect, Short/Crack



Fuse Open, Abnormal power section



Abnormal Display



GRADATION



Noise



GRADATION

Appendix : Exchange PSU(LED driver)




No Light



Dim Light



Dim Light

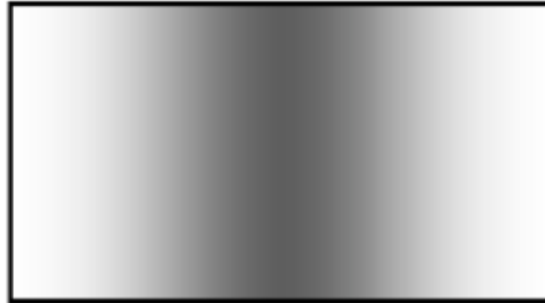

Dim Light



No picture/Sound Ok

Appendix : Exchange the Module (1)




Panel Mura, Light leakage



Panel Mura, Light leakage



Press damage

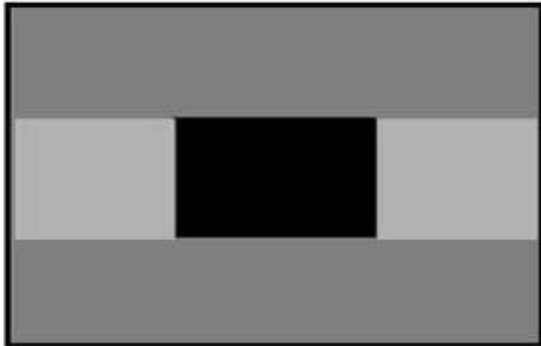

Crosstalk



Press damage



Crosstalk




Press damage

Un-repairable Cases

In this case please exchange the module.

Appendix : Exchange the Module (2)

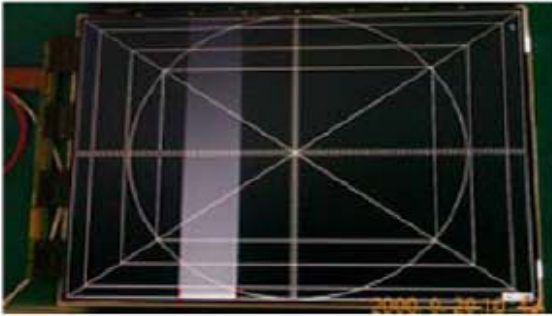

Vertical Block
Source TAB IC Defect



Vertical Line
Source TAB IC Defect




Vertical Block
Source TAB IC Defect



Horizontal Block
Gate TAB IC Defect



Horizontal Block
Gate TAB IC Defect

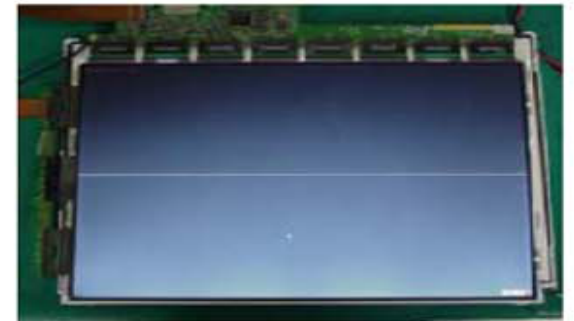

Horizontal line
Gate TAB IC Defect



Horizontal Block
Gate TAB IC Defect


Un-repairable Cases

In this case please exchange the module.

Standard Repair Process Detail Technical Manual

LCD TV	Error symptom	B. Power error _Off when on, off whiling viewing	Established date		
	Content	POWER OFF MODE checking method	Revised date		A22

<ALL MODELS>

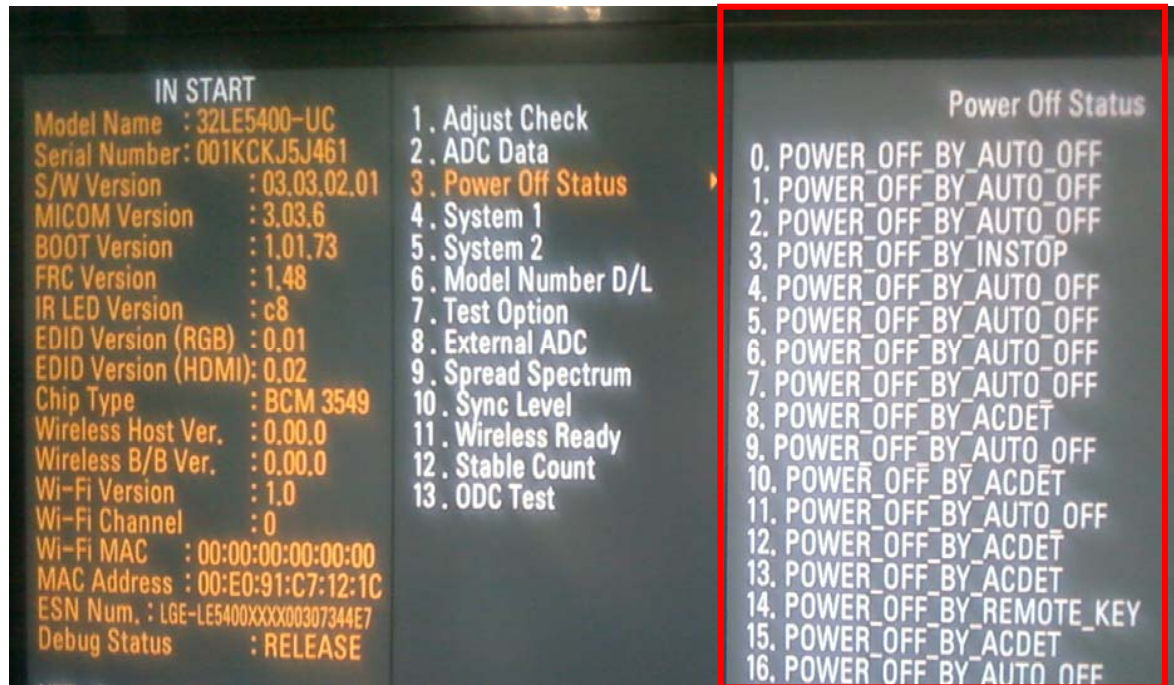

Entry method

1. Press the IN-START button of the remote controller for adjustment
2. Check the entry into adjustment item 3

Standard Repair Process Detail Technical Manual

LCD TV	Error symptom	C. Audio error_No audio/Normal video	Established date		
	Content	Checking method in menu when there is no audio	Revised date		A24

<ALL MODELS>



Checking method

1. Press the MENU button on the remote controller
2. Select the AUDIO function of the Menu
3. Select TV Speaker from Off to On